




# SERVICE PARTS LIST

**BULLETIN NO.**  
**55-06-8000**

<b>SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS</b>		REVISED BULLETIN	DATE
<b>13mm DRILL with SPINDLE LOCK-110V</b>			Aug. 2002
CATALOG NO. <b>0302-55</b>	STARTING SERIAL NO. <b>A03A</b>	WIRING INSTRUCTION <b>58-03-1805</b>	

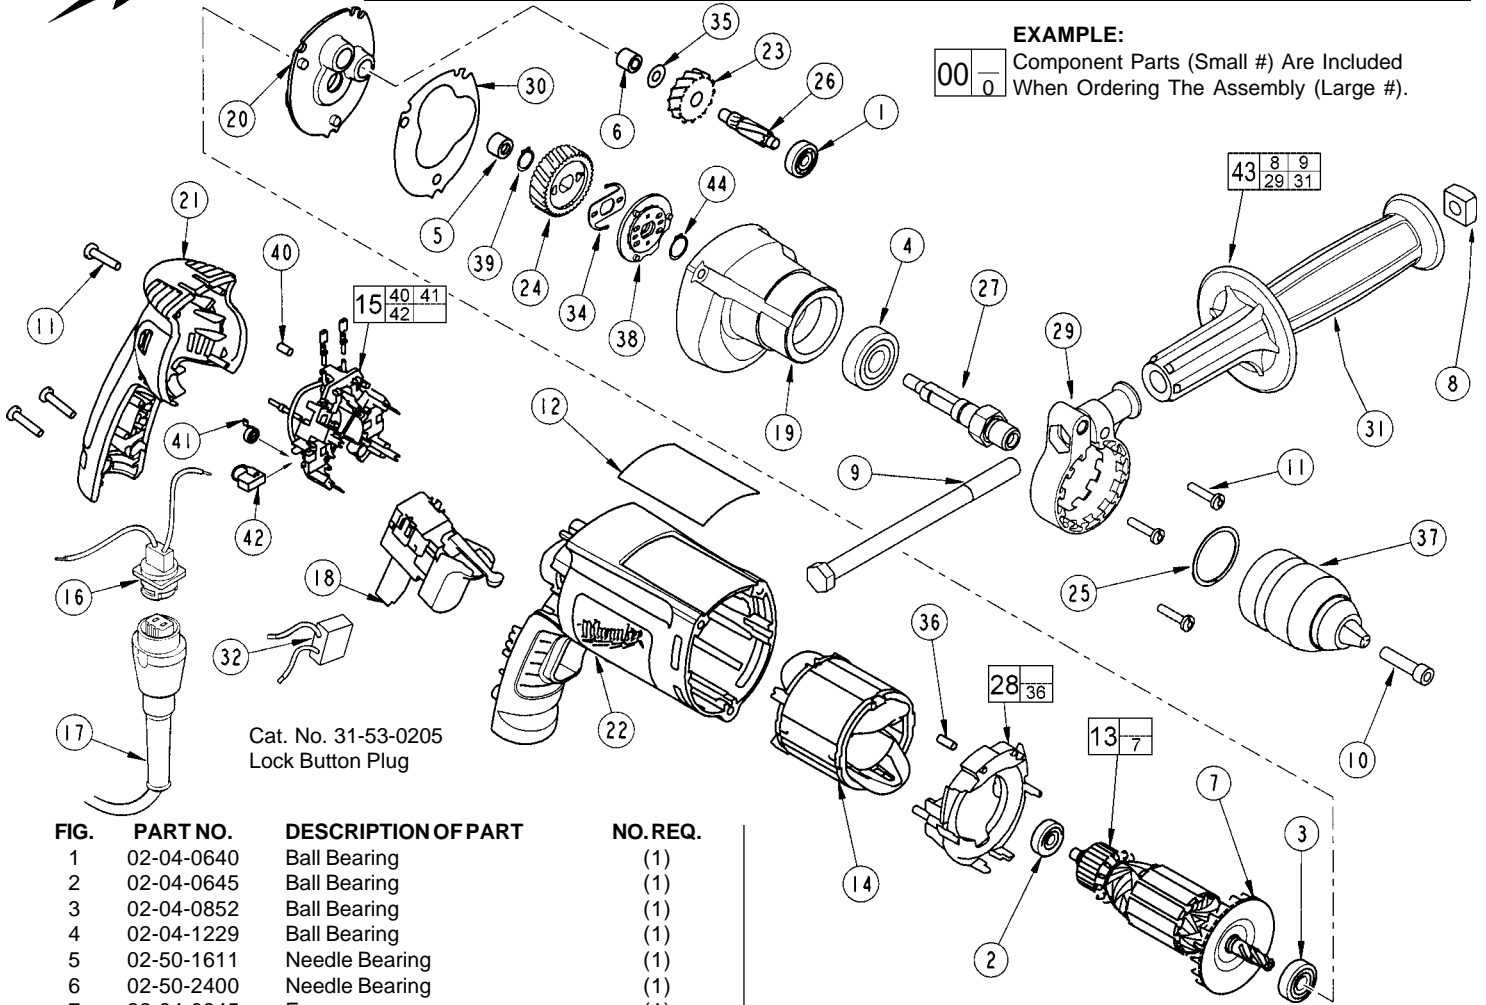

**EXAMPLE:**  

00	0
----	---

 Component Parts (Small #) Are Included When Ordering The Assembly (Large #).

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	02-04-0640	Ball Bearing	(1)
2	02-04-0645	Ball Bearing	(1)
3	02-04-0852	Ball Bearing	(1)
4	02-04-1229	Ball Bearing	(1)
5	02-50-1611	Needle Bearing	(1)
6	02-50-2400	Needle Bearing	(1)
7	22-84-0845	Fan	(1)
8	06-54-0325	3/8-16 Square Nut	(1)
9	06-75-2850	3/8-16 x 5-1/2 Hex Cap Screw	(1)
10	06-81-2925	1/4-20 x 1-1/8 L.H. Flat Hd. Screw	(1)
11	06-82-7275	7-18 x 3/4 Slotted Plastite T-20	(6)
12	12-99-2720	Service Nameplate	(1)
13	16-10-2210	Armature	(1)
14	18-07-2205	Field	(1)
15	22-18-1230	Brush Card Assembly	(1)
16	22-56-1017	Blade Housing Assembly	(1)
17	22-64-0676	Quik-Lok Cord Set	(1)
18	23-66-2585	Switch	(1)
19	28-14-2390	Gearcase	(1)
20	28-28-2320	Diaphragm	(1)
21	31-15-2030	Handle Halve	(1)
22	31-50-2030	Motor Housing	(1)
23	32-40-0100	Intermediate Gear	(1)
24	32-75-0101	Spindle Gear Assembly	(1)
25	34-80-2300	Retaining Ring	(1)
26	36-66-0100	Intermediate Shaft	(1)
27	38-50-5752	Spindle	(1)
28	42-14-0450	Baffle Assembly	(1)
29	42-68-0800	Side Handle Clamp	(1)
30	43-44-0985	Gasket	(1)
31	43-62-0845	Side Handle	(1)
32	22-33-0550	Suppressor	(1)
34	40-50-8525	Click Spring	(1)
35	45-88-7990	Thrust Washer	(1)
36	45-30-0030	Slug	(2)
37	48-66-1575	13mm Keyless Chuck	(1)
38	14-29-0040	Spindle Lock Assembly	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
39	34-60-0810	External Retaining Ring	(1)
40	45-30-0035	Slug	(1)
41	23-52-1610	Brush Spring	(2)
42	22-18-1310	Brush Assembly	(2)
43	49-15-0265	Side Handle Assembly	(1)
44	34-60-0900	External Retaining Ring	(1)

**FIG. LUBRICATION:**  
 19 Place .11 oz. (3.1 grams) of type "Y" grease, No. 49-08-5270, on top of the inserted intermediate ball bearing. After inserting pinion assembly, place .52 oz. (14.7 grams) of grease at the armature pinion location in the gearcase pocket and push down .20".

Before assembly, lightly coat all press fit areas with type "Y" grease.

**FIG. NOTES:**  
 4,24 Support the output ball bearing inside the gearcase before pressing off the spindle gear.  
 5,6 Needle bearings to be pressed flush to .010 under flush from the end which has the vendors identification.