



**BOSCH**

# Cordless Impact Drill

13614 | 0 601 913 470

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	3

## Spare parts list

Item	Part Number	Description	Illustration
3	2 605 500 168	Protective Cap	1
4	2 605 500 169	Protective Cap	1
5	2 601 099 112	Adjusting Slide RED	1
6	2 603 410 052	Thread-forming tap. Screw M3x20	1
7	2 607 200 456	On-Off Switch	1
10	2 600 508 051	Cover BLACK	1
11	2 600 508 052	Cover BLACK	1
12	2 606 316 222	Pinion	1
32	2 601 099 127	Adjusting Slide	1
61	2 608 040 190	Support	1
101	2 603 490 018	Torx Oval-Head Screw 3x18	1
107	2 603 421 229	Countersunk-Head Screw M6x23 LEFTHAND THREADS	1
108	2 604 690 035	Spring Element	1
200	2 601 116 996	Reference Plate	1
651	2 607 335 669	Accumulator Battery 14,4V,2.0Ah,NiCd	1
652	2 609 100 101	Protective Cap	1
653	2 607 225 033	Fast Charger USA 120/7,2-24V, 30 MIN.	1
655	2 602 025 135	Auxiliary Handle	1
658	2 608 040 208	Auxiliary Support	1
801	2 605 105 919	Housing Section BLUE	1
802	2 607 022 864	DC motor 14,4V	1
816	2 607 034 904	Carbon-Brush Set	1
818	2 604 690 026	Spring Element	1
825	2 608 572 900	Keyless Chuck	1
845	2 606 200 937	Planetary Gear Train	1

Illustration - Type - E

