

Replacement Parts

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	Cat. #49-126	Upper Belt-23" O. C.	50	SP-6858	1/4 x 1" Groove Pin
2	1202034	Pulley	51	SP-7017	Retaining Ring
3	901-04-150-6202	5/16-18 x 3/8" Soc. Set Scr.	52	901-03-033-1046	5/16-18 x 1" Flat Soc. Hd. Scr.
4	241-7	Special Washer	53	1202006	Pulley-Fixed
5	1202008	Shaft	54	SP-206	5/16-18 x 5/16" Soc. Set Scr.
6	1202010	Jackshaft Bracket Assembly, including:	55	1202007	Pulley-Moving
7	920-24-063-1009	Bearing	56	920-76-053-1010	Thrust Washer
8	SP-649	5/16-18 x 1 Hex. Hd. Scr.	57	920-45-023-1005	Thrust Race
9	1202014	Plate	*	1202013	Pointer Assembly, consisting of:
10	926-02-993-1055	Pulley	58	1202033	Adjusting Screw
11	1202032	Belt-19" O. C.	59	1202012	Pointer
*	402-07-388-5003	Stop Assembly, consisting of:	60	1202048	Special Nut
12	901-04-350-7616	Lock Screw	61	920-24-063-1009	Bearing
13	902-04-030-1423	Lock Nut	62	1202024	Spacer
14	402-07-088-5002	Stop	63	SP-2600	#6 Woodruff Key
15	902-08-061-5473	Knurled Nut	64	1202051	Worm Shaft Assembly, including:
16	402-07-108-5004	Rod	65	SP-2710	3/16 x 7/8" Roll Pin
17	SP-5433	3/8"-16 Hex. Jam Nut	66	920-04-013-1045	Bearing
18	901-11-011-1453	1/4-20 x 2-1/2" Sq. Hd. Bolt	67	904-15-102-0175	Retaining Ring
19	402-07-014-5002	Bracket	68	1202019	Shaft
20	SP-1034	1/4"-20 Hex. Nut	69	SP-208	1/4-20 x 1/4" Soc. Set Scr.
21	1202043	Shaft	70	904-10-021-4517	Collar
22	SP-2640	#808 Hi-pro Key	71	SP-208	1/4-20 x 1/4" Soc. Set Scr.
23	1202047	Gear Box	72	1202018	Adjustment Block
24	920-45-023-1006	Thrust Race	73	SP-2734	5/16 x 1" Roll Pin
25	920-45-001-6553	Thrust Bearing	74	SP-207	5/16-18 x 1/2" Soc. Set Scr.
26	904-15-011-7113	Retaining Ring	75	SP-3651	3/16 x 5/16 x 1/16" "O" Ring
27	920-45-023-1006	Thrust Race	76	SP-561	#10-32 X 3/8" Rd. Hd. Scr.
28	1202042	Gear	77	SP-1725	#10 Split Lockwasher
29	920-45-023-1007	Thrust Race	78	SP-1609	13/64 x 7/16 x 1/16" Washer
30	920-45-013-1011	Thrust Bearing	79	1202022	Trip Lever
31	920-45-023-1008	Thrust Race	80	1202017	Shaft
32	1202026	Spring	81	1202016	Spacer
33	1202044	Clutch	82	1202031	Spring
34	1202035	Lever	83	1202028	Trigger
35	1202015	Special Nut	84	SP-246	#10-32 X 3/16" Soc. Set Scr.
36	1202039	Pressure Plate	85	1202049	Belt Guard
37	920-45-013-1004	Thrust Bearing	86	SP-507	5/16-18 x 3/4" Rd. Hd. Scr.
*	1202037	Bracket Assembly, consisting of:	87	901-06-131-7359	#6-32 x 1/4 Slotted Pan Hd. Self-Tapping Screw
38	1202036	Bearing Race			Chart
39	1202038	Bracket	88	1202011	Chart
40	905-02-023-1003	5/16 x 7/8" Groove Pin	89	1202046	Gear Box Cover
41	1202023	Special Screw	90	SP-593	#10-24 x 3/8" Binding Hd. Scr.
42	1202030	Stop	91	961-01-010-7472	Plug Button
43	905-04-010-4021	3/16 x 1" Dowel Pin	92	920-45-023-1027	Thrust Race
44	1202029	Block	93	402-07-054-5019	Guard Plate
45	1202040	Plate	94	402-07-116-5002	Gasket
46	901-02-163-1002	#10-24 x 1" Slotted Pan Hd. Scr.			
47	1202045	Hub	*	Not Shown Assembled	
48	SP-5075	1/4 x 3/4" Roll Pin			
49	1202602	Handle			