


Parts List: Rip Fence Assembly

Index No.	Part No.	Description	Size	Qty
1	HPS126-701	Wood Inlay		1
2	HPS126-702	Table		1
3	HPS67-445	Handle		2
4	HPS67-448	Handle Rod		2
5	HPS67-703	Lock Bushing		1
6	HPS126-706	Table Extension		1
7	HPS126-707	Machine Screw		2
8	HPS126-708	Shaft		1
9	HPS126-709	Stop Collar		1
10	HPS126-710	Fence Guide		1
11	HPS126-711	Adjustment Screw		1
12	HPS126-712	Mount Plate		1
13	HPS126-713	Bushing		2
14	HPS126-714	Lock Plate		1
15	HPS67-723	Bushing		1
16	HPS126-716	Body		1
17	HPS126-717	Bushing		1
18	HPS126-718	Wheel		1
19	HPS126-719	Lock Plate		1
20	HPS126-720	Lock Plate		1
21	HPS126-721	Lock Housing		1
22	HPS126-722	Adjustment Screw		1
23	HPS126-723	Guide Bar		1
24	HPS67-729	Retainer Ring		2
25	HPS67-731	Lock Collar		1
26	HPS126-726	Shaft		1
27	HPS67-727	Handle Plate		1
28	HPS126-728	Scale Base		1
29	HPS126-729	Scale		1
30	HPS126-730	Scale Plate		1
31	HPS67-305	Extension Saw Table Right Z		1
32	HPS126-732	Stud	M16	1
33	TS-2311161	Full Hex Nut	M16	6
34	TS-155010	Flat Washer	M16	4
35	TS-1503041	Socket Head Cap Screw	M6 x 16	6
36	TS-1504041	Socket Head Cap Screw	M8 x 20	1
37	TS-1550071	Flat Washer	M10	2
38	TS-1491041	Hex Cap Screw	M10 x 30	1
39	TS-1550061	Flat Washer	M8	2
40	TS-1490021	Hex Cap Screw	M8 x 12	1
41	TS-1524031	Socket Set Screw	M8 x 8	1
42	TS-1490041	Hex Cap Screw	M8 x 25	1
43	TS-1503131	Socket Head Cap Screw	M6 x 60	1
44	TS-1524011	Socket Set Screw	M8 x 8	1
45	TS-1522061	Socket Set Screw	M5 x 20	1
46	TS-1504061	Socket Head Cap Screw	M8 x 30	6
47	HPS126-747	Nut		1


Rip Fence Assembly

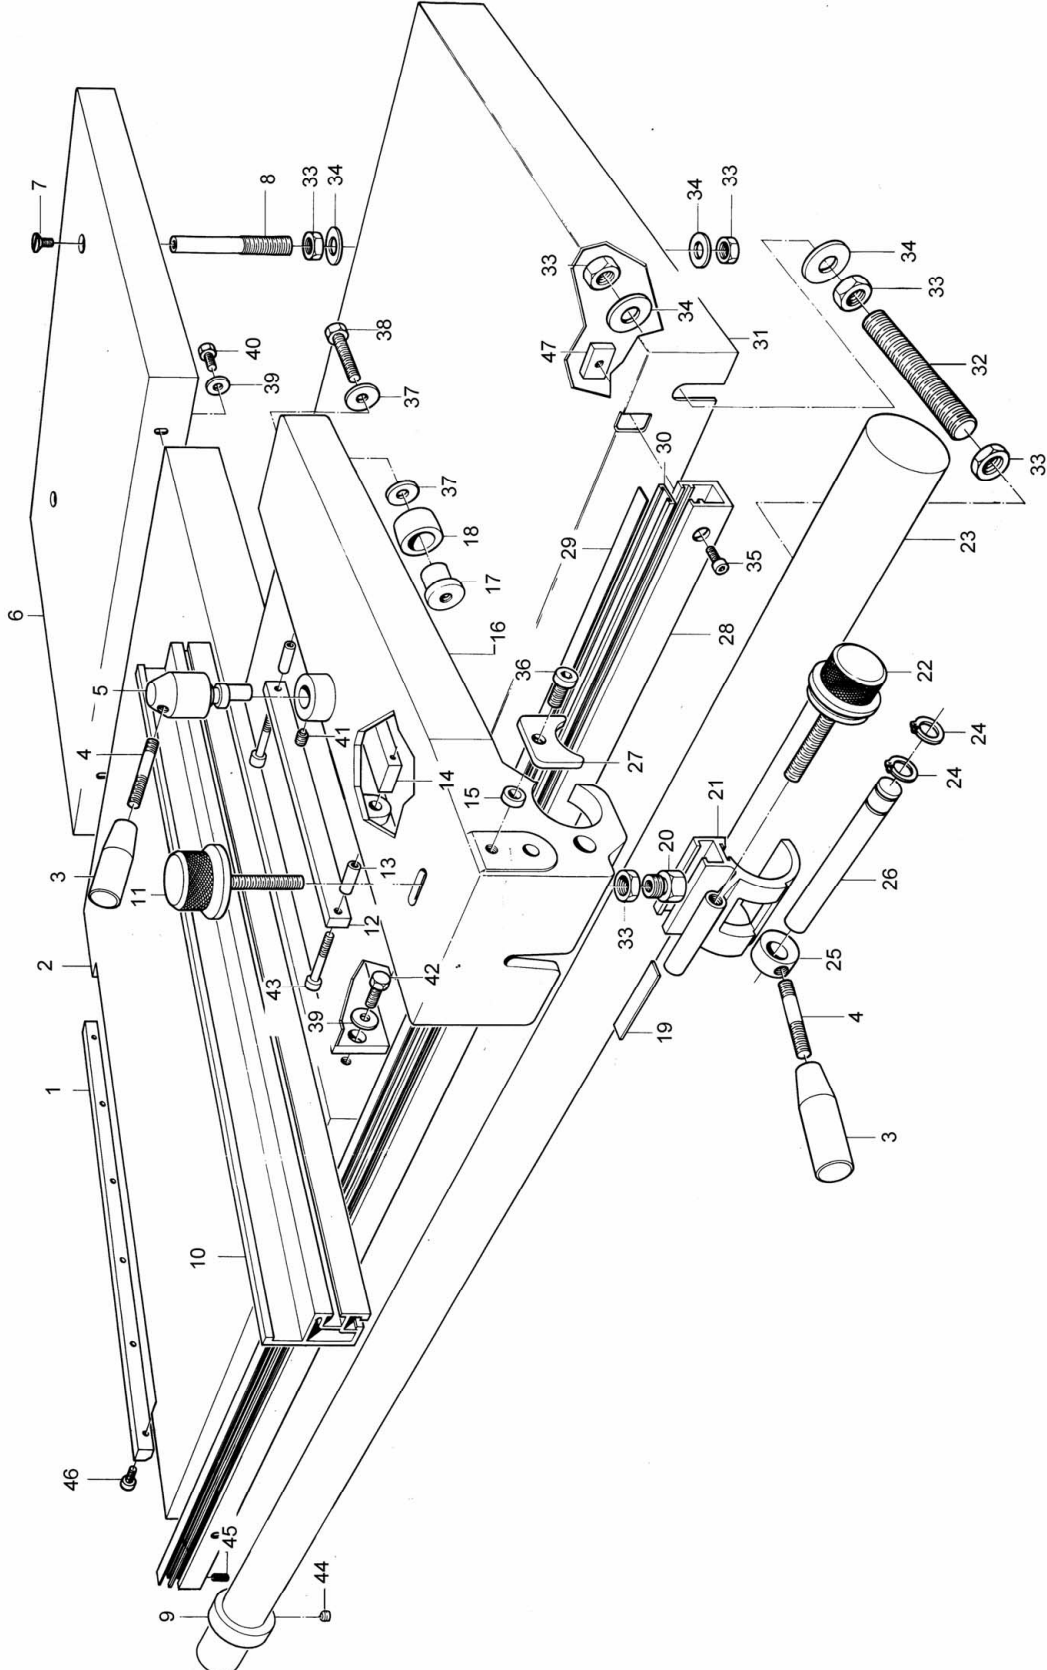

Parts List: Over Arm Guard Assembly

Index No.	Part No.	Description	Size	Qty
1	HPS126-901	Frame		1
9	HPS67-909	Hand Knob		1
10	HPS67-910	End Cap		2
27	TS-1550061	Flat Washer	M8	12
29	TS-1505041	Socket Head Cap Screw	M10 x 30	4
30	TS-1550071	Flat Washer	M10	8
31	TS-2311101	Hex Nut	M10	5
32	TS-2311081	Hex Nut	M8	4
37	TS-1541031	Nylon Lock Hex Nut	M8	4
46	TS-1505131	Socket Head Cap Screw	M10 x 80	2
47	HPS67-947	Upper Guard (LH)		1
48	TS-1504011	Socket Head Cap Screw	M8 x 10	6
49	TS-1504031	Socket Head Cap Screw	M8 x 16	2
50	TS-1540031	Hex Nut	M5	1
51	HPS67-951	Stand Off		1
52	TS-1515031	Socket Head Flat Screw	M8 x 25	3
53	TS-2311081	Hex Nut	M8	4
54	HPS67-954	Bushing		2
55	HPS67-955	Link Bar		2
56	HPS67-956	Ball Bearing	6003-2RS	4
57	HPS67-957	Bushing		4
58	TS-1550061	Flat Washer	M8	2
59	HPS67-959	Spacer		2
60	HPS67-960	Handle		2
61	HPS67-961	Threaded Rod		1
62	HPS67-962	Guard Column (LH)		1
63	HPS67-963	Socket Set Screw	M8 x 30	1
64	HPS67-964	Pointer		1
65	TS-1490041	Hex Cap Screw	M8 x 25	1
66	HPS67-966	Upper Bracket		1
67	TS-1524021	Socket Set Screw	M8 x 10	4
68	HPS67-968	Lower Bracket		1
69	HPS67-969	Support Shaft		4
70	HPS67-970	Guard Column (RH)		1
71	HPS67-971	Bolt		1
72	TS-1502041	Socket Head Cap Screw	M5 x 16	
73	HPS67-973	Link Bar		2
74	HPS67-974	Socket Head Flat Screw	M8 x 45	1
75	HPS67-975	Cylinder		1
76	TS-149006	Hex Cap Screw	M8 x 35	1
77	HPS67-977	Bushing		2
81	HPS67-981	Upper Guard (RH)		1
	HPS67-982A	Blade Guard Assembly (tilted arbor) (items 71, 82 thru 88)		1
82	HPS67-982	Blade Guard (tilted arbor)		1
	HPS67-983A	Blade Guard Assembly (items 71, 83 thru 88)		1
83	HPS67-983	Blade Guard		3
84	TS-1540021	Hex Nut	M4	4
85	TS-1501051	Socket Head Cap Screw	M4 x 16	4
86	TS-1501091	Socket Head Cap Screw	M4 x 35	4
87	HPS67-987	Roller		4
88	HPS67-988	Lock Nut		1

Over Arm Guard Assembly

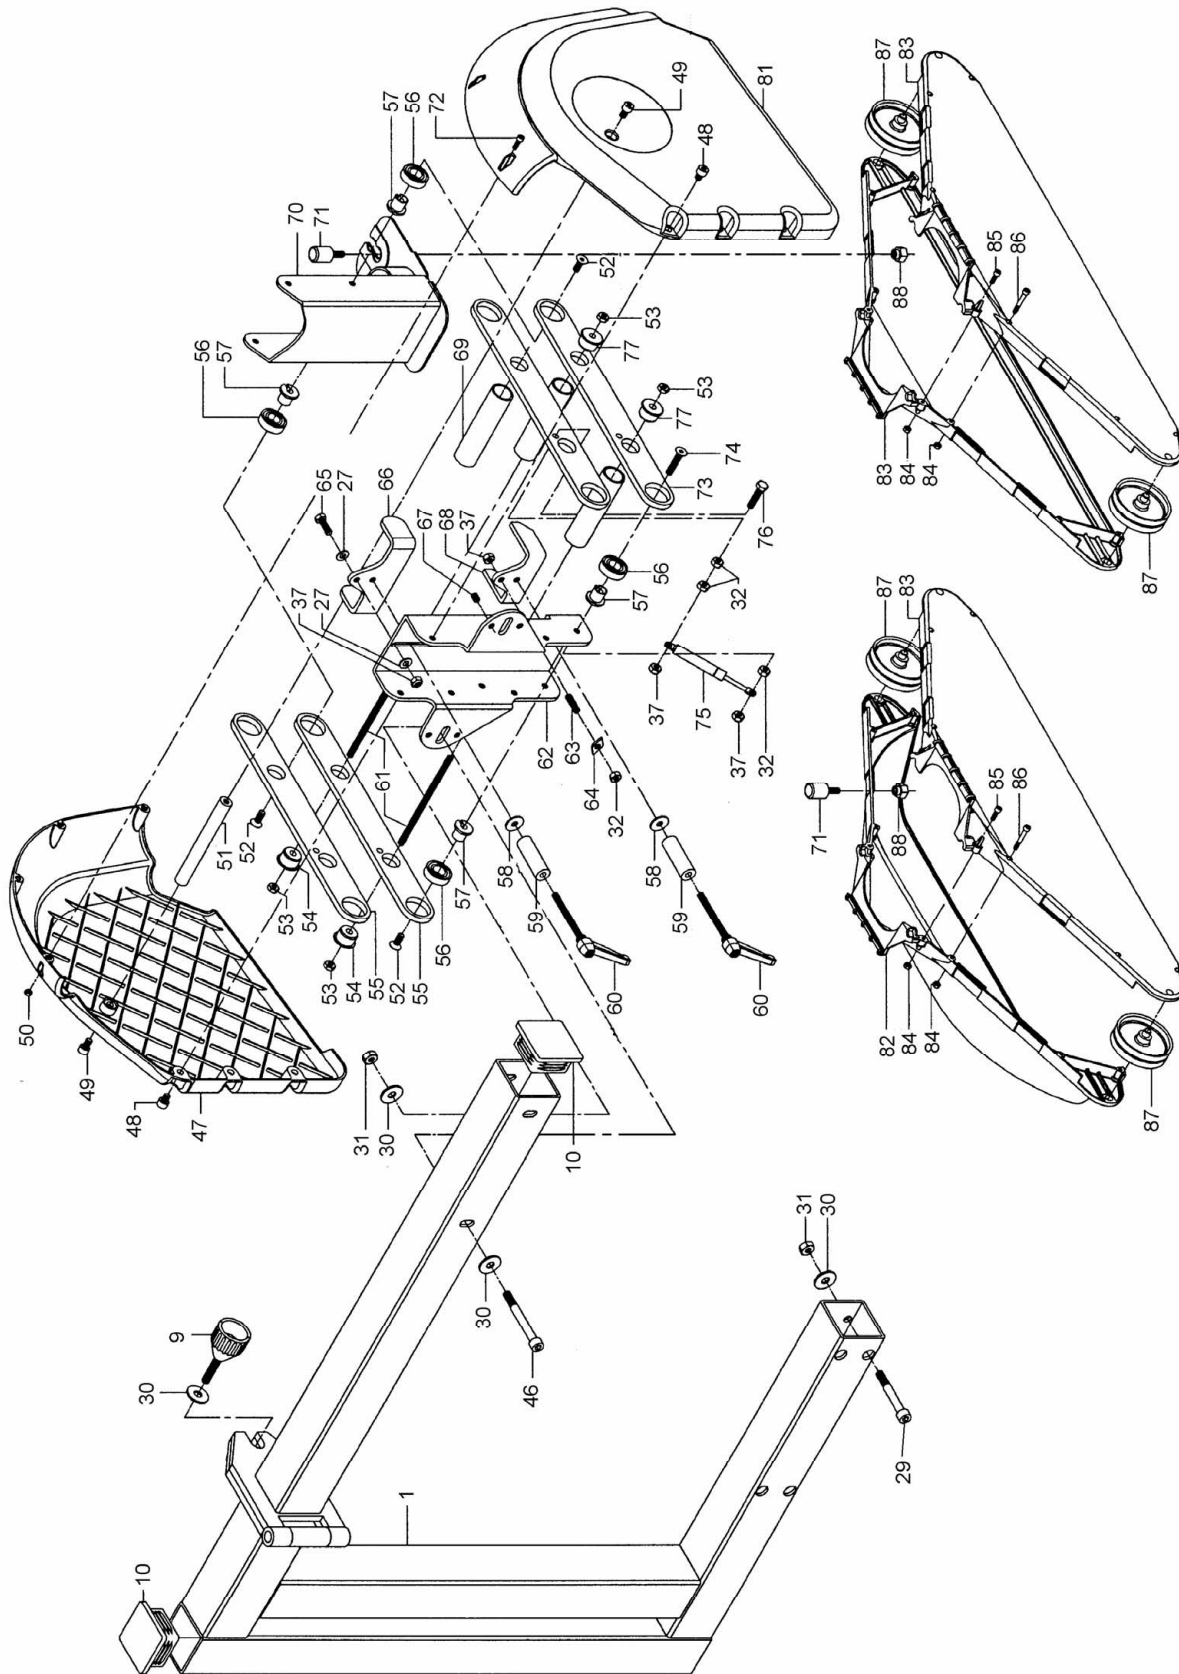

Parts List: Motor and Arbor Assembly


(Exploded view on page 33)

Index No.	Part No.	Description	Size	Qty
1	HPS126-101	Flange Collar		1
2	HPS126-102	Arbor Shaft		1
3	HPS126-103	Cover		1
4	HPS126-104	Arbor Nut		1
5	HPS126-105	Riving Knife		1
6	HPS126-106	Bolt		2
7	HPS126-107	Hub		1
8	HPS126-108	Shaft		1
9	HPS126-109	Nut		1
10	HPS126-110	Cam		1
11	HPS126-111	Flange		1
12	HPS126-112	Locking Plate		1
13	HPS126-113	Riving Knife (for use with 14" blade)		1
14	HPS126-114	Adjustment Block		1
15	HPS126-115	Plate		1
16	HPS126-116	Nut		1
17	HPS126-117	Cradle		1
25	HPS126-125	Pivot Unit		1
26	HPS126-126	Retainer Ring	N471-55	1
27	HPS126-127	Spring		1
28	HPS126-128	Micro Switch		1
29	HPS126-129	Bracket		1
30	HPS126-130	Bracket		1
31	HPS126-131	Bracket		1
33	HPS126-133	Bracket		1
34	HPS126-134	Bracket		1
35	HPS126-135	Spring		1
36	HPS126-136	Glide Bushing		2
37	HPS126-137	Flanged Riving Knife		1
38	BB-6006-ZZ	Ball Bearing	6006-ZZ	2
39	HPS126-139	Retainer Ring	N472-55	1
40	HPS126-140	Bracket		1
41	HPS126-141	Switch		1
42	HPS126-142	Flange Bushing		1
43	HPS126-143	Sliding Pin		1
44	HPS126-144	Body		1
45	BB-6010VV	Ball Bearing	6060VV	2
46	HPS126-146	Retainer Ring	N472-80	2
47	HPS126-147	Spring		1
48	HPS126-148	Pin		1
49	HPS126-149	Holder		1
50	HPS126-150	Bracket		1
51	HPS126-151	Micro Switch		1
52	HPS126-152	Bushing		1
53	HPS126-153	Fork		1
54	HPS126-154	Washer		1
56	HPS126-156	Bushing		1
57	HPS126-157	Bushing Saw Arbor		1
58	HPS126-158	Pin	8mm dia. x 70mm	1
59	HPS126-159	Flange		1
65	HPS126-165	Connection Plate		1
66	HPS126-166	V-Belt		1
67	HPS126-167	Retainer Ring	N471-30	2
68	HPS126-168	Arbor Pulley		1
69	HPS126-169	Key		2

70	HPS126-170	Retainer Ring	N471-40	1
71	HPS126-171	Tensioner Strap		1
72	HPS126-172	Tensioner Bolt		2
73	HPS126-173	Pivot Bushing		1
74	HPS126-174	Washer		1
75	HPS126-175	Belt Spanner		1
76	HPS126-176	Belt Spanner		1
77	HPS126-177	Handle Plate		1
78	HPS126-178	Handle Nut		1
79	HPS126-179	Segment Gear		1
80	HPS126-180	Motor Base		1
81	HPS126-181	Handle Plate		1
82	HPS126-182	Handle		1
83	HPS126-183	Motor	7-1/2HP, 230V, 3Ph	1
84	HPS126-184	Motor Pulley		1
85	HPS126-185	Washer		1
86	HPS126-186	Screw		1
87	HPS126-187	Medium Washer		2
88	HPS126-188	Plug		1
89	HPS126-189	Strap Bracket		1
90	HPS126-190	Pin	5mm dia. x 12mm	1
91	HPS126-191	Nut		1
92	HPS126-192	Stop Bushing		1
93	HPS126-193	Height Stop Collar		1
94	HPS126-194	Height Adjustment Collar		1
95	HPS126-195	Height Adjustment Bushing		1
96	HPS126-196	Insert Pad		2
97	HPS126-197	Adjustment Shaft		1
98	TS-224A601	Flat Head Socket Cap Screw	M12 x 60	1
99	HPS126-199	Screw	M4 x 6	1
100	HPS126-200	Screw	2.4 x 6	1
101	TS-2311081	Hex Nut	M8	2
102	TS-1550061	Flat Washer	M8	4
103	TS-1505011	Socket Head Cap Screw	M10 x 16	4
104	TS-1525011	Socket Set Screw	M10 x 10	4
105	TS-1504021	Socket Head Cap Screw	M8 x 12	1
106	TS-1481021	Hex Cap Screw	M5 x 10	1
107	TS-1502011	Socket Head Cap Screw	M5 x 8	2
108	TS-1550031	Flat Washer	M5	1
109	TS-1490011	Hex Cap Screw	M8 x 12	3
110	HPS126-201	Flat Head Socket Cap Screw	M16 x 45	1
111	TS-1490021	Hex Cap Screw	M8 x 16	6
113	TS-1501081	Socket Head Cap Screw	M4 x 30	1
115	TS-2342101	Nylon Lock Hex Nut	M10	2
116	TS-1540021	Hex Nut	M4	1
120	TS-2361101	Lock Washer	M10	1
121	TS-1550071	Flat Washer	M10	1
122	TS-2311161	Full Hex Nut	M16	1
123	TS-155010	Flat Washer	M16	1
124	TS-1550071	Flat Washer	M10	1
125	TS-2210161	Hex Cap Screw	M10 x 16	2
126	TS-149B16	Hex Cap Screw	M16 x 100	1
127	TS-1490081	Hex Cap Screw	M8 x 45	3
128	TS-1504041	Socket Head Cap Screw	M8 x 20	2
129	TS-1514021	Socket Head Flat Screw	M6 x 16	1
130	TS-1504041	Socket Head Cap Screw	M8 x 20	2
131	TS-223C801	Socket Head Cap Screw	M16 x 80	1
132	TS-2361121	Lock Washer	M12	4
133	TS-1540081	Hex Nut	M12	4
134	TS-1503041	Socket Head Cap Screw	M6 x 16	4
135	TS-1550041	Flat Washer	M6	4

136	TS-1503011	Socket Head Cap Screw	M6 x 8	4
137	TS-1491061	Hex Head Cap Screw	M10 x 40	1
138	TS-222C301	Hex Cap Screw	M16 x 30	1
139	TS-155010	Flat Washer	M16	1
140	HPS126-203	Washer	M4	2
141	TS-1526011	Socket Set Screw	M12 x 12	1
144	TS-1501011	Socket Head Cap Screw	M4 x 6	2
145	TS-1491081	Hex Cap Screw	M10 x 50	2
146	HPS126-118	Riving Knife (for use with 12" blade)		1

Motor and Arbor Assembly

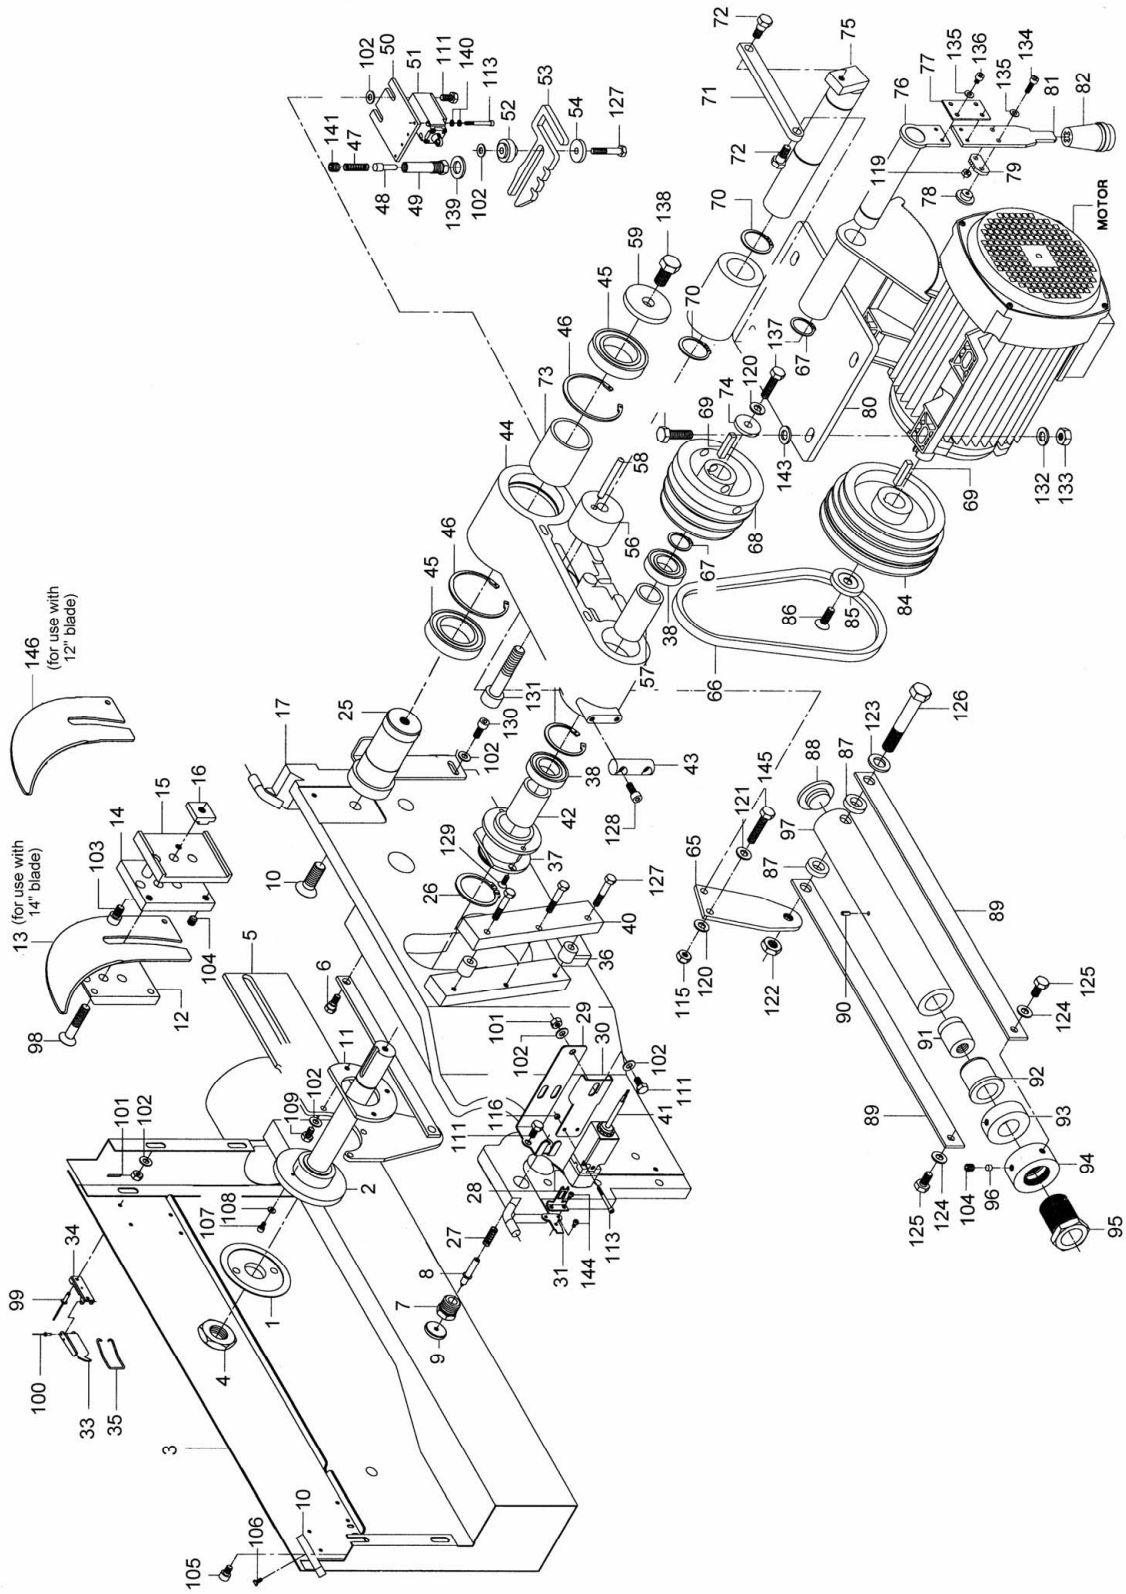


Parts List: Scoring Motor and Arbor Assembly

(Exploded view on page 36)

Index No.	Part No.	Description	Size	Qty
1	HPS67-201	Flange Collar	1	1
2	HPS67-203	Arbor Shaft		1
3	BB-6003ZZ	Ball Bearing		2
4	HPS126-204	Bushing		1
5	HPS126-205	Retainer Ring	N472-35	1
6	HPS126-206	Bearing Housing		1
7	HPS67-207	Arbor Pulley		1
8	HPS126-208	Motor Mount		1
9	HPS126-209	V-Belt		1
10	HPS67-226	Motor Pulley		1
11	HPS126-211	Corner Plate		1
12	HPS126-212	Guide		2
13	HPS126-213	Cable Clamp		2
14	HPS126-214	Spring		1
15	HPS126-215	Cable Guide		1
16	HPS126-216	Cable Guide		1
17	HPS126-217	Cable Sleeve		1
18	HPS126-218	Threaded Rod		1
19	HPS67-145	Cover Tube		1
20	HPS67-225	Spring		1
21	HPS126-221	Strap Bracket		1
22	HPS126-222	Threaded Rod		1
23	HPS126-117	Cradle		1
24	HPS126-224	Locking Knob		1
25	HPS126-225	Hand Knob		2
26	HPS126-226	Threaded Rod Housing		1
27	HPS126-227	Spring		1
28	HPS126-106	Bolt		2
29	HPS126-229	Bushing		1
30	HPS126-230	Pivot Shaft		1
31	HPS126-231	Strap Bracket		1
32	BB-608ZZ	Ball Bearing	608ZZ	1
33	HPS67-233	Scoring Motor	3/4HP, 230V (.55 kw)	1
34	HPS126-232	Hose		1
35	BB-6003ZZ	Ball Bearing	6003ZZ	2
36	BB-6304ZZ	Ball Bearing		1
37	HPS126-237	Support Plate		1
38	HPS126-238	Handwheel		1
39	HPS126-239	Locking Knob		1
40	HPS126-240	Handle		1
41	HPS126-241	Retainer Ring	N471-25	1
42	HPS126-242	Height Setting Shaft		1
43	HPS126-243	Shaft Housing		1
44	HPS126-244	Dial Plate		1
45	HPS126-245	Adjustment Bolt		1
46	HPS126-246	Adjustment Shaft		1
47	HPS126-247	Gear Housing		1
48	HPS126-248	Hand Knob		1
49	HPS126-249	Retainer Ring	N472-22	1
50	HPS126-250	Pointer		1
51	HPS126-251	Adjustment Rod		1
52	HPS126-252	Bearing		1
53	HPS126-253	Adjustment Rod		1
54	HPS126-254	Bushing		1
55	HPS126-255	Adjustment Plate		1
56	TS-2311081	Hex Nut	M8	2

57.....	TS-1503011	Socket Head Cap Screw.....	M6 x 8	1
58.....	TS-1504021	Socket Head Cap Screw.....	M8 x 12	1
59.....	TS-1515031	Flat Head Socket Cap Screw.....	M8 x 25	1
60.....	TS-2311081	Hex Nut.....	M8.....	4
61.....	TS-1505141	Socket Head Cap Screw.....	M10 x 90	1
62.....	TS-1550061	Flat Washer.....	M8.....	8
63.....	TS-1490021	Hex Head Cap Screw	M8 x 16	1
64.....	TS-1524011	Socket Set Screw	M8 x 8	2
65.....	TS-2331081	Cap Nut.....	M8.....	2
66.....	TS-1503031	Socket Head Cap Screw.....	M6 x 12	1
67.....	TS-1504041	Socket Head Cap Screw.....	M8 x 20	1
68.....	TS-1505041	Socket Head Cap Screw.....	M10 x 30	1
69.....	TS-1541031	Nylon Lock Hex Nut.....	M8.....	1
70.....	TS-1514011	Socket Head Flat Screw	M6 x 12	1
71.....	TS-1490021	Hex Head Cap Screw	M8 x 16	1
72.....	TS-1503021	Socket Head Cap Screw.....	M6 x 10	1
73.....	TS-1490041	Hex Cap Screw	M8 x 25	1
74.....	TS-2310162	Full Hex Nut	M16-1.5P	1
75.....	TS-2312101	Jam Nut.....	M10.....	1
76.....	TS-29-198.....	Socket Set Screw	M8 x 50	2
77.....	HPS126-277	Half Dog Point Socket Set Screw.....	M10 x 20	1
78.....	TS-1515021	Flat Head Socket Set Screw	M8 x 20	1
79.....	HPS126-279	End Cap.....	1

Scoring Motor and Arbor Assembly

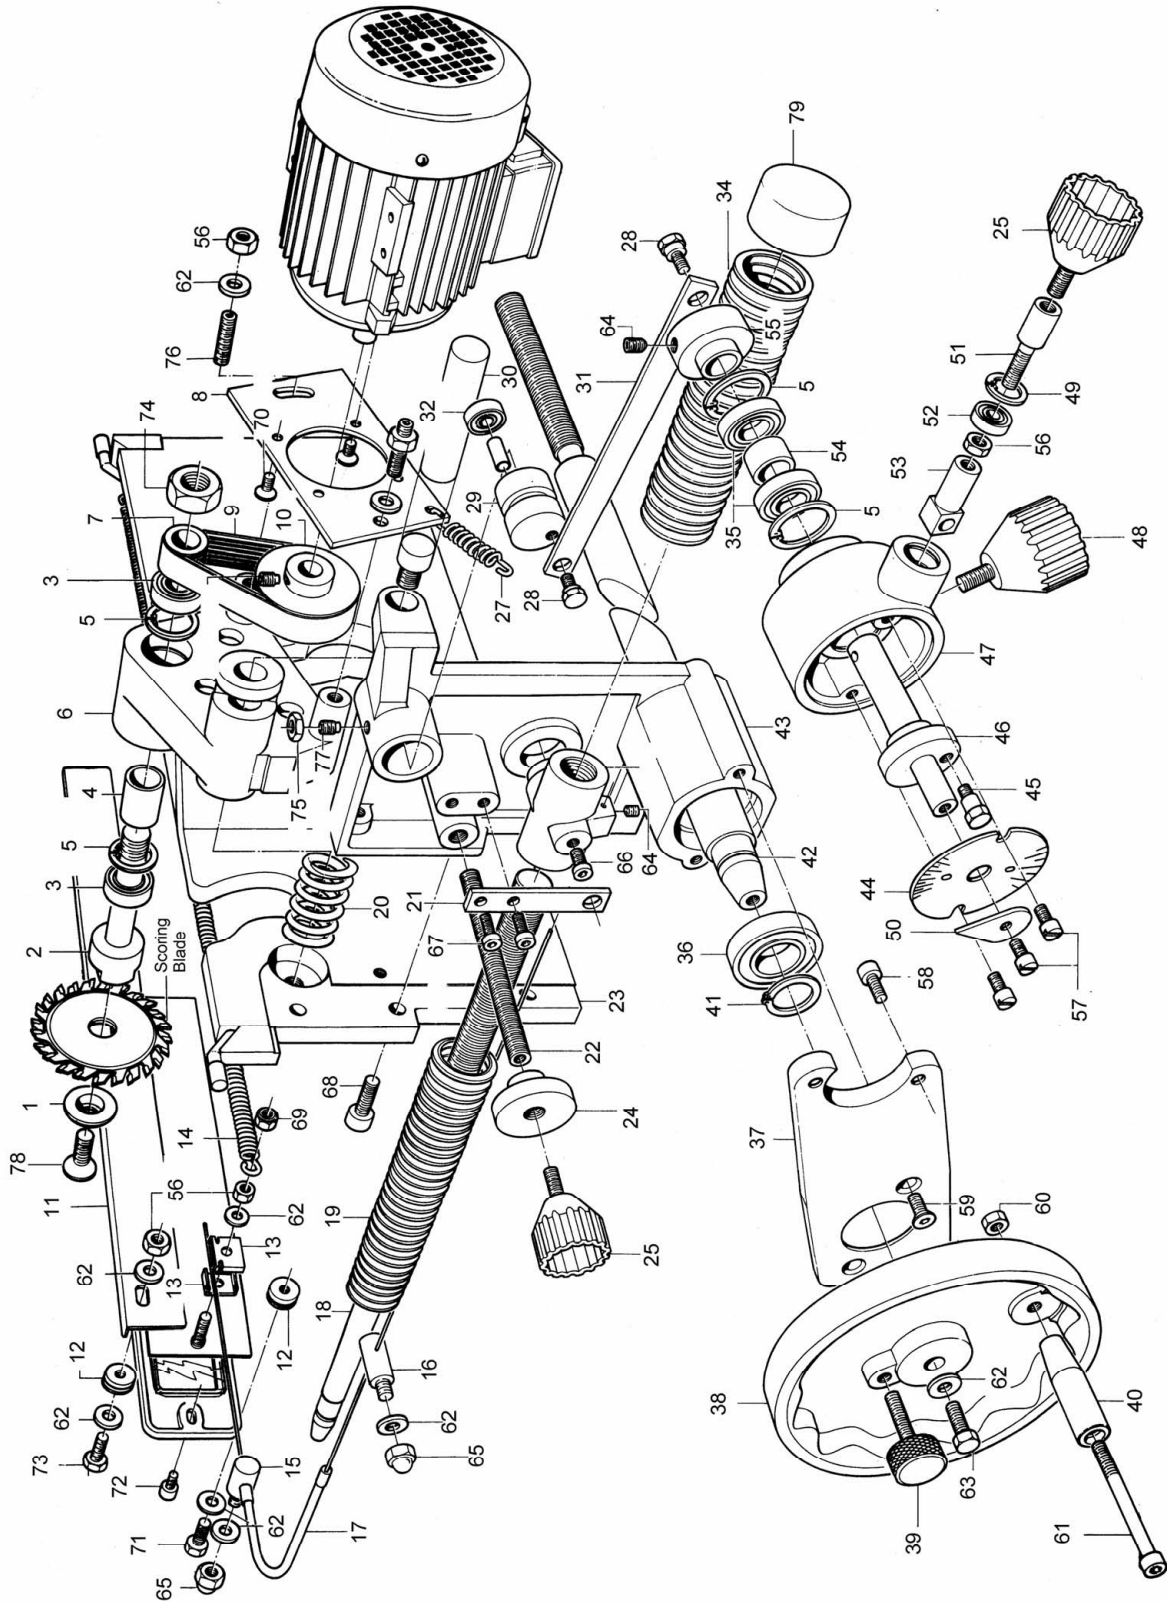


Parts List: Stand Assembly

(Exploded view on page 39)

Index No.	Part No.	Description	Size	Qty
1	HPS126-301	Stand		1
2	HPS126-302	Door		1
3	HPS126-303	Support Arm		1
4	HPS126-304	Support Plate		1
5	HPS126-305	Adjustment Screw		1
6	HPS126-306	Washer		2
7	HPS67-312	Threaded Rod		1
8	HPS126-308	Pivot Roll Support		1
9	HPS126-309	Pivot Roll Shaft		1
10	HPS126-310	Roll Support Bracket		1
11	HPS67-409	Adjustment Knob		1
12	HPS126-312	End Cap		1
13	HPS126-313	Support Shaft		1
14	HPS126-314	Collar		1
15	HPS126-315	Cover Plate		1
16	HPS126-316	Electrical Cabinet		1
17	HPS126-317	Mount Plate		1
18	HPS126-318	Door		1
19	HPS67-324	Spring		1
20	HPS126-320	Lock Plate		1
21	HPS126-321	Lock Pin		1
22	HPS67-311	Hook		1
23	HPS67-445	Handle		1
24	HPS126-324	Wrench		1
25	HPS126-325	Stop Block		1
26	HPS126-326	Adjustment Block		1
27	HPS126-327	Ring		1
28	HPS126-248	Hand Knob		1
29	HPS126-329	Hand Knob		1
30	BB-6003ZZ	Ball Bearing	6003ZZ	2
31	TS-152707	Hex Key	6mm Short	1
32	TS-227D081	Hex Ke	8mm Short	1
33	TS-227D061	Hex Key	5mm Short	1
34	HPS126-334	Wrench	19mm x 22mm	1
35	HPS67-328	Wrench	13mm x 17mm	1
36	TS-1490021	Hex Head Cap Screw	M8 x 16	1
37	TS-1550061	Flat Washer	M8	2
38	TS-2213401	Hex Cap Screw	M16 x 40	1
39	TS-2311161	Full Hex Nut	M16	1
40	TS-1504071	Socket Head Cap Screw	M8 x 35	1
41	TS-2215901	Hex Cap Screw	M20 x 90	2
42	TS-154010	Hex Nut	M16	2
43	TS-2361081	Lock Washer	M8	1
44	TS-1541031	Nylon Lock Hex Nut	M8	1
45	TS-1491021	Hex Cap Screw	M10 x 20	2
46	TS-1550071	Flat Washer	M10	2
47	TS-1516021	Socket Flat Head Cap Screw	M10 x 25	1
48	TS-1490071	Hex Cap Screw	M8 x 40	1
49	TS-1550061	Flat Washer	M8	2
50	HPS67-51	Stud	M8 x 20	6
51	TS-1550071	Flat Washer	M10	2
52	TS-223C501	Socket Head Cap Screw	M16 x 50	1
53	TS-155010	Flat Washer	M16	1
54	TS-1490061	Hex Head Cap	M8 x 35	1
55	TS-2239451	Socket Head Cap Screw	M10 x 45	1
56	TS-1504021	Socket Head Cap Screw	M8 x 12	1

57.....	TS-1504031	Socket Head Cap Screw.....	M8 x 16	4
58.....	TS-1540081	Hex Nut.....	M12.....	1
59.....	TS-1525011	Socket Set Screw	M10 x 10	1
60.....	TS-1503071	Socket Head Cap Screw.....	M8 x 16	4
61.....	TS-2311061	Hex Nut.....	M6.....	4
62.....	TS-2311081	Hex Nut	M8.....	4

Stand Assembly

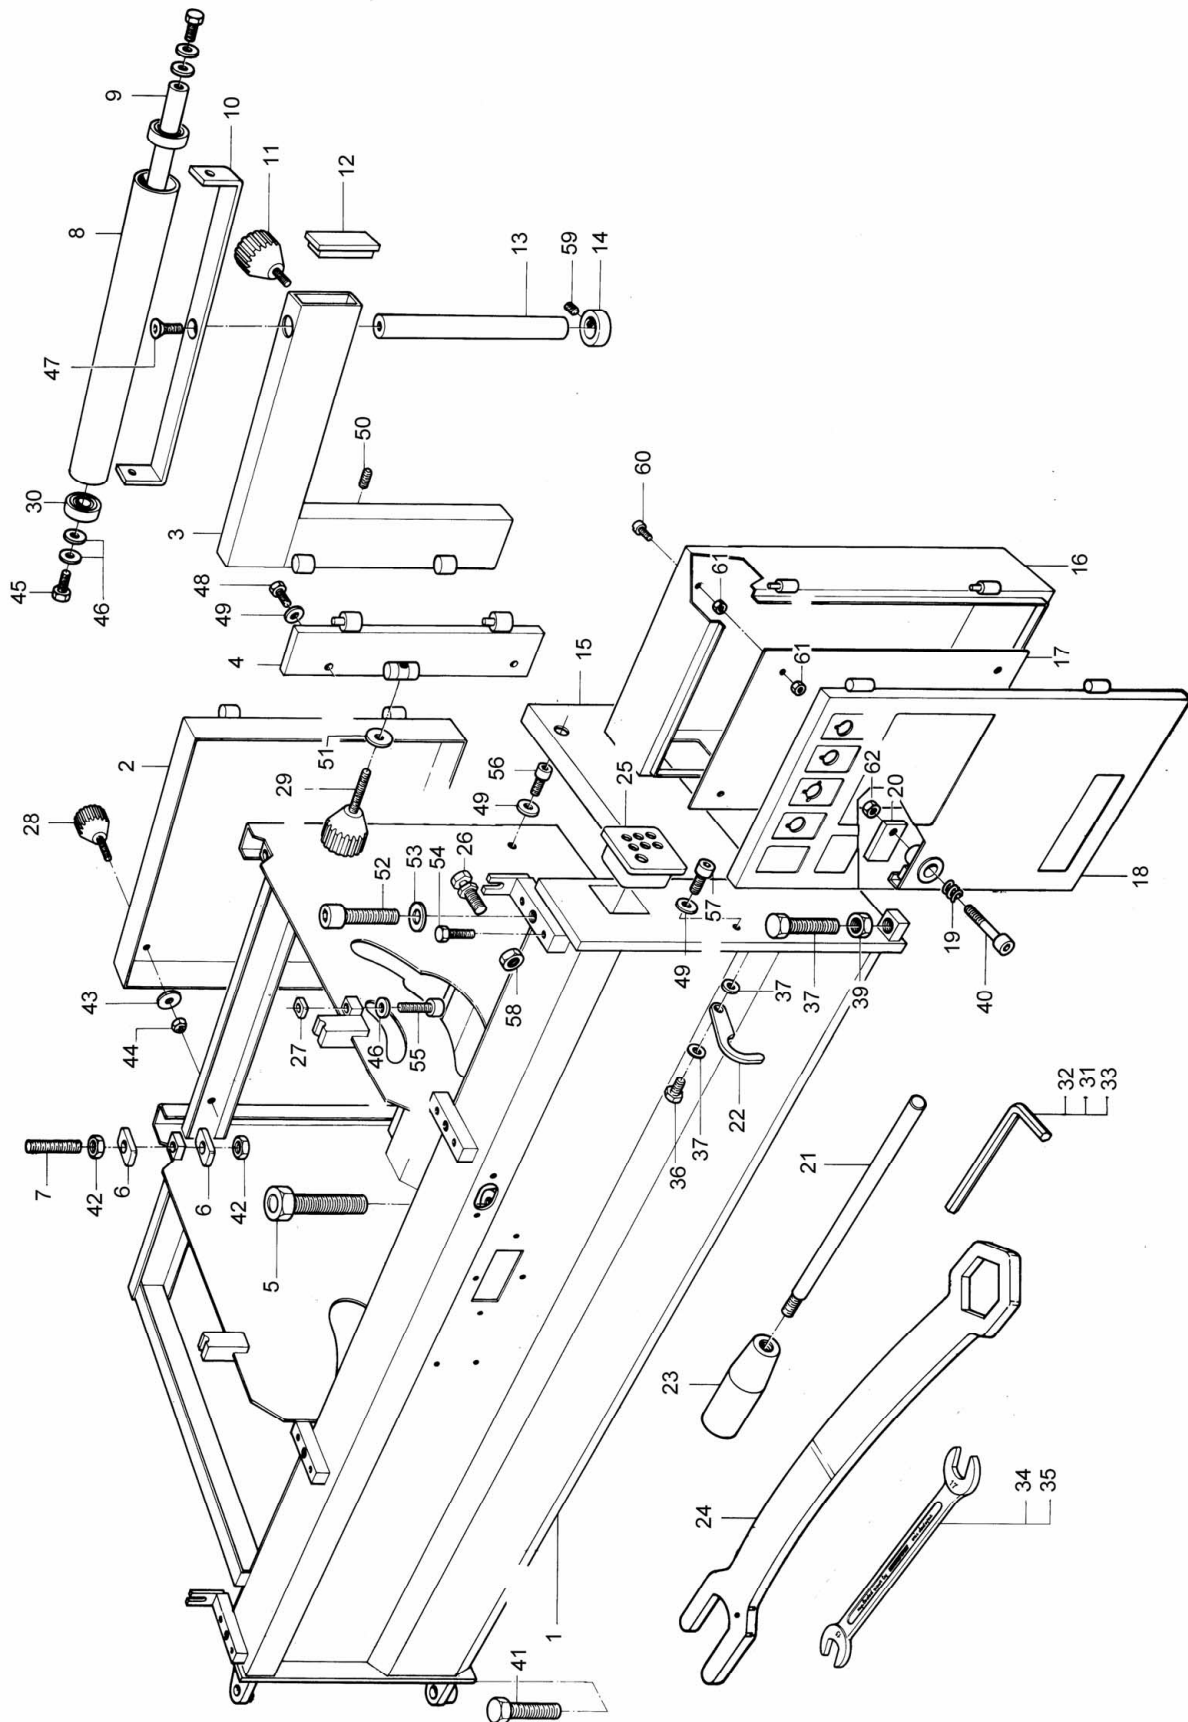


Parts List: Sliding Table Assembly

(Exploded view on page 42)

Index No.	Part No.	Description	Size	Qty
1	HPS126-401	Plate		1
2	HPS126-402	Clamp Rod		1
3	HPS126-403	Stop Plate		1
4	HPS126-404	Bracket		1
5	HPS126-405	Mount Plate		1
6	HPS126-406	Wiper		4
7	HPS126-407	Plug		2
8	HPS126-408	Steel Ball		11
9	HPS126-409	Cover Plate		1
10	HPS126-410	Block		1
11	HPS126-411	Bracket		1
12	HPS126-412	Rod		1
13	HPS126-413	Coupling		2
14	HPS126-414	Coupling		1
15	HPS126-415	Spring		1
16	HPS126-416	Plate		1
17	HPS126-417	Bushing		1
18	HPS126-418	Position Indicator		1
19	HPS126-419	Bracket		1
20	HPS126-420	Mount Plate		1
21	HPS126-421	Lock Plate		1
22	HPS126-422	Stop Plate		2
23	HPS126-423	Stop Block		2
24	HPS126-424	Rod		10
25	HPS126-425	Guide		3
26	HPS126-426	Plate		1
27	HPS126-427	Support		1
28	HPS126-428	Nut		2
29	HPS126-429	Cover Plate		1
30	HPS126-430	Plate		1
31	HPS126-431	Guide		1
32	HPS126-432	Bracket		1
33	HPS126-433	Plate		1
34	HPS126-434	Support Table		1
35	HPS126-435	Adjustment Knob		1
36	HPS67-409	Adjustment Knob		1
38	HPS67-442	Post Block		1
39	HPS67-443	Rod		1
47	HPS67-430	Handle		2
48	HPS67-453	Washer		1
49	HPS67-440	Handle		1
50	HPS67-438	Handle Bolt		2
51	HPS67-439	Bushing		1
52	HPS67-434	Nut Plate		2
53	HPS67-435	Clamp		2
54	HPS67-429	Nut Plate		14
55	HPS67-415	Handle		1
56	HPS67-413	Profile Tube		1
57	HPS67-411	Lock Plate		1
58	HPS67-410	Adjustment Block		1
59	HPS67-412	Mitre Guide Stop		1
60	HPS67-906	Bushing		1
61	TS-1550061	Flat Washer	M8	30
62	TS-1525011	Socket Set Screw	M10 x 10	2
63	TS-1490021	Hex Head Cap Screw	M8 x 16	4
64	TS-1504061	Socket Head Cap Screw	M8 x 30	1

65	TS-1482081	Hex Head Cap Screw	M6 x 40	2
66	TS-1550071	Flat Washer	M10	10
67	TS-1491041	Hex Head Cap Screw	M10 x 30	1
68	TS-2311081	Hex Nut	M8	5
69	TS-1524011	Socket Set Screw	M8 x 8	1
70	TS-2311101	Hex Nut	M10	1
71	TS-2331101	Cap Nut	M10	2
72	TS-2248121	Flat Head Socket Cap Screw	M8 x 20	4
73	TS-1515021	Flat Head Socket Cap Screw	M8 x 20	2
74	TS-1504041	Socket Head Cap Screw	M8 x 20	1
75	TS-1513031	Flat Head Socket Cap Screw	M5 x 16	2
76	TS-1504051	Socket Head Cap Screw	M8 x 25	2
77	TS-1482031	Hex Head Cap Screw	M6 x 16	2
78	TS-2311061	Hex Nut	M6	2
79	TS-2288202	Phillips Pan Head Machine Screw	M8 x 20	24
80	TS-1525011	Socket Set Screw	M10 x 10	1
83	HPS126-436	Self Tapping Screw	4,8-19	4
84	HPS67-451	Stud	M8 x 20	2
85	HPS67-480	Handle		1
86	HPS67-481	Handle Shaft		1
87	HPS67-482	Cam		1
88	HPS67-483	Clamp Pin		1
89	HPS67-484	Spring		1
90	HPS67-485	Pin		1
91	HPS67-486	Clamp Block		1
92	HPS67-487	Clamp		1

Sliding Table Assembly

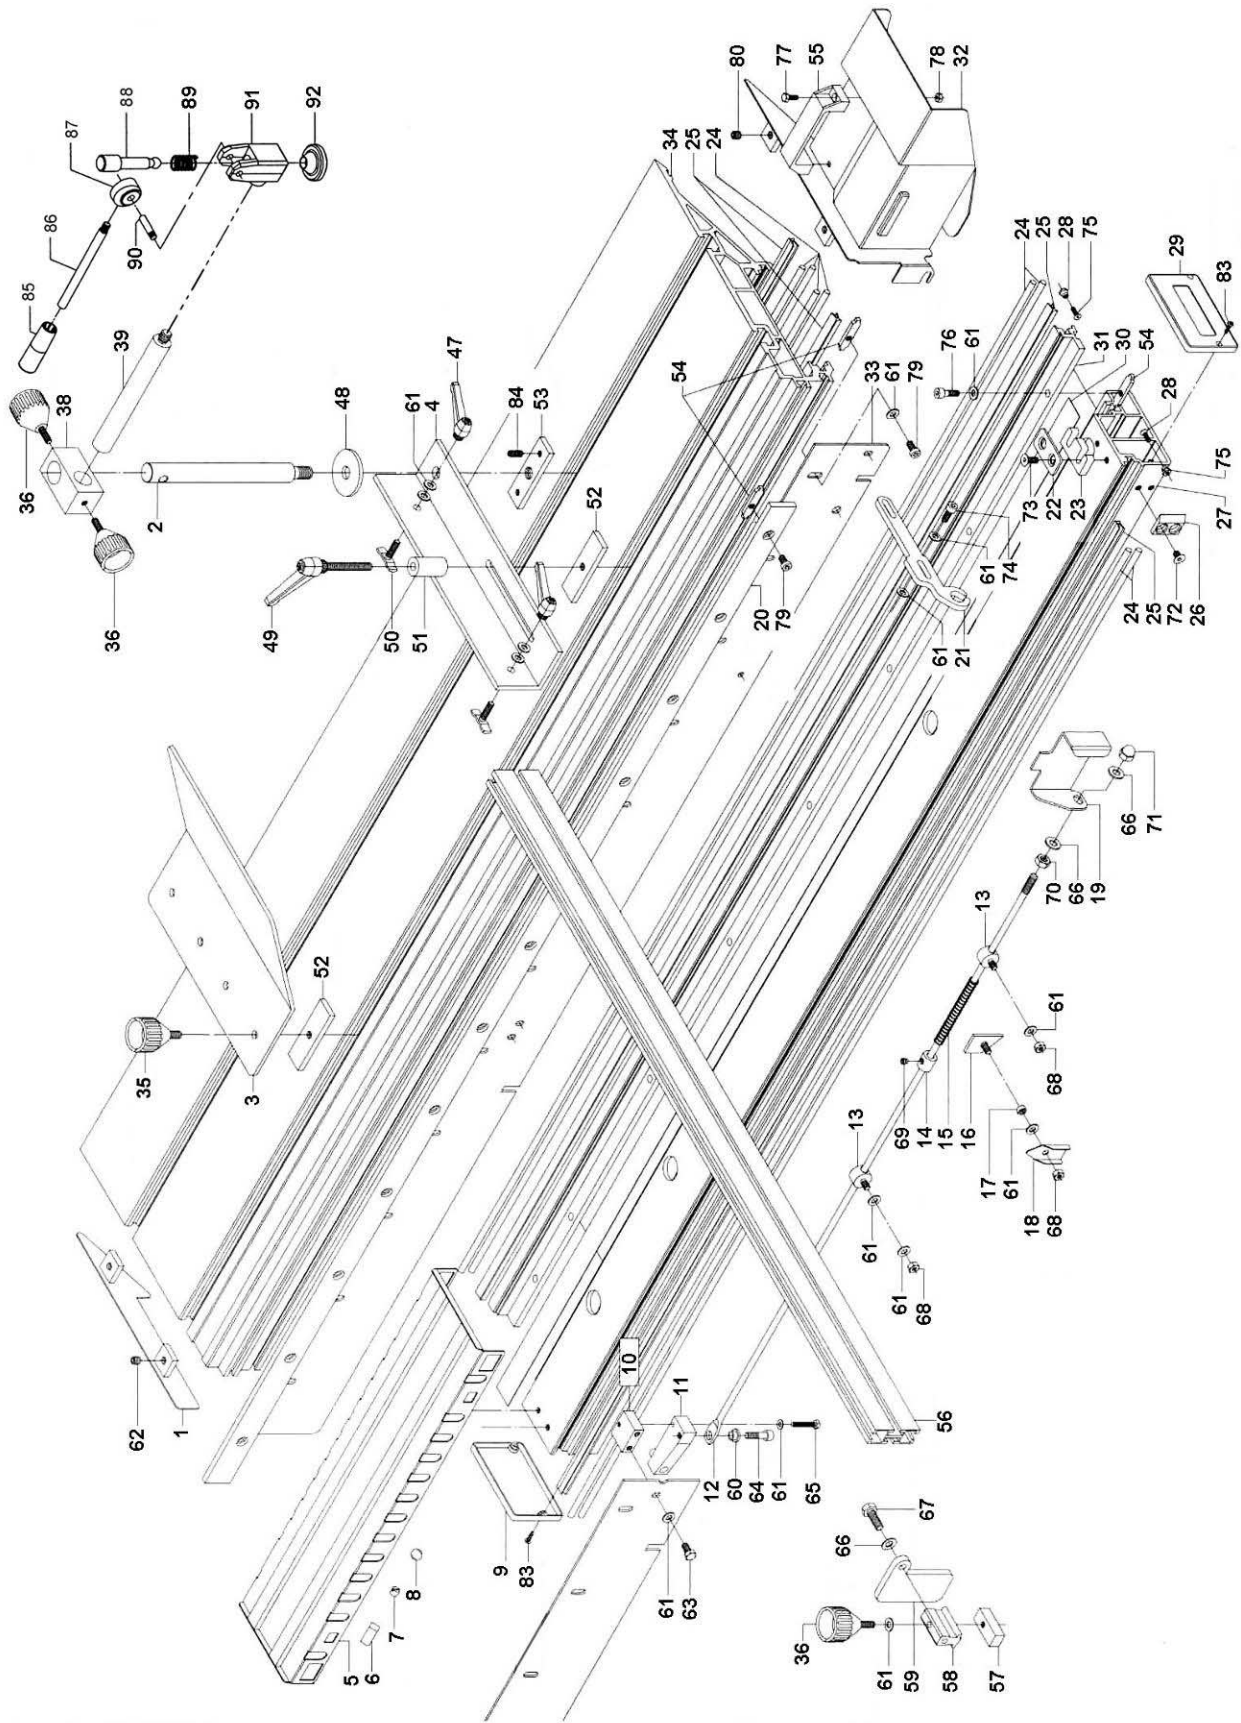


Parts List: Support Arm Assembly

(Exploded view on page 45)

Index No.	Part No.	Description	Size	Qty
1	HPS126-501	Support Arm		1
2	HPS126-502	Stop Block		1
3	HPS126-503	Washer		1
4	HPS126-504	Table		1
5	HPS126-505	Washer		1
6	HPS126-506	Stop Shaft		1
7	HPS126-507	Bushing		1
8	HPS126-508	Scale Plate		1
9	HPS126-509	Handle		1
10	HPS126-510	Support Nut		2
11	HPS126-511	Lock Block		2
12	HPS126-512	Threaded Rod		1
13	HPS126-513	Fixed Plate		2
14	HPS126-514	Guide Block		1
15	HPS126-515	Idle Bushing		1
16	BB-6003ZZ	Ball Bearing		7
17	HPS126-517	Guide Block		1
18	HPS126-518	Bushing		1
19	HPS67-613	Hand Knob		1
20	HPS126-520	Pivot Shaft		1
21	HPS126-521	Threaded Rod		1
22	HPS126-522	Support Nut		1
23	HPS126-523	Spool Cylinder		4
24	HPS126-524	Shaft		3
26	HPS126-526	Shaft		1
27	HPS126-527	Arm Tube		1
28	HPS126-528	Side Plate		1
29	HPS126-312	End Cap		2
30	HPS126-530	Arm Stop		1
31	HPS67-516	Retainer Ring		4
32	HPS126-205	Retainer Ring	N472-35	4
33	HPS126-533	Brush		4
34	HPS126-534	Cover		1
35	HPS126-535	Cover		1
36	BB-6304ZZ	Ball Bearing		3
37	HPS126-537	Washer		1
38	HPS126-538	Pivot Shaft		1
39	HPS126-539	Bearing Housing		1
40	HPS126-540	Retainer Ring	N472-52	1
41	HPS126-541	Handwheel		1
42	HPS126-239	Locking Knob		1
43	HPS126-543	Nut		1
44	HPS126-544	Washer		4
45	HPS126-545	Bolt		4
46	HPS126-546	Bushing		1
47	HPS126-547	Handle		1
48	HPS126-548	Spring		1
49	TS-1550061	Flat Washer	M8	8
50	TS-2311081	Hex Nut	M8	2
51	TS-1515021	Flat Head Socket Cap Screw	M8 x 20	2
52	TS-2248121	Flat Head Socket Cap Screw	M8 x 20	4
53	TS-1490101	Hex Cap Screw	M8 x 55	2
54	TS-1504081	Socket Head Cap Screw	M8 x 40	3
55	TS-1482061	Hex Cap Screw	M6 x 30	2
56	TS-2311101	Hex Nut	M10	2
57	TS-1491121	Hex Cap Screw	M10 x 70	1

58.....	TS-1550071	Flat Washer.....	M10.....	2
59.....	TS-2311101	Hex Nut.....	M10.....	2
60.....	TS-1504021	Socket Head Cap Screw.....	M8 x 12	6
61.....	TS-2312241	Hex Jam Nut	M24.....	2
62.....	TS-1490021	Hex Cap Screw	M8 x 16	10
63.....	TS-1503041	Socket Head Cap Screw.....	M6 x 16	6
64.....	TS-1550041	Flat Washer.....	M6.....	6
65.....	TS-1524051	Socket Set Screw	M8 x 20	1
66.....	TS-2279351	Socket Set Screw	M10 x 35	2
67.....	TS-2239911	Socket Head Cap Screw.....	M10 x 100	1
68.....	TS-1504041	Socket Head Cap Screw.....	M8 x 20	1
69.....	TS-2360121	Flat Washer.....	M12.....	1

Support Arm Assembly

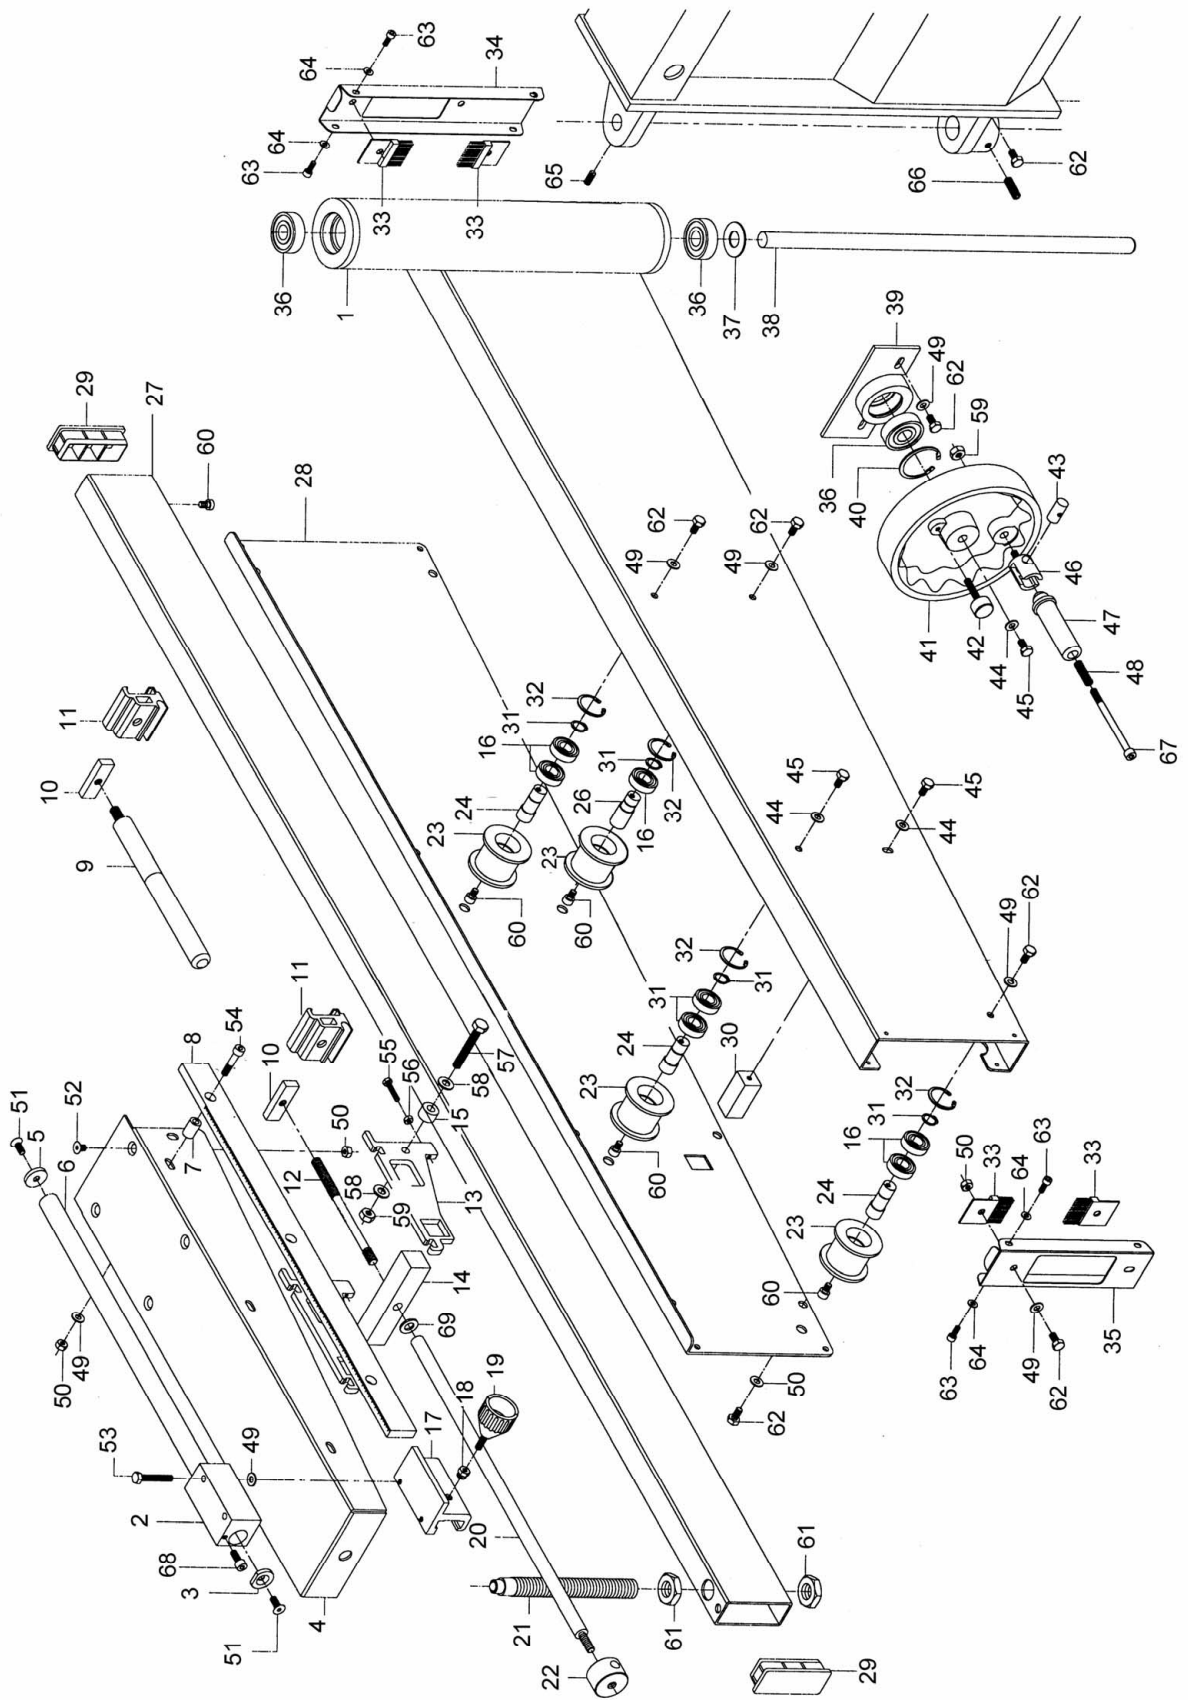


Parts List: Crosscut Fence Assembly

(Exploded view on page 48)


Index No.	Part No.	Description	Size	Qty
1	HPS126-601	Cross Cut Fence (Short)		1
2	HPS67-430	Handle		1
3	HPS126-603	Shaft		1
4	HPS126-604	Support Guide		1
5	HPS67-614	Square Nut		1
6	HPS126-606	Bushing		1
7	HPS126-607	T-Bolt		1
8	HPS126-608	Scale Plate (Short)		1
9	HPS126-609	Scale Plate (Long)		1
10	HPS126-610	Scale (Short)		1
11	HPS126-611	Scale (Long)		1
12	HPS126-612	Lens		1
13	HPS126-613	Cross Cut Fence (Long)		1
14	HPS126-614	Bushing		2
15	HPS126-615	Left Stop		1
16	HPS126-616	Guide Tube		1
17	HPS126-617	Scale Plate		1
18	HPS126-618	Scale		1
19	HPS126-619	Bracket		1
20	HPS126-620	Lens		1
21	HPS67-609	T-Bolt		1
22	HPS126-622	Right Stop		1
23	HPS126-248	Hand Knob		1
24	HPS126-624	Roll Shaft		1
25	HPS126-625	Roller		1
26	HPS67-619	Lock Knob		1
27	HPS67-620	Clamp		1
28	HPS126-628	Strap		1
29	HPS126-629	Bracket		1
30	HPS126-630	Bracket		1
31	HPS126-631	Support		1
32	HPS126-632	Plate		1
33	HPS67-627	Cross Tube		1
34	HPS126-419	Handle		1
35	HPS126-635	Table Bracket		1
36	HPS126-636	End Cap		2
37	HPS126-637	Strap Bracket		1
38	HPS126-638	Support Plate		1
39	HPS126-639	Self Tapping Screw	10 x 3/4	1
40	HPS126-640	Bracket		1
41	BB-6003ZZ	Ball Bearing		2
42	TS-2276081	Socket Set Screw	M6 x 8	1
43	HPS126-643	Stud	M10 x 80	1
44	TS-1514011	Socket Head Flat Screw	M6 x 12	12
45	TS-1524011	Socket Set Screw	M8 x 8	2
46	TS-1550061	Flat Washer	M8	8
47	TS-1490021	Hex Cap Screw	M8 x 16	1
48	TS-1504121	Socket Head Cap Screw	M8 x 60	2
49	TS-1525011	Socket Set Screw	M10 x 10	2
50	TS-1491021	Hex Cap Screw	M10 x 20	2
51	TS-1503021	Hex Cap Screw	M6 x 10	4
52	TS-1550041	Flat Washer	M6	4
53	TS-1550071	Flat Washer	M10	10
54	TS-1541031	Nylon Lock Hex Nut	M8	1
55	TS-1491121	Hex Cap Screw	M10 x 70	3
56	HPS126-656	Support Bracket		1

57.....	TS-2311061	Hex Nut.....	M6.....	2
58.....	TS-1550041	Flat Washer.....	M6.....	2
59.....	TS-1482081	Hex Cap Screw	M6 x 40	2
60.....	TS-2311081	Hex Nut.....	M8.....	2
61.....	TS-1504041	Socket Head Cap Screw.....	M8 x 20	2
62.....	TS-1490101	Hex Cap Screw	M8 x 55	2

Crosscut Fence Assembly

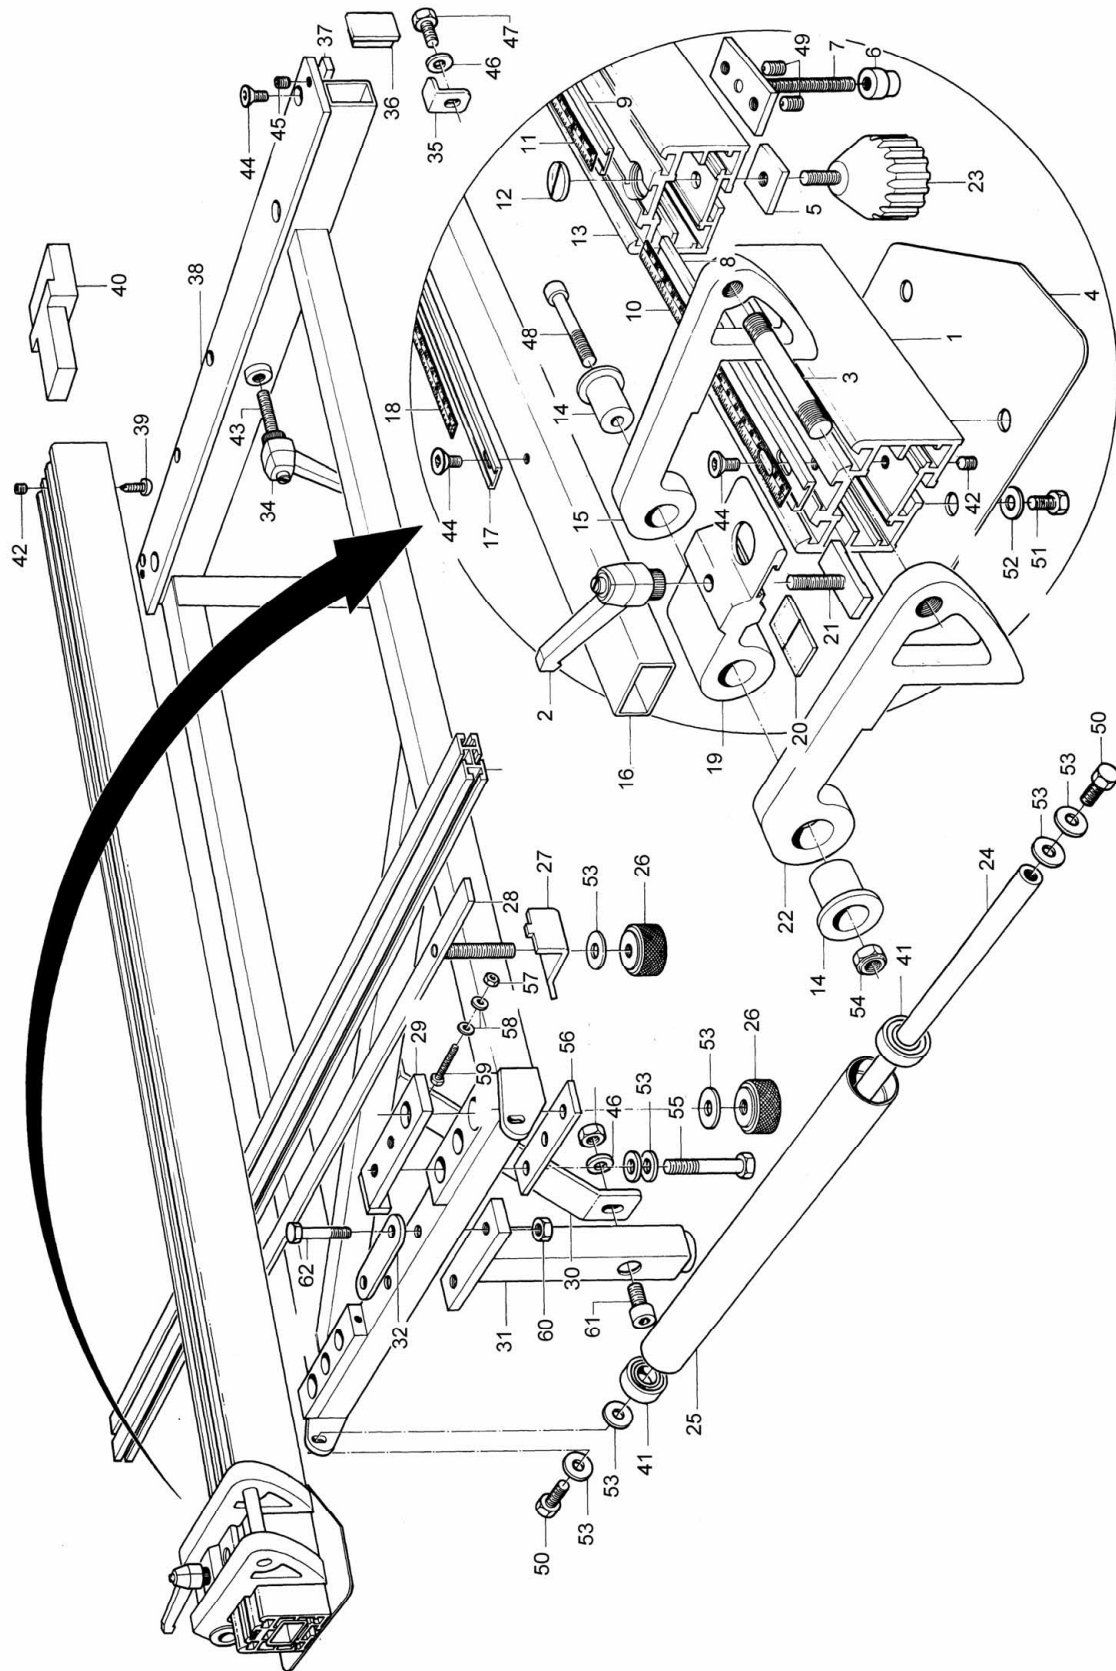

Electrical Wiring

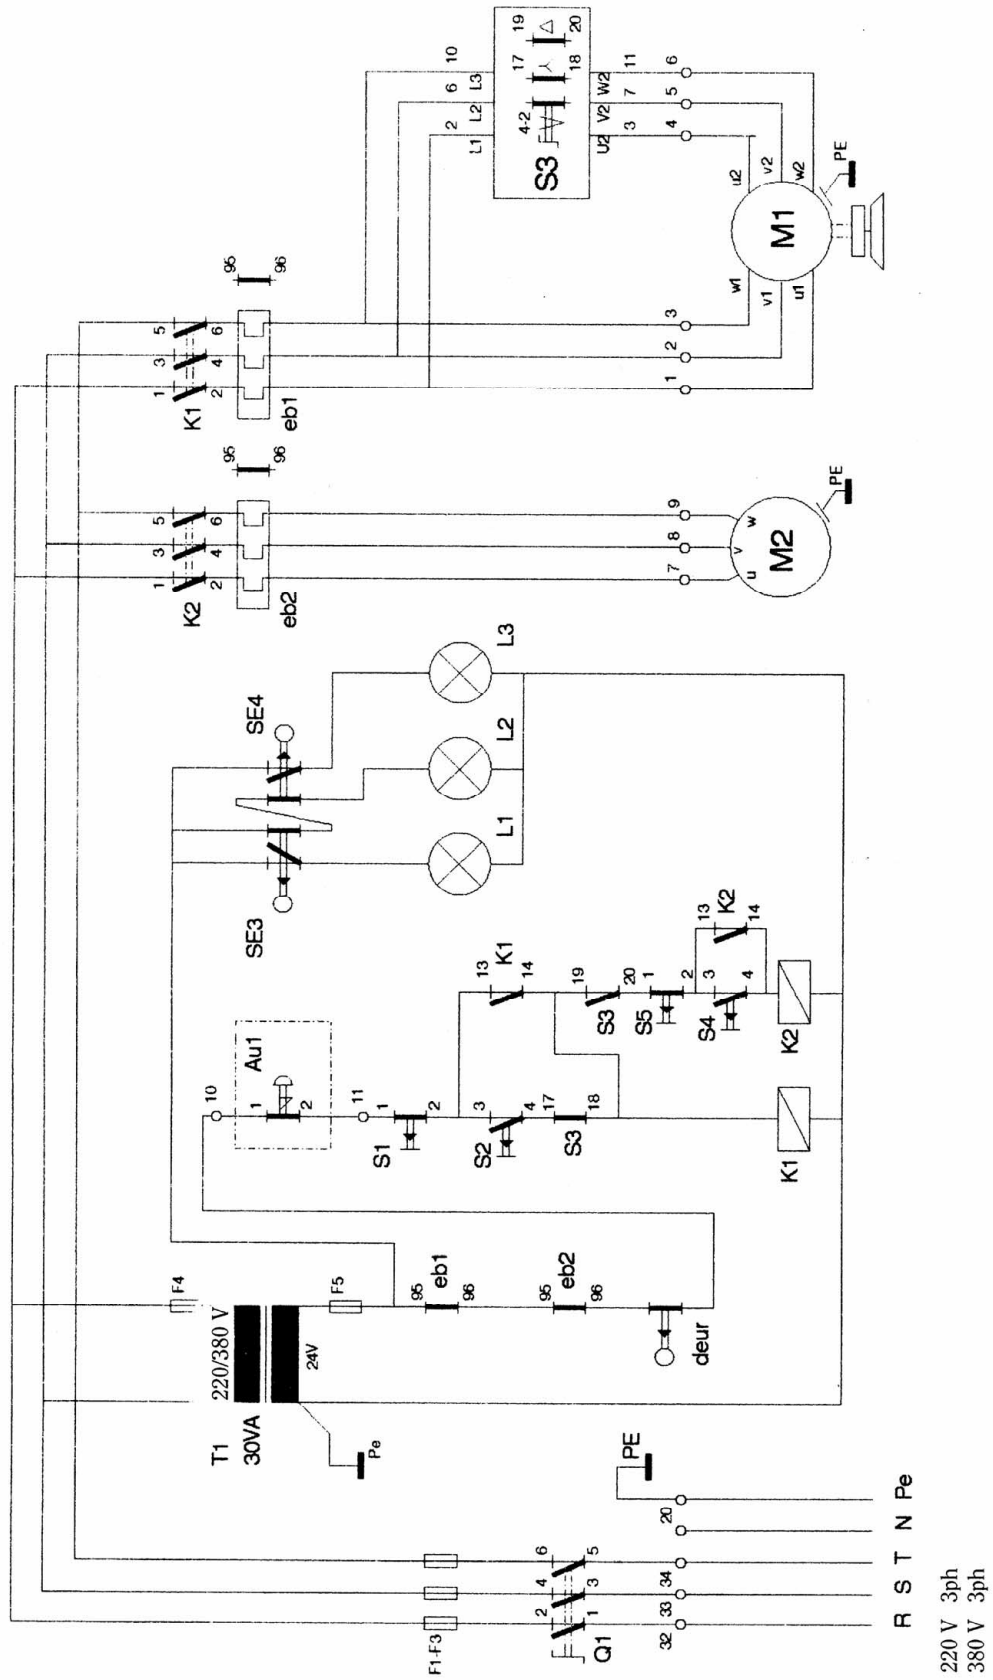

Parts List: Electrical Components Spare Parts

(see diagram on page 49)

Index No.	Part No.	Description	Size	Qty
HPS67-801		Main Switch		1
HPS126-801		Main Fuse	25A	3
HPS126-802		Primary Transformer Fuse	0.5A, 6 x 20mm	1
HPS126-803		Secondary Transformer Fuse	2A, 6 x 20mm	1
HPS126-804		Fuse Holder		1
HPS126-805		Thermal Overload Main Motor	16-22A	1
HPS126-806		Thermal Overload Scoring Motor	2.8-4.4A	1
HPS126-807		Micro Switch (for Door)		1
HPS67-808		Transformer	230-400-24V 40VA	1
HPS126-808		Emergency Stop Switch	AU1	1
HPS126-809		Magnetic Starter Main Motor		1
HPS126-810		Magnetic Starter Scoring Motor		1
HPS126-811		Micro Switch (RPM Indicator)		1
HPS126-812		Micro Switch (Saw Blade Cover)		1
HPS126-813		RPM Indicator Lights	24V	1
HPS67-811		Emergency Stop Switch	AU2	1
HPS67-812		Emergency Stop Electrical Cabinet		1
HPS67-814		Start (Saw Motor)		1
HPS67-815		Start (Scoring Motor)		1
HPS67-816		Star-Delta Switch	3.7 kW	1