



## Parts List for 1941 Type 4

Item Number	Part Number	Description	Qty Required
1	92555-00	CHUCK & KEY	1
2	000000-00	No Longer Available	1
3	000000-00	No Longer Available	1
4	000000-00	No Longer Available	3
5	000000-00	No Longer Available	1
6	000000-00	No Longer Available	1
7	091817-00	WASHER	2
9	091644-00	THRUST BEARING	1
12	000000-00	No Longer Available	4
13	000000-00	No Longer Available	2
14	000000-00	No Longer Available	1
15	000000-00	No Longer Available	1
16	000000-00	No Longer Available	1
17	330003-04	BEARING,BALL	1
19	000000-00	No Longer Available	1
20	000000-00	No Longer Available	1
21	000000-00	No Longer Available	1
22	000000-00	No Longer Available	1
23	000000-00	No Longer Available	1
25	000000-00	No Longer Available	1
26	000000-00	No Longer Available	1
27	000000-00	No Longer Available	1
28	000000-00	No Longer Available	1
29	000000-00	No Longer Available	1
30	000000-00	No Longer Available	1
31	330019-13	SCREW,M4X19	2
32	000000-00	No Longer Available	1

## Parts List for 1941 Type 4

Item Number	Part Number	Description	Qty Required
33	450054-00	BATTERY PACK	1
34	330034-00	KEY,CHUCK	1
35	91874-00	SPRING	1
36	000000-00	No Longer Available	1
37	000000-00	No Longer Available	1
38	000000-00	No Longer Available	2
39	000000-00	No Longer Available	2
40	000000-00	No Longer Available	1
41	000000-00	No Longer Available	2
42	000000-00	No Longer Available	1
43	000000-00	No Longer Available	1
101	65630-00	SCREW	1
800	429698-00	GREASE:4 LB CAN	1