
hazard.

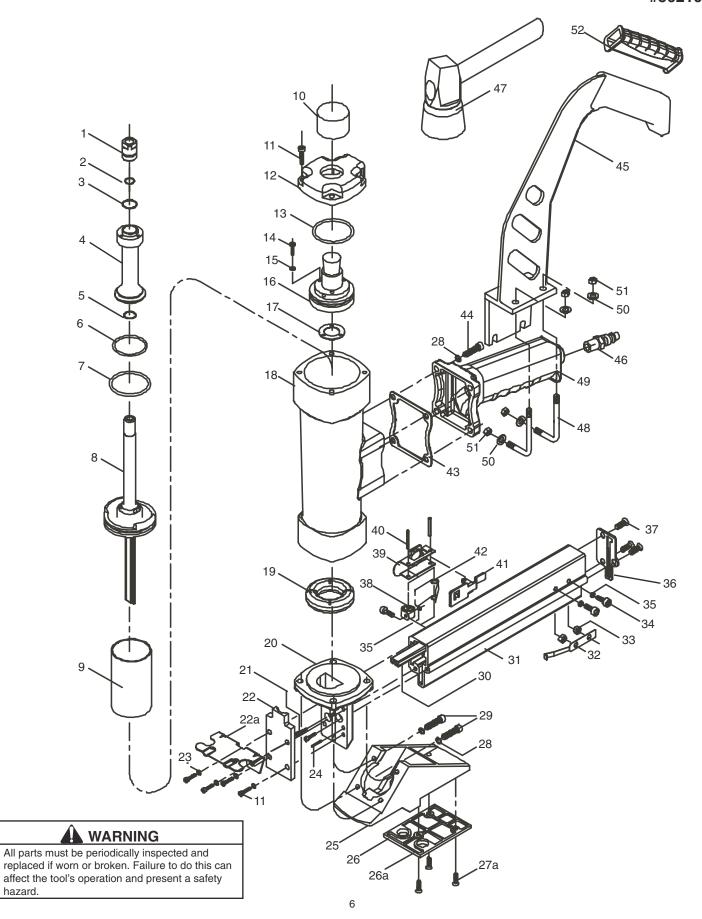

PARTS LEGEND L Cleat Nailer - 502190

LVIII	LEGEND	L Oleat Haller	00210			
Key#	Part#	Description		Key#	Part#	Description
1	501783	Plunger		27a	501809	Screw
2	501784	O-Ring		28	501810	Spring Washer
* 3	501785	O-Ring		29	502114	Screw
4	501786	Poppet		30	502208	Rail
*5	501787	O-Ring		31	502209	Magazine
*6	501788	O-Ring		32	502211	Spring
*7	501789	O-Ring		33	502212	Nut
8	502202	Piston Assembly		34	502213	Screw
9	501791	Cylinder Bushing		35	502214	Washer
10	501792	Hammer Face		36	502215	Magazine Cap
11	501793	Screw		37	502216	Screw
12	501794	Cylinder Cap		38	502217	Coil Spring Assembly
*13	501795	O-Ring		39	502218	Bracket
14	501796	Screw		40	502219	Lock Pin
15	501797	Spring Washer		41	502220	Feeder Shoe
16	501798	Poppet Actuator		42	502221	Torsion Spring
*17	501799	Gasket		43	501826	Seal
18	501800	Body		44	501827	Screw
*19	501801	Bumper		45	502196	Arm
20	502203	Nose		46	501829	Air Plug
21	501803	Screw		47	219297	Mallet
22	502204	Blade Guide		48	502197	Clamp Screw
22a	502205	Baffle Plate		49	502198	Short Arm
23	502206	Spring Washer		50	502199	Washer
24	502207	Spring Pin		51	502201	Nut
25	502111	Shoe		52	502252	Soft Grip Sleeve
26	501808	Spacer-installed for 3/4" flo	oring			
26a	501996	Spacer-included for 1/2" flo	ooring			

- * Denotes Normal Wear Items.
- → Denotes New Change

SAFETY INSTRUCTIONS

WEAR EYE AND HEARING PROTECTION



Always wear hearing protection and eye protection devices, including side shields when operating or working in the vicinity of a tool.



DO NOT EXCEED MAXIMUM RECOMMENDED AIR PRESSURE



0 0

Operate the tool using only the recommended air pressure. Do not exceed the maximum air pressure marked on the tool. Be sure the air pressure gauge is operating properly and check it at least twice a day.

Never use any bottled air or gases such as oxygen to operate the tool since they could cause the tool to explode.