


Ref #	Part #	Description	Qty
1	940752001	Logo Label	1
2	940647012	Choke Label	1
3	308680001	Fuel Cap	1
4	678435001	Nylon Nut (M5)	1
5	678434002	Wavy Washer (M5)	1
6	678434001	Washer (M5)	1
7	518496001	Choke Dial Cover	1
8	940734015	Starting Label	1
9	518538001	Top Volute	1
10	518540001	Upper Nozzle	1
11	660674001	Screw (10-14 x 7/8 in.)	4
12	660970004	Screw (M4 x 77.5 mm)	1
13	678126005	Washer	1
14	518265002	Fan	1
15	650016001	Washer	1
16	660730001	Nylon Hex Nut (3/8-24)	1
17	518539001	Bottom Volute	1
18	660629001	Screw (10-14 x 3/4 in.)	9
19	518543001	Volute Plate	1
20	660621001	Screw (10-14 x 1/2 in.)	1
21	518537001	Handle	1
22	870174001	Spark Plug	1
	987000046	Operator's Manual (960477001)	

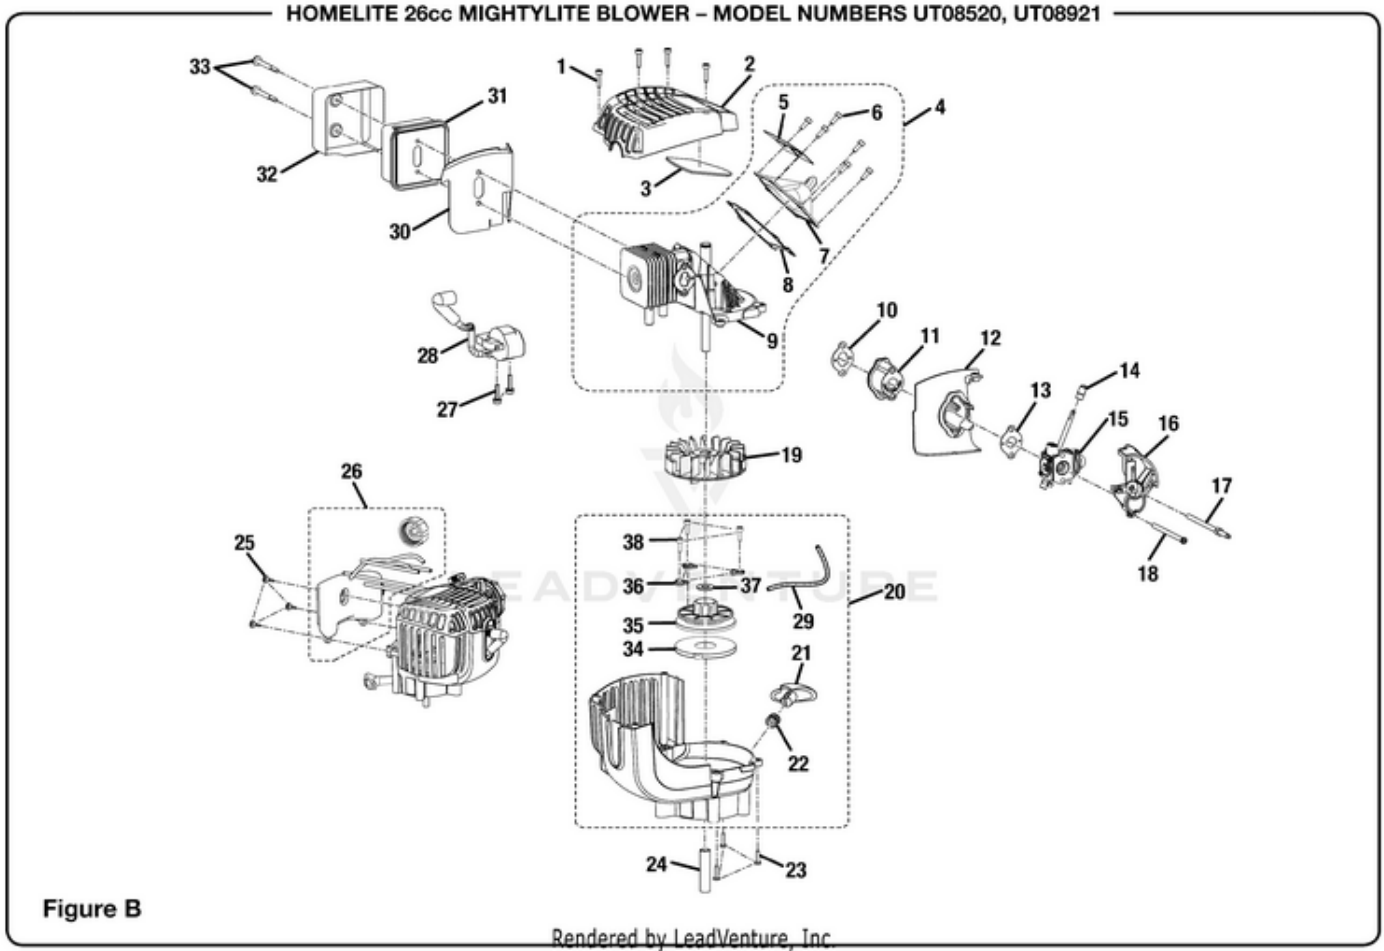

Ref #	Part #	Description	Qty
1	660466001	Screw (M4 x 18 mm)	4
2	518535001	Upper Housing	1
3	900951006	Heat Shield Gasket	1
4	309960001	Short Block Assembly	1
5	638442003	Cylinder Heat Shield	1
6	660925003	Screw (M4 x 12 mm)	6
7	638337001	Crankcase Cover	1
8	901550001	Crankcase Cover Gasket	1
9	640099001	Cylinder	1
10	901551001	Intake Gasket	1
11	518497001	Heat Dam	1
12	518690001	Baffle Plate	1
13	901552001	Carburetor Gasket	1
14	518709001	Throttle Lever	1
15	308028007	Carburetor	1
16	518532001	Air Box Base	1
17	660453001	Double Sided Hex Bolt	1
18	660454001	Screw (M5 x 70 mm)	1
19	308674001	Flywheel Assembly	1
20	308889001	Lower Housing with Starter Assembly	1
21	518502001	Starter Grip	1
22	638088002	Eyelet	1
23	660970001	Screw (M4 x 16 mm)	3
24	638091006	Crankshaft Spacer	1
25	660970002	Screw (M4 x 10 mm Shoulder)	3
26	308675002	Fuel Tank with Cap Assembly	1
27	660968001	Screw (M4 x 9 mm)	2
28	850108001	Ignition Module	1
29	900849002	Starter Rope	1
30	901452003	Gasket Muffler	1
31	308990003	Muffler Assembly	1
32	638442002	Heat Shield	1
33	660638003	Screw (M4 x 18 mm)	2
34	638033001	Spring & Container Assembly	1
35	518501001	Starter Pulley	1
36	638389001	Pulley Retainer	3
37	650017001	Flat Washer	1
38	660967001	Screw (M4 x 14 mm)	3