

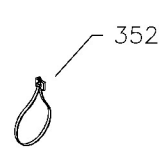
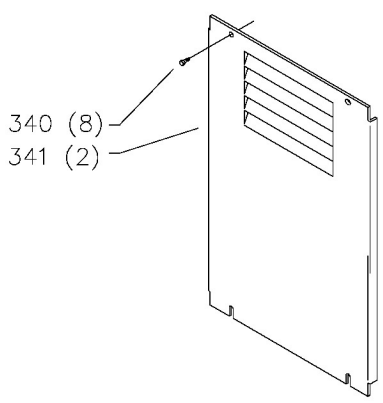
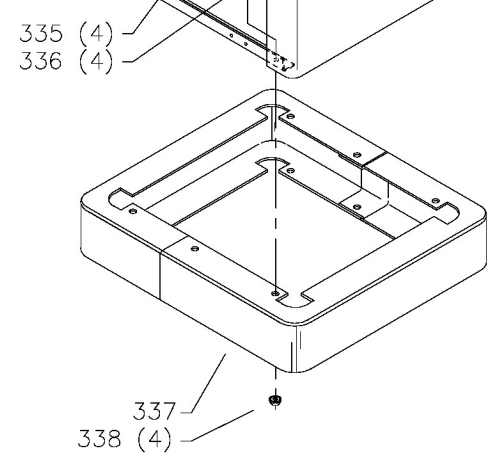


PUSH BUTTON
TYPE

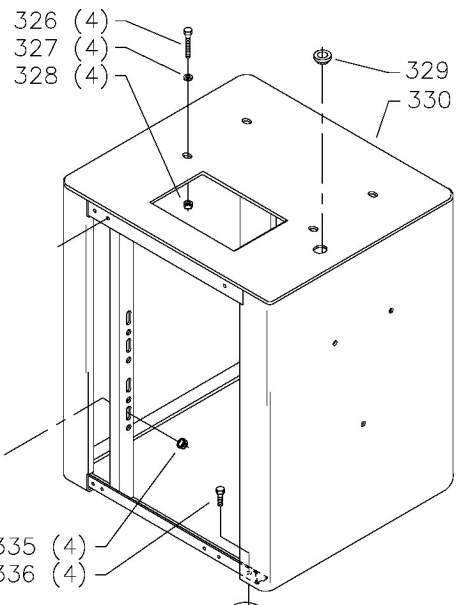

364— MOTOR/SAW MTG.
HARDWARE PACK

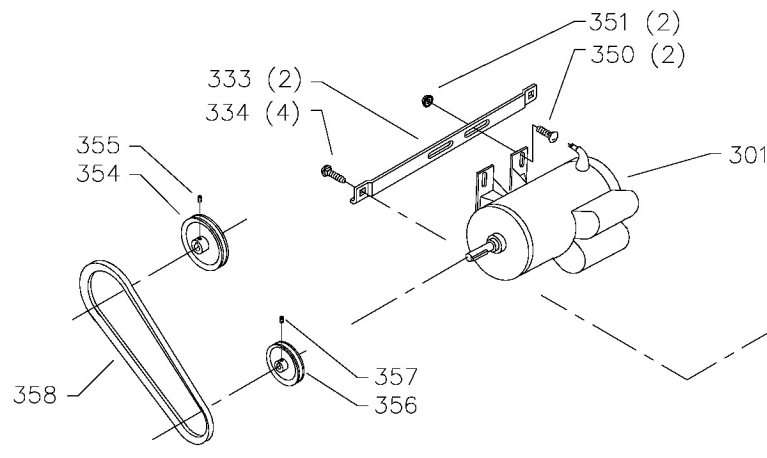