



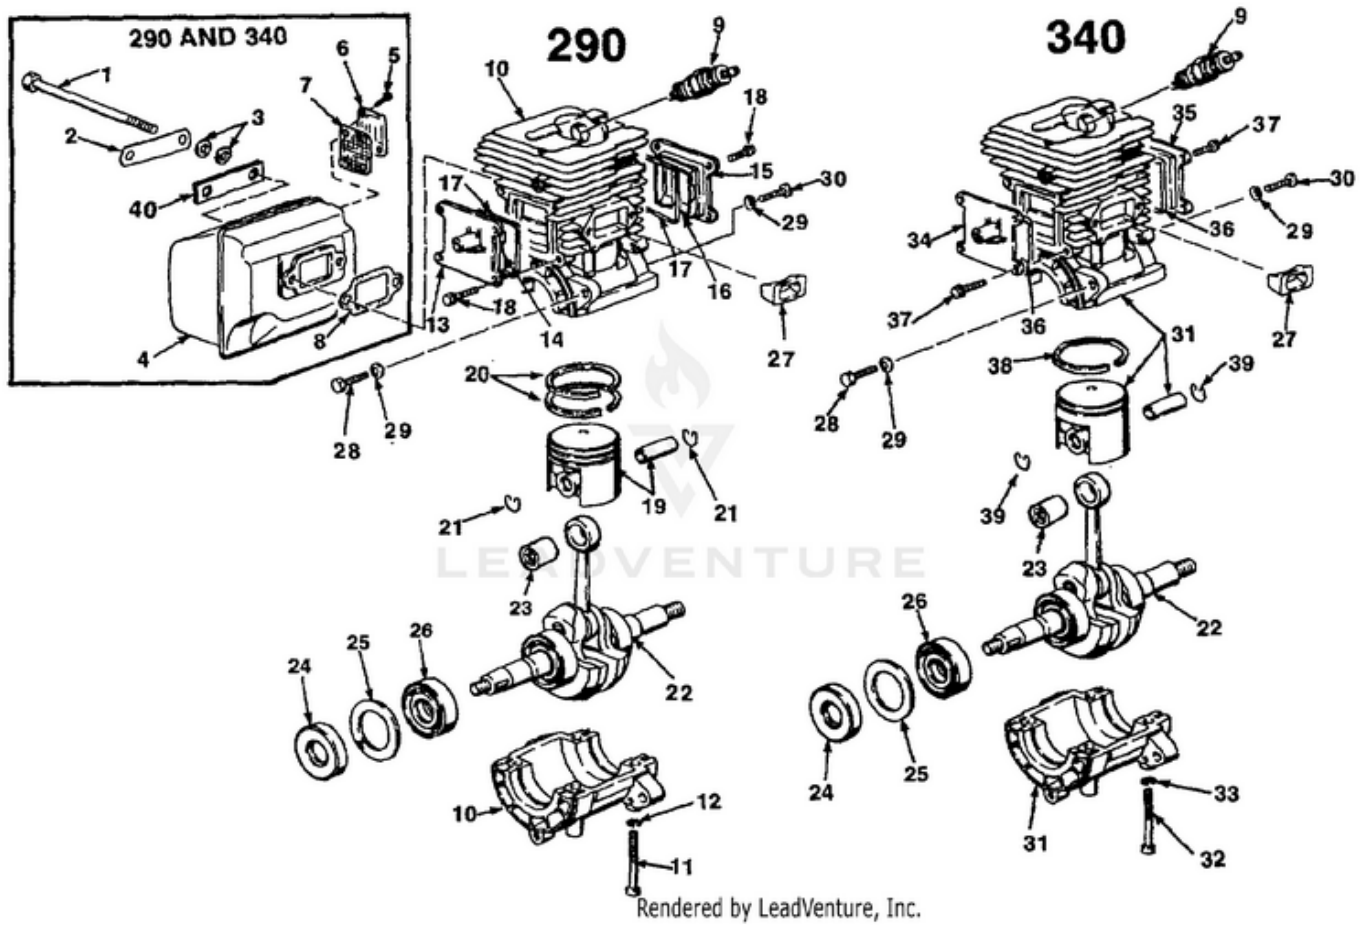


Ref #	Part #	Description	Qty
1	88137	SCREW-(M6 x 90)	2
2	98242	PLATE-Locking	1
3	98446	WASHER-Belleville	4
4	A98233	MUFFLER ASSEMBLY	1
5	88156	SCREW	2
6	98500	COVER-Muffler	1
7	98499	SPARK ARRESTOR	1
8	98241	MUFFLER GASKET	1
9	93561S	SPARK PLUG (Champion CJ6Y)	1
	88217	SPARK PLUG (Champion RCJ6Y)	1
10	A98444	CRANKCASE & CYLINDER	1
11	88133	SCREW-M5 x 45	4
12	83200	WASHER-Lock	4
13	982121	COVER-Transfer port	1
14	98470	INSERT-Transfer port	1
15	98208	COVER-Transfer port	1
16	98469	INSERT-Transfer port	1
17	98215	"O" RING	2
18	88134	SCREW-M4 x 12	8
19	A98511	PISTON & PIN ASSEMBLY	1
20	98439	PISTON RING	2
21	98198	RING-Piston pin retaining	2
22	A98189	CRANKSHAFT ASSEMBLY	1
23	98194	BEARING-Needle roller	1
24	98197	SEAL-Main	2
25	98195	RETAINER-Bearing	2
26	98196	BEARING- Ball	2
27	98216	INSERT-INTAKE PORT	1
28	88136	SCREW-(M5 x 23)	4
29	83203	WASHER-Flat (M5)	7
30	88135	SCREW-(M5 x 18)	3
31	A98510	CRANKCASE & CYLINDER W/Piston Assembly (Matched)	0
32	88133	SCREW	0
33	83200	WASHER-Lock	0
34	A98211	TRANSFER PORT COVER ASSEMBLY	0
35	A98207	TRANSFER PORT COVER ASSEMBLY	0
36	98215	"O" RING	0
37	88134	SCREW (M4 x 12)	0
38	98206	PISTON RING	0
39	98198	RING-Piston pin retaining	0
40	98616	PLATE-Support	1

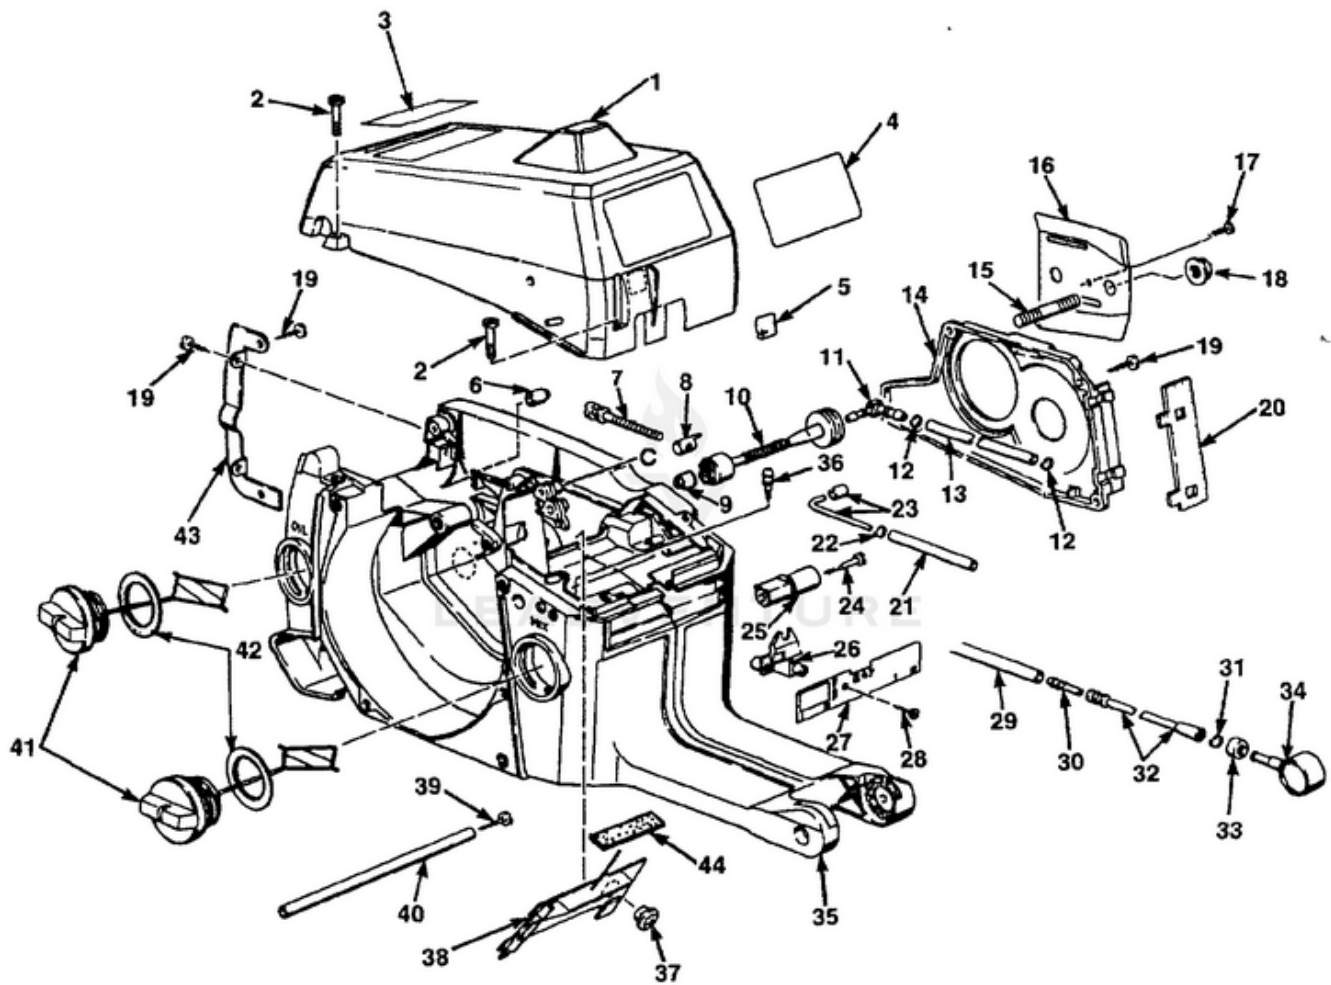

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	98403	COVER-Cylinder	1
2	88142	SCREW	3
3	96990	DECAL-Safety instruction	1
4	98186	DECAL-(290)	1
5	98338	DECAL-Choke	1
6	A98279	VALVE-Check	1
7	88140	SCREW-Guide bar adjusting	1
8	98452	PIN-Guide bar adjusting	1
9	A98272	STRAINER-Oil	1
10	98271	TUBE-Oil	1
11	98270	FITTING-Elbow	1
12	98269	CLAMP-Wire	2
13	9823203	TUBING-Rubber (oil line) 3"	1
14	98275	COVER-Oil pump	1
15	98229	STUD-Guide bar	2
16	98278	PLATE-Guide bar	1
17	80513	SCREW-(3.5 x 6.5)	1
18	81401	NUT-W/washer	2
19	98460	SCREW-(4 x 13)	9
20	98276	PROTECTOR-Engine housing	1
21	9823204	TUBING-Rubber (oil line) 7 1/2"	1
22	98268	CLAMP-Wire	1
23	A98478	OIL TUBE KIT	1
24	88157	SCREW (4.2 x 32)	1
25	98277	CHAIN STOP	1
26	98386	SUPPORT-Choke lever	1
27	984671	PLATE-Switch	1
28	88149	SCREW (2.9 x 9.5)	1
29	9823202	TUBING-Rubber (1 1/4")	1
30	98354	FITTING-Hose	1
31	98356	CLAMP-Wire	1
32	98353	LINE-Fuel pick-up	1
33	98360	WEIGHT-Fuel pick-up	1
34	A98357	FUEL FILTER ASSEMBLY	1
35	A98218	ENGINE HOUSING	1
36	98227	FITTING-Tube	1
37	98392	PLUG-Baffle	1
38	98390	BAFFLE-Cylinder	1
39	88150	SCREW (3 1/2 x 19)	1
40	9823205	TUBING-Rubber (vent) 8"	1
41	A98393	CAP-Oil & Fuel w/retainer	2
42	98395	GASKET-Oil & Fuel	2
43	98294	PLATE-Bumper	1
44	98391	STRIP-Felt	1

290 Chain Saw UT-10661 10661-UT 290 Chain Saw UT-10661 290 Chain Saw - Handles & Chain Brake

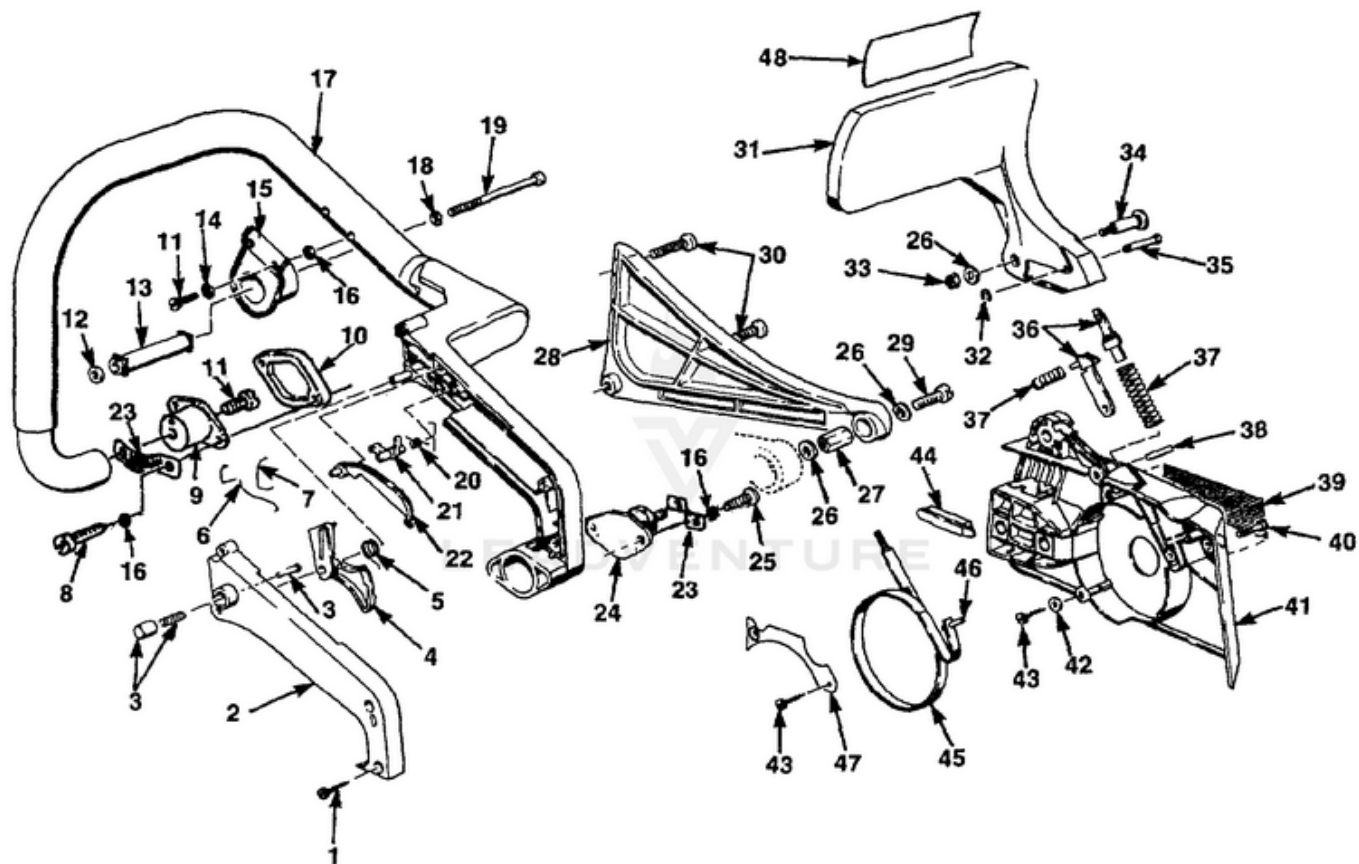


Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	88150	SCREW-(3 1/2 x 19)	4
2	98417	COVER-Throttle handle	1
3	A98479	KIT-Throttle lock	1
4	98412	TRIGGER-Throttle	1
5	96413	SPRING-Throttle	1
6	98363	LINK-Throttle	1
7	98364	LINK-Throttle	1
8	88153	SCREW-(4.22 x 22)	2
9	A98420	ISOLATOR	1
10	98429	ISOLATOR SAFETY SPACER	1
11	88153	SCREW-(M5 x 12)	3
12	83210	WASHER-Flat	1
13	98430	SPACER-Isolator	1
14	83208	WASHER-Lock	2
15	A98426	HANDLE BAR ISOLATOR	1
16	83212	WASHER	4
17	A98404	HANDLE BAR ASSEMBLY	1
18	98432	WASHER-Lock	1
19	88152	SCREW-(M6 x 65)	1
20	98415	SPRING-Torsion	1
21	98414	LEVER-Throttle lock	1
22	98416	LOCK-Throttle	2
23	98400	STRAP-Isolator	1
24	98398	ISOLATOR	2
25	88139	SCREW (4.2 x 16)	3
26	83203	WASHER-Lock	1
27	81409	NUT	1
28	98431	HAND GUARD (rear)	1
29	88154	BOLT (M5 x 10)	1
30	98433	SCREW (4 x 20)	2
31	98306	HAND GUARD	1
32	83204	RING-Retaining	1
33	98457	NUT	1
34	98461	SCREW-Shoulder	1
35	98422	PIN	1
36	A98481	ADJUSTMENT SET	1
37	A98480	SPRING SET	1
38	98456	PIN	1
39	98185	DECAL-Homelite	1
40	88142	SCREW-(5 x 20)	1
41	A98296	DRIVE CASE COVER ASSEMBLY	1
42	83205	WASHER	1
43	88148	SCREW (3.5 x 13)	3
44	98309	GUIDE-Chain	2
45	A98298	BRAKE BAND ASSEMBLY	1

Ref #	Part #	Description	Qty
46	98447	PIN-Dowel	1
47	98307	COVER-Plate	1
48	98653	DECAL	1


290 Chain Saw UT-10661 10661-UT 290 Chain Saw UT-10661 290 Chain Saw - Intake Assy

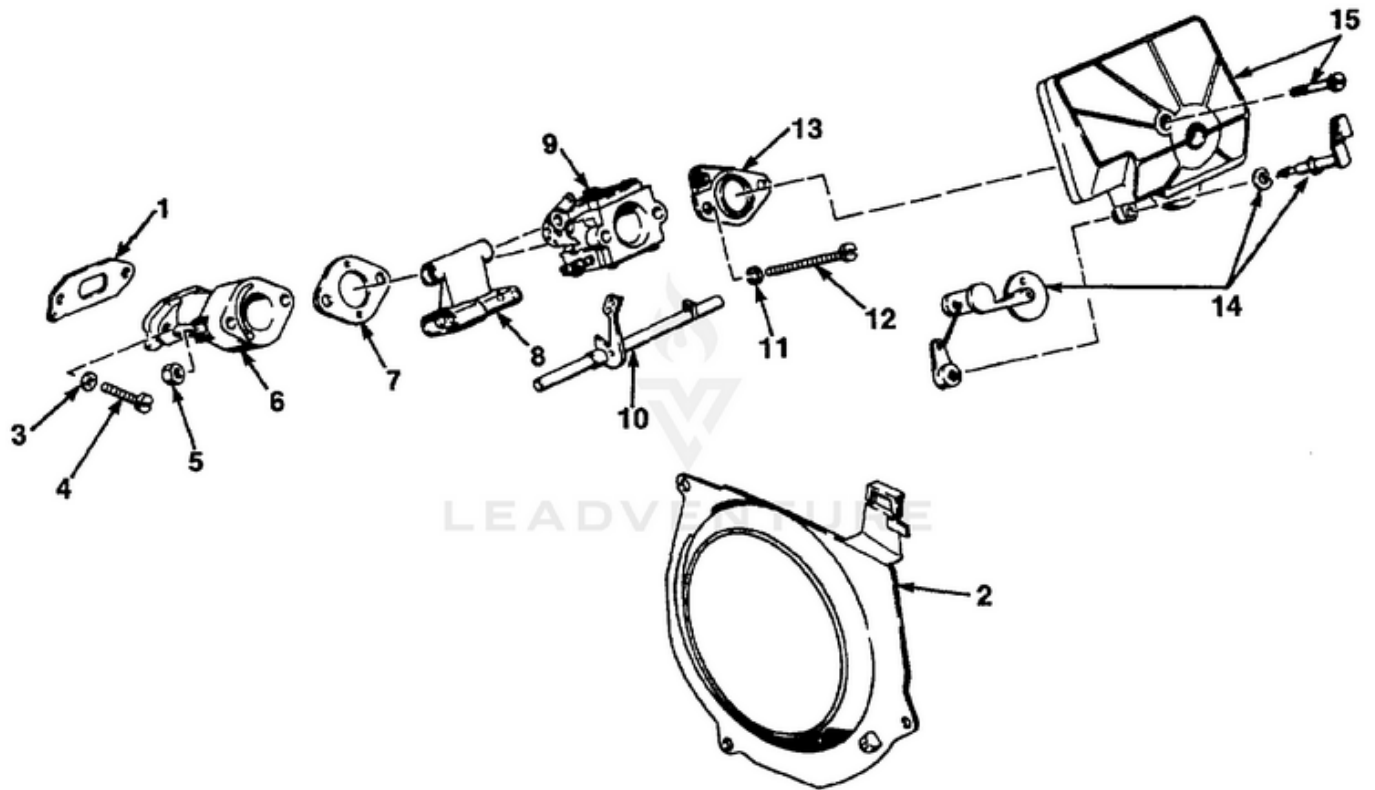

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	98335	GASKET-Intake manifold	1
2	98319	GUIDE-Air	1
3	83203	WASHER-Spring	2
4	98459	SCREW (M5 x 20)	2
5	81405	NUT (M5)	2
6	983371	MANIFOLD-Intake	1
7	98339	GASKET-Carburetor	1
8	98361	GUIDE-Carburetor screw	1
9	A98340	CARBURETOR (HU63A) (Till.)	1
10	98362	SHAFT-Throttle	1
11	83208	WASHER-Spring	2
12	88143	SCREW-(M5 x 45)	2
13	98351	PLATE-Filter mounting	1
14	A98486	KIT-Choke lever	1
15	A98487	AIR FILTER ASSEMBLY	1
	9850801	SLEEVE	2

290 Chain Saw UT-10661 10661-UT 290 Chain Saw UT-10661 290 Chain Saw - Starter, Ignition, Clutch & Oil Pump

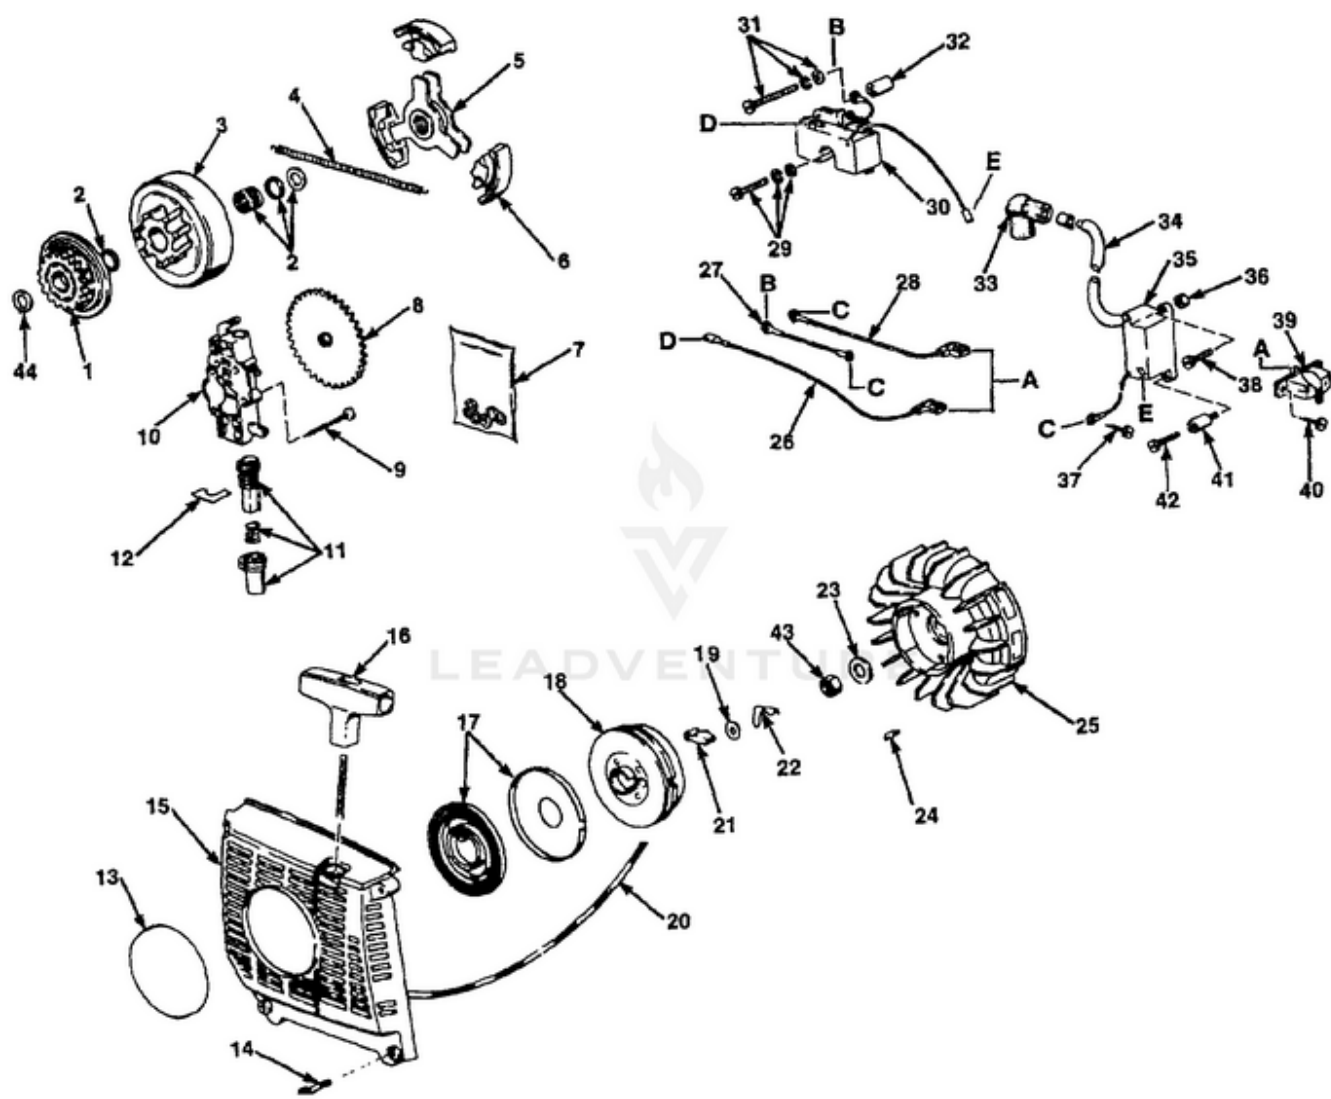


Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	98474	ACTIVATOR-3/8 P., 7T	1
	98280	ACTIVATOR-(opt.), 325, 8T	1
2	A98482	NEEDLE BEARING KIT	1
3	A98473	SPROCKET & DRUM, 3/8 P, 7 T.	1
	A98281	SPROCKET & DRUM, .325 P, 8 T.	1
4	98453	SPRING-Clutch	1
5	A98289	SPRING-Clutch	1
6	98292	SHOE-Clutch	3
7	A98484	KIT-Pump repair	1
8	A98263	GEAR & HUB ASSEMBLY	1
9	88138	SCREW-(4.2 x 32)	3
10	A98244	OIL PUMP ASSEMBLY	1
11	A98483	REGULATOR REPAIR KIT	1
12	98266	PLATE-Support	1
13	98187	DECAL-Starter (290)	1
14	88142	SCREW (5 x 20)	1
15	98321	HOUSING-Starter	1
16	98331	GRIP-Starter	1
17	A98326	SPRING & CONTAINER	1
18	98329	PULLEY-Starter	1
19	98423	WASHER	1
20	A98485	STARTER PAWL & ROPE KIT	1
21	98332	STARTER PAWL	1
22	98334	CLIP-Retaining	1
23	83207	WASHER-Flat	1
24	98318	KEY-Woodruff	1
25	A98310	ROTOR	1
26	A98373	WIRE-Ground	1
27	A98372	CABLE-Insulated	1
28	A98374	CABLE-Insulated	1
29	88145	SCREW-F.H. (5 x 20)	1
30	98365	MODULE & CORE	1
31	88144	SCREW-F.H. (5 x 30)	1
32	98367	SPACER	1
33	A98369	TERMINAL-Spark plug	1
34	98376	TUBING-Silicon 3 1/2"	1
35	98366	COIL-Ignition	1
36	81403	NUT	1
37	98375	SCREW (3.9 x 13)	1
38	88146	SCREW-F.H. (4 x 14)	1
39	98377	SWITCH (on/off)	1
40	88148	SCREW (3.5 x 13)	1

Ref #	Part #	Description	Qty
41	98368	STUD	1
42	88147	SCREW (F.H. 4 x 18)	1
43	81402	NUT-Hex	1
44	98475	WASHER	1

290 Chain Saw UT-10661 10661-UT 290 Chain Saw UT-10661 290 Chain Saw - Carburetor

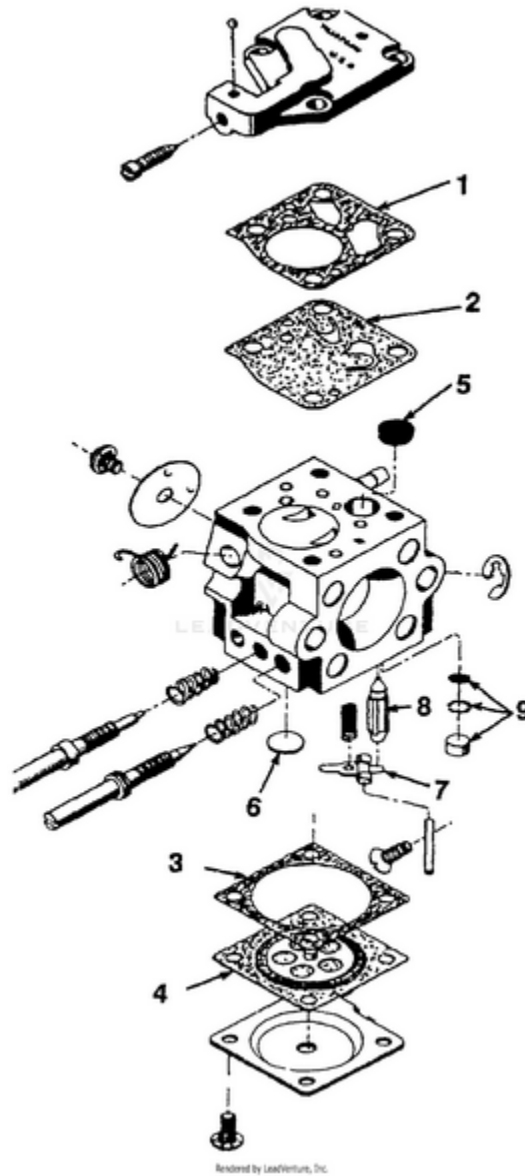

Ref #	Part #	Description	Qty
	A98340	CARBURETOR (HU63A)	
	A98493	GASKET/ DIAPHRAGM KIT	
	A98494	REPAIR KIT	
1			
2			
3			
4			
5			
6			
7			
8			
	98492	CHECK VALVE KIT	
9			

No
Diagram
Available



LEADVENTURE

Parts List
Only

Ref #	Part #	Description	Qty
	98293	BUMPER SPIKE	
	98488	ROTOR REMOVAL TOOL	
	98489	FLYWHEEL HOLDER TOOL	
	98437	COMBINATION WRENCH	
	24823	SILICONE SEALANT	
JA313164		IGNITION TEST SPARK PLUG	
	17789	CARBURETOR REPAIR TOOL KIT	
	17193	MULTI-PURPOSE GREASE	