

Key No.	Part No.	Description	Key No.	Part No.	Description
1	530 02 79-00	Kill Switch Bracket	31	530 09 47-59	Hub Ass'y.
2	530 02 75-88	Handlebar Cap	32	952 70 85-28	Spool w/Line
3	530 01 09-65	Throttle Lever Ass'y. w/ Lock (Incl. #4 & 7)	33	530 09 44-94	Cover
4	530 01 57-68	Nut	35	530 09 46-40	Seal
5	530 02 76-89	Spacer	36	530 09 46-39	Dust Cup
6	530 02 35-75	Nut	38	530 09 46-33	Shield
7	530 01 58-00	Screw	39	530 02 76-15	Shield Retention Plate
8	530 02 77-26	Wire Harness Ass'y.	40	530 03 11-11	Hex Wrench (5/32)
9	530 02 78-93	Terminal Lock	41	530 03 10-98	Hex Wrench (3/16)
10	530 09 45-72	Handlebar Bracket	42	952 70 85-22	Brush Blade - 8"
11	530 02 77-66	Handlebar Grip	43	530 01 57-92	Washer
12	530 02 77-36	Handguard Grip	44	530 01 54-92	Washer
13	530 01 41-03	Handlebar	45	530 01 57-93	Nut
14	530 09 14-26	Tie Strap	46	530 03 01-02	Shaft Lubrication
15	530 02 77-06	Drive Shaft Pad	47	530 09 46-38	Shoulder Strap
16	530 09 45-98	Clamp Harness Ass'y.	52	952 70 85-24	Weed Blade (Optional)
17	580 01 51-97	Nut	53	530 06 92-56	Shield Kit Ass'y. (Incl. 17 - 19)
18	530 01 22-07	Handlebar Clamp	54	530 01 50-37	Screw
19	530 09 47-57	Drive Shaft Housing	55	530 09 45-70	Line Limiter
20	530 09 45-66	Drive Shaft	56	530 01 56-53	Locknut
21	530 06 92-52	"T" Handle Ass'y.	57	530 01 57-90	Screw
22	530 01 57-91	Screw			
23	530 01 53-28	Lockwasher			
24	530 09 46-12	Screw	A	530 02 91-67	Decal-Shaft Warning (Upper)
25	530 00 17-11	Screw	B	530 02 91-68	Decal-Shaft Warning (Lower)
26	530 00 16-42	Lockwasher	C	530 02 78-84	Decal-Handlebar Warning
27	530 09 45-71	Grass Washer	D	530 02 77-55	Decal-Blade Direction
28	530 09 45-68	Gear Box Ass'y.			
29	580 09 46-16	Screw			
30	952 70 85-29	Cutting Head Ass'y. (Incl. #31-33)			
				Not Shown	
				530 06 76-81	Operator's Manual

Key No.	Part No.	Description	Key No.	Part No.	Description
1	530 01 57-73	Screw	51	530 03 91-34	Ignition Module Kit
2	530 02 75-29	Air Filter Cover	52	530 01 51-28	Screw
3	530 02 75-30	Air Filter	53	530 03 91-36	Flywheel Ass'y.
4	530 01 58-49	Screw	54	530 02 75-72	Flywheel Counterweight
5	530 02 75-28	Spacer	55	530 02 94-73	Fan Housing
6	530 01 52-54	Wave Washer	56	530 06 92-91	Starter Pulley
7	530 02 75-26	Choke Shutter	57	530 02 75-31	Starter Spring
8	530 02 75-27	Air Filter Plate	58	530 02 75-69	Starter Handle
9	530 06 92-47	Fuel Line Kit	59	530 06 92-32	Rope Kit
10	530 01 08-97	Fuel Pick-up Ass'y.	60	530 01 41-14	Pulley Housing Ass'y.
11	530 03 52-59	Carburetor (WA-199)	61	530 09 41-89	Clutch Washer
12	† 530 01 91-56	Carburetor Gasket	62	530 06 92-54	Clutch
13	530 01 08-07	Fuel Cap Ass'y.	63	530 01 57-96	Washer
14	530 01 57-75	Screw	64	530 00 17-33	Nut
15	530 02 76-81	Throttle Cable Ass'y.	65	530 01 41-15	Clutch Housing
16	530 02 91-88	Shroud & Tank Ass'y.	66	530 01 57-67	Screw
17	† 530 01 91-54	Gasket	67	530 02 75-11	Spacer
18	530 02 75-93	Reed	68	530 01 57-70	Screw
19	530 02 75-94	Reed Stop	69	530 01 57-69	Screw
20	530 01 09-60	Connecting Rod Ass'y. (Incl. Bearings)	70	530 01 54-96	Screw
21	530 01 09-34	Crankshaft Ass'y.	71	530 02 75-23	Pulley Retainer
22	530 01 51-26	Flywheel Key	72	530 01 57-68	Locknut
23	530 01 57-72	Screw	73	530 06 92-76	Engine Gasket Kit (†Indicates Contents)
27	530 04 57-71	Screw	75	530 02 76-90	Lead Wire/Grommet Ass'y.
28	530 01 40-16	Crankcase Ass'y. (Incl. #39-42)	76	530 03 50-14	*+ Metering Diaphragm
32	530 01 40-15	Crankcase & Crankshaft Ass'y. (Incl. #21,28, 38 & 43)	77	530 03 51-51	*+ Metering Diaphragm Gasket
33	530 01 52-41	Screw	78	530 03 51-47	*+ Circuit Plate Gasket
34	530 01 51-62	Piston Pin Retainer	79	530 03 51-42	Hi Speed Needle
35	530 02 58-75	Piston Ring	80	530 03 50-36	Hi Speed Needle Spring
36	† 530 01 91-61	Cylinder Gasket	81	530 03 51-41	Idle Needle
37	530 06 92-77	Piston Kit (Incl. #34,35 & pin)	82	530 03 50-23	Idle Needle Spring
38	530 01 57-88	Spacer	83	530 03 52-03	Idle Speed Screw
39	530 03 21-03	Inner Bearing	84	530 03 52-08	Idle Speed Spring
40	530 01 57-87	Retaining Ring	85	530 03 50-28	+ Metering Lever Pin
41	530 01 91-58	Crankshaft Seal	86	530 03 50-31	+ Metering Lever
42	530 03 21-02	Outer Bearing	87	530 03 51-88	+ Metering Lever Spring
43	530 01 57-89	Crankshaft Retaining Ring	88	530 03 51-06	+ Inlet Needle Valve
44	530 01 57-17	Screw	89	530 03 51-78	+ Inlet Screen
45	530 02 77-81	Muffler Guard	90	530 03 51-66	*+ Pump Diaphragm
46	530 06 92-57	Muffler Kit	91	530 03 51-64	*+ Pump Gasket
47	530 02 49-03	Muffler Spring	92	530 03 52-60	Carb. Kwik Repair Kit (+ Indicates Contents)
48	530 01 22-38	Cylinder	93	530 03 51-85	Carb. Gasket/Diaphragm Kit (*Indicates Contents)
49	530 03 00-58	Spark Plug	94	530 01 58-23	Screw (Incl. in Starter Pulley Kit)
50	530 01 52-39	Screw	A	530 02 94-09	Instruction Decal
			Not Shown		
				530 06 12-44	Carton
				530 01 41-75	Carton Contents Bag

PARTS LIST NO.
530-067739 - 12/15/89

HUSQVARNA PARTS LIST


TRIMMER MODEL:
32 R

Page No. 1

REPLACES
NONE

Note: Illustrations may differ from actual models due to design changes

WARNING
All repairs, adjustments
and maintenance not de-
scribed in the Operator's
Manual must be per-
formed by qualified serv-
ice personnel.

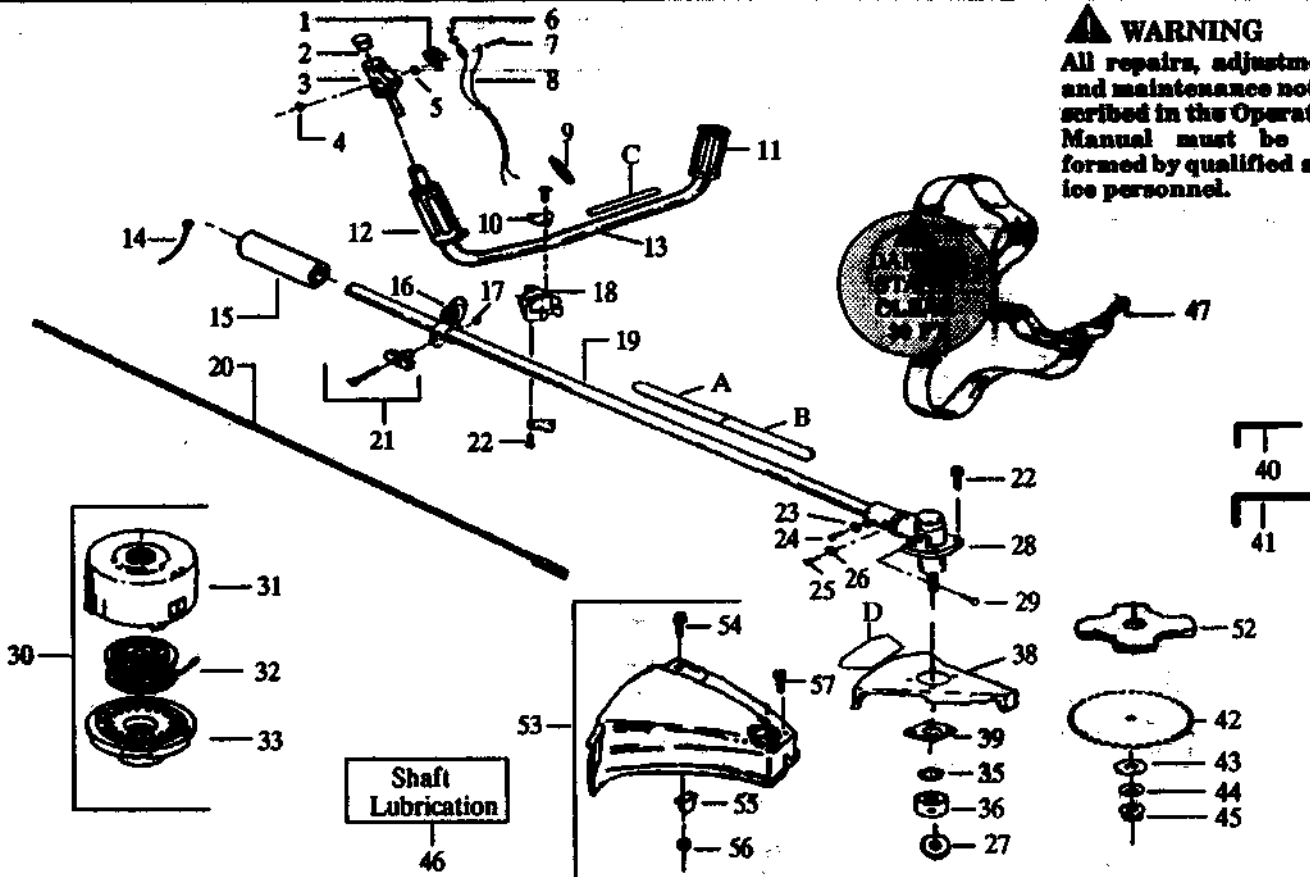

PARTS LIST NO.
 530-067789 - 12/15/89

HUSQVARNA PARTS LIST

TRIMMER MODEL:
 32 R

Page No. 2

REPLACES
 NONE

Note: Illustrations may differ from actual models due to design changes

