


Top Head Assembly

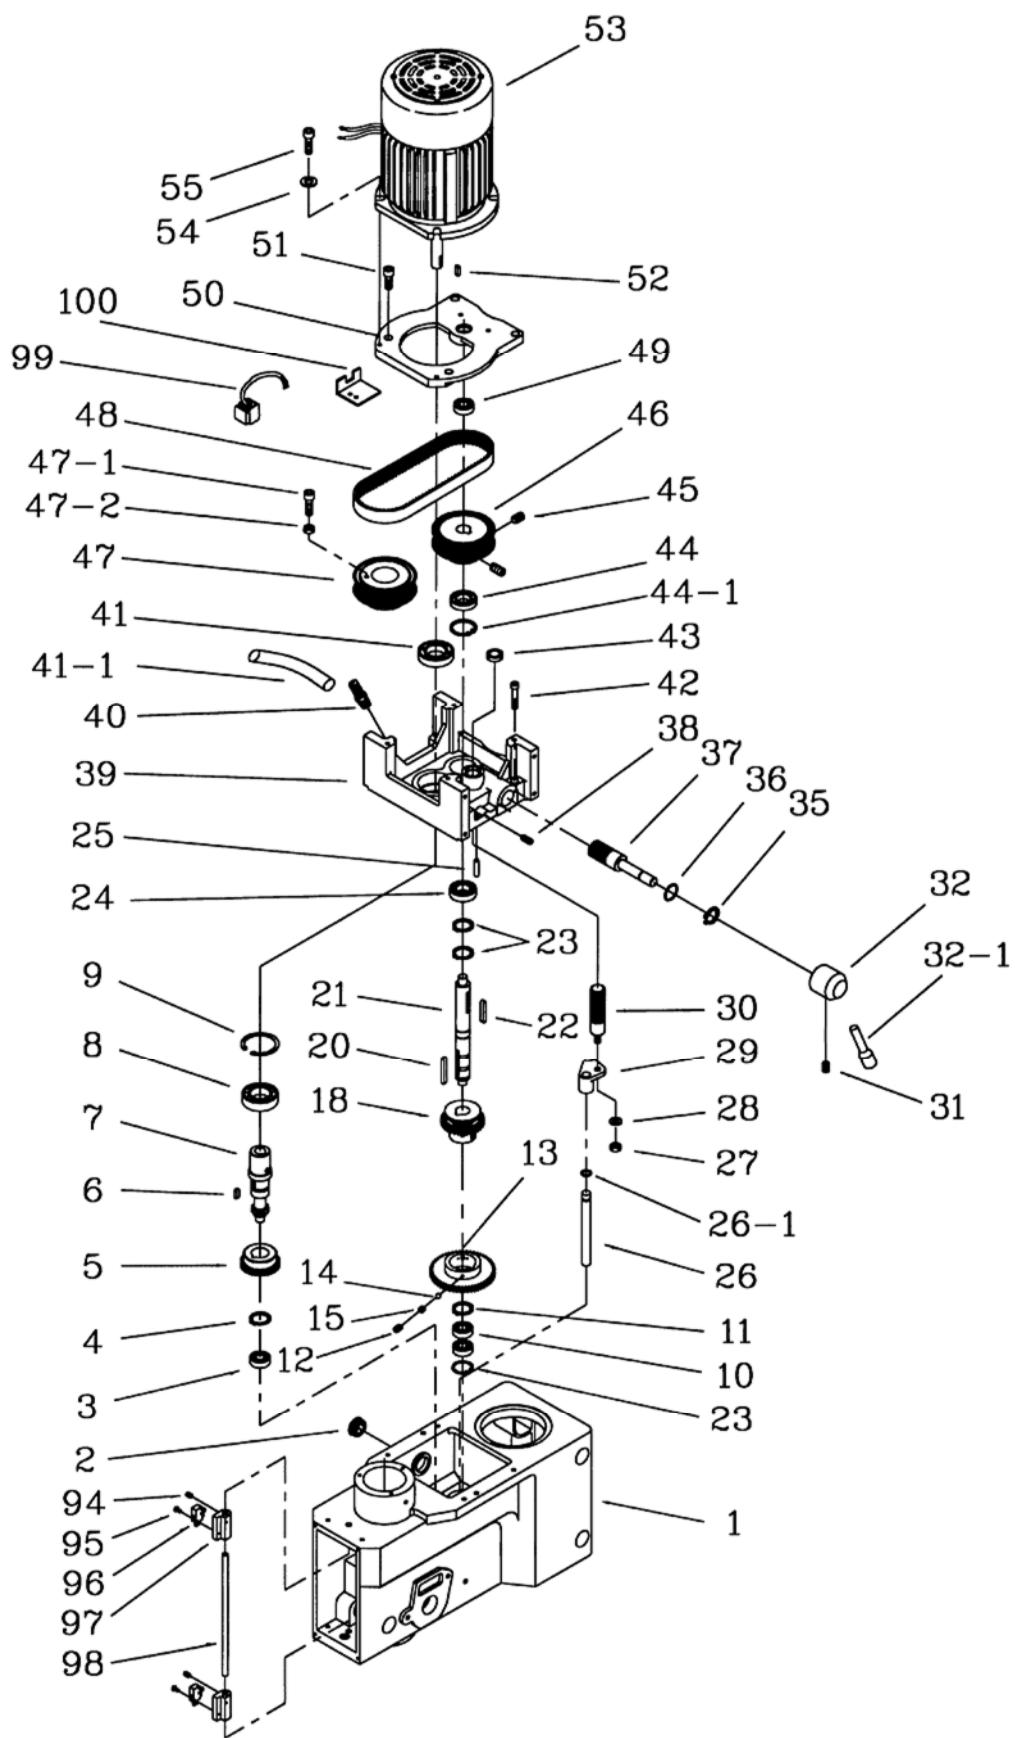


Parts List: Top Head Assembly

Index No.	Part No.	Description	Size	Qty
1.....	20EVS-T01	Head Body		1
2.....	20EVS-T02	Sight Glass		1
3.....	BB-6202Z	Ball Bearing	6202Z	1
4.....	20EVS-T04	C-Clip	S31	1
5.....	20EVS-T05	Gear	M=2,T=32	1
6.....	20EVS-T06	Key	6x6x20	1
7.....	20EVS-T07	Drive Shaft	M=2,T=13	1
8.....	BB-6007Z	Ball Bearing	6007Z	1
9.....	20EVS-T09	C-Clip	R62	1
10.....	BB-6202	Ball Bearing	6202	1
11.....	20EVS-T11	C-Clip	S48	1
12.....	20EVS-T12	Set Screw	3/8"x1"	2
13.....	20EVS-T13	Gear	M=2,T=56	1
14.....	20EVS-T14	Steel Ball	M8	2
15.....	20EVS-T15	Spring		2
18.....	20EVS-T18	Gear	M=2,T=36	1
20.....	20EVS-T20	Key	7x7x55	1
21.....	20EVS-T21	Shaft		1
22.....	20EVS-T22	Key	7x7x15	1
23.....	20EVS-T23	C-Clip	S25	3
24.....	BB-6005	Ball Bearing	6005	1
25.....	20EVS-T25	Taper Pin	5x38	2
26.....	20EVS-T26	Rod		1
26-1.....	20EVS-T26-1	Oil Ring		1
27.....	20EVS-T27	Hex Nut	M10xP1.5	1
28.....	20EVS-T28	Lock Washer	M10	1
29.....	20EVS-T29	Speed Change Block		1
30.....	20EVS-T30	Screw Bar		1
31.....	20EVS-T31	Set Screw	3/8"x3/8"	1
32.....	20EVS-T32	Speed Lever		1
32-1.....	20EVS-T32-1	Handle		1
35.....	20EVS-T35	C-Clip	R30	1
36.....	20EVS-T36	Oil Ring	30x17x7	1
37.....	20EVS-T37	Gear Shaft		1
38.....	TS-1523031	Set Screw	M6x10	1
39.....	20EVS-T39	Gear Box		1
40.....	20EVS-T40	Oil Filter	3/8"x3/8"	1
41.....	20EVS-T41	Oil Seal	62x35x10	1
41-1.....	20EVS-T41-1	Tube		1
42.....	TS-1504091	Hex Socket Cap Screw	M8x45	4
43.....	20EVS-T43	Oil Seal		1
44.....	20EVS-T44	Oil Seal	25x47x28	1
44-1.....	20EVS-T44-1	C-Clip	R47	1
45.....	20EVS-T45	Set Screw	5/16"x3/8"	2
46.....	20EVS-T46	Drive Pulley	M=2,T=35	1
47.....	20EVS-T47	Spindle Pulley		1
47-1.....	20EVS-T47-1	Hex Socket Cap Screw	3/4"x3/16"	1
47-2.....	TS-0561081	Nut	3/4"	1
48.....	20EVS-T48	Belt	680xM8	1
49.....	BB-6202	Ball Bearing	6202	1
50.....	20EVS-T50	Motor Base		1
51.....	20EVS-T51	Screw	M8x20	4
52.....	20EVS-T52	Key	6x6x20	1

Index No.	Part No.	Description	Size	Qty
53.....	20EVS-230V	Motor.....	2HP, 3Ph, 230V.....	1
.....	20EVS-460V	Motor.....	2HP, 3Ph, 460V.....	1
.....	20EVS-230VF	Fan (not shown)	230V	1
.....	20EVS-460VF	Fan (not shown)	460V	1
.....	20EVS-460VFC	Fan Cover (not shown)		1
54.....	TS-1550051	Lock Washer	M8.....	3
55.....	TS-1515031	Hex Socket Cap Screw.....	M8x25.....	4
94.....	20EVS-T94	Set Screw.....	1/4"x1/4"	4
95.....	20EVS-T95	Cross Head Screw.....	M3x16.....	4
96.....	20EVS-T96	Micro Switch.....		2
97.....	20EVS-T97	Micro Switch Bracket		2
98.....	20EVS-T98	Micro Switch Support Rod		1
99.....	20EVS-T99	Induction Switch		1
100.....	20EVS-T100	Switch Support Plate		1


Head Assembly

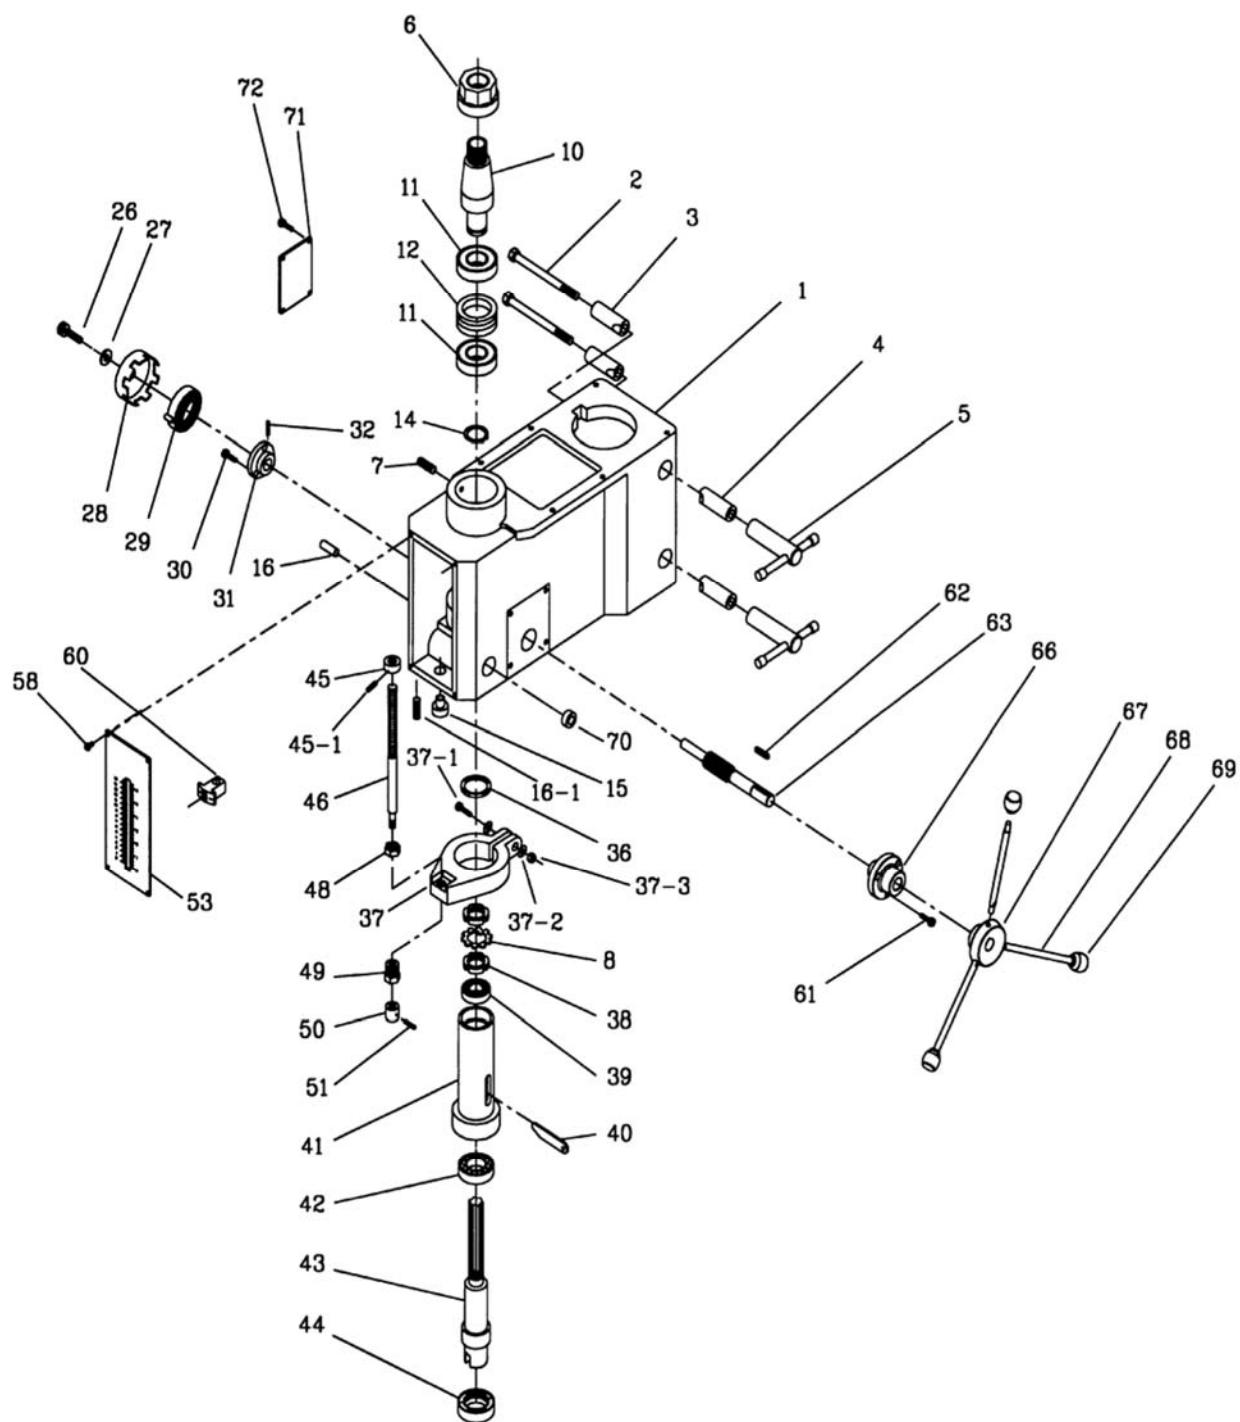

Parts List: Head Assembly

Index No.	Part No.	Description	Size	Qty
1.....	20EVS-T01	Head Body		1
2.....	20EVS-H2	Hex Head Bolt	1/2"x4-1/2"	2
2-1.....	20EVS-H2-1	Spring.....		2
3.....	20EVS-H3	Left Lock Sleeve.....		2
4.....	20EVS-H4	Right Lock Sleeve.....		2
5.....	20EVS-H5	Lock Handle		1
5-1.....	20EVS-H5-1	Nut	1/2"	2
6.....	20EVS-H6	Top Nut		1
7.....	TS-1524031	Set Screw.....	M8x12	1
8.....	20EVS-H8	Star Washer		1
10.....	20EVS-H10	Spindle Taper Sleeve		1
11.....	BB-6009ZR	Ball Bearing.....	6009ZR	2
12.....	20EVS-H12	Bearing Spacer.....		1
14.....	20EVS-H14	C-Clip.....	S45	1
15.....	20EVS-H15	Screw Bushing		1
16.....	20EVS-H16	Quill support Block.....		1
16-1.....	20EVS-H16-1	Set Screw	M8x10	1
26.....	20EVS-H26	Screw		1
27.....	TS-0680041	Washer.....	3/8"x1"	1
28.....	20EVS-H28	Spring Cover w/Spring #29		1
29.....	20EVS-H29	Spring.....		1
30.....	20EVS-H30	Screw	3/16"x1/2"	3
31.....	20EVS-H31	Spring Base		1
32.....	20EVS-H32	Spring Pin.....		1
36.....	20EVS-H36	Rubber Spacer		1
37.....	20EVS-H37	Feed Base (<i>serial no. 4030413 and higher</i>)		1
37-1.....	20EVS-H37-1	Hex Cap Bolt	1/4"x2"	1
37-2.....	TS-0720071	Spring Washer.....	1/4"	2
37-3.....	TS-0561011	Nut	1/4"	1
37-4.....	20EVS-H37-4	Screw	1/4"x5/16"	1
38.....	20EVS-H38	Jam Nut.....		2
39.....	20EVS-H39	Taper Roller Bearing.....	30206	1
40.....	20EVS-H40	Taper Arbor		1
41.....	20EVS-H41	Quill.....		1
42.....	20EVS-H42	Taper Roller Bearing.....	30207	1
43.....	20EVS-H43	Spindle Shaft.....		1
44.....	20EVS-H44	Oil Seal	72x45x8	1
45.....	20EVS-H45	Set Position Block (<i>serial no. 4030413 and higher</i>)		1
45-1.....	TS-1521011	Set Screw.....	M4x4	1
46.....	20EVS-H46	Scale Rod (<i>serial no. 4030413 and higher</i>)		1
50.....	20EVS-H50	Set Knob (<i>serial no. 4030413 and higher</i>)		1
51.....	TS-2276081	Set Screw.....	M6x8	1
53.....	20EVS-H53	Graduated Dial Label		1
58.....	20EVS-H58	Cross Cap Screw.....	3/16"x3/8"	4
60.....	20EVS-H60	Limit Block		1
61.....	20EVS-H61	Hex Socket Cap Screw.....	M8x25	3
62.....	20EVS-H62	Key	6x6x20	1
63.....	20EVS-H63	Pinion Shaft		1
66.....	20EVS-H66	Flange		1
67.....	20EVS-H67	Handle Hub		1
68.....	20EVS-H68	Handle Rod		3
69.....	20EVS-H69	Knob		3
70.....	20EVS-H70	Oil Cap		2
71.....	20EVS-H71	Cover		1
72.....	20EVS-H72	Cross Cap Screw	1/4"x1/2"	4


Control Panel Assembly

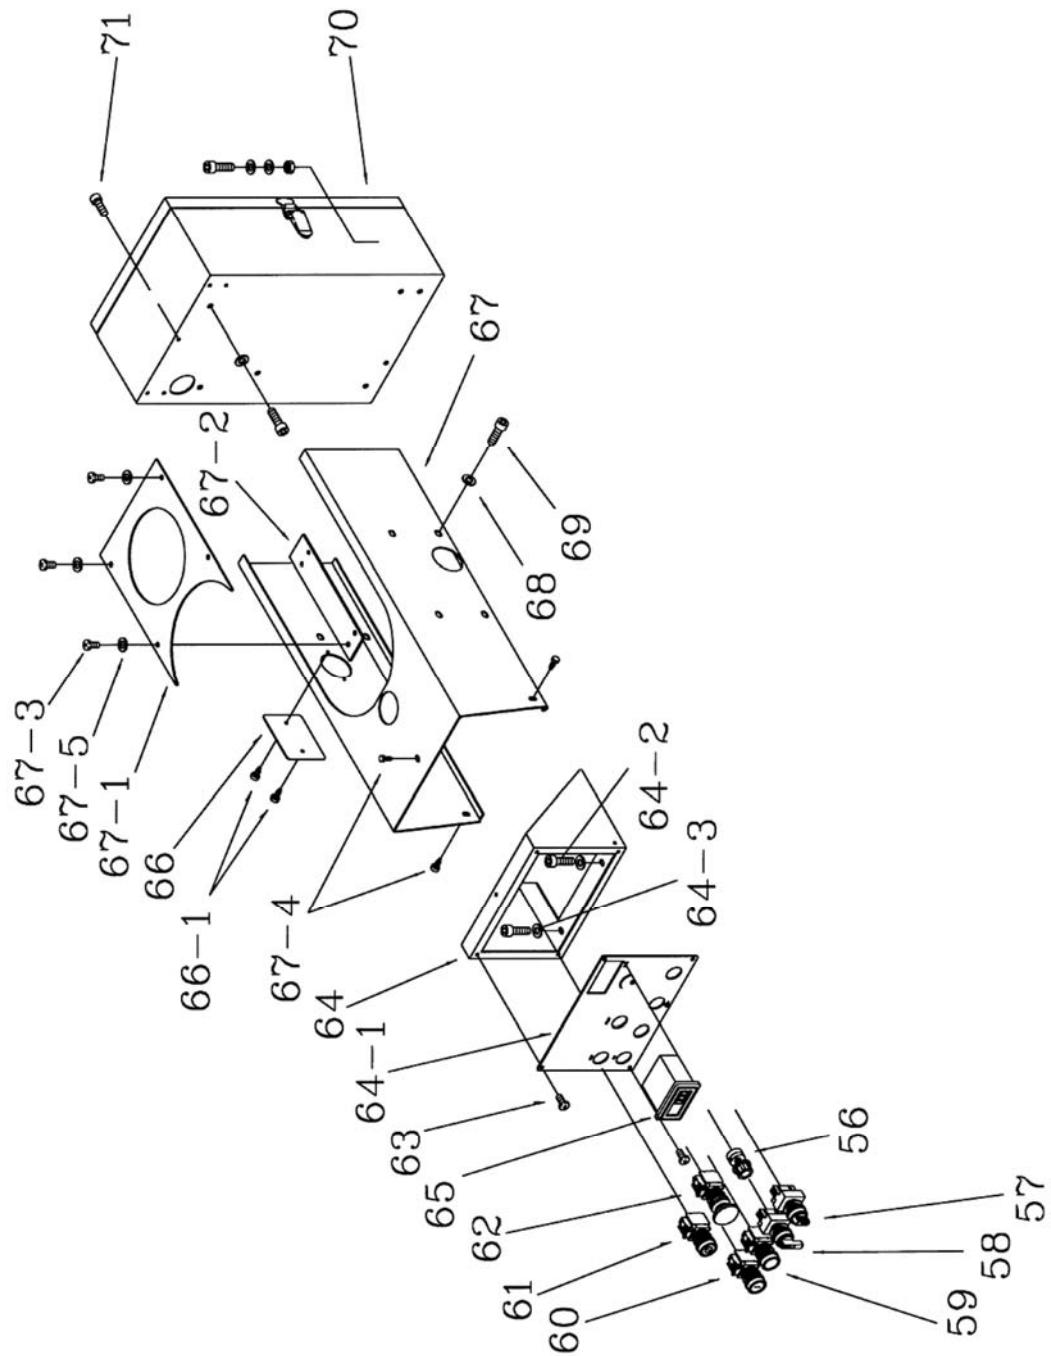

Parts List: Control Panel Assembly

Index No.	Part No.	Description	Size	Qty
56	20EVS-T56	Speed Control Knob		1
57	20EVS-T57	Drill/Tap Switch		1
58	20EVS-T58	Pump Switch		1
59	20EVS-T59	Reverse Switch		1
60	20EVS-T60	Start Switch.....		1
61	20EVS-T61	Stop Switch		1
62	20EVS-T62	Emergency Switch.....		1
63	20EVS-T63	Screw.....		4
64	20EVS-T64	Plate Bracket.....		1
64-1	20EVS-T64-1	Control Panel I.D.		1
64-2	TS-1515031	Hex Socket Cap Screw.....	M8x20	2
64-3	20EVS-T64-3	Washer.....	M8.....	2
65	20EVS-T65	Digital Readout Assembly.....		1
66	20EVS-T66	Oil Filler Cover.....		1
66-1	20EVS-T66-1	Cross Head Screw.....	3/16"x3/8"	2
67	20EVS-T67	Pulley Cover.....		1
67-1	20EVS-T67-1	Top Cover		1
67-2	20EVS-T67-2	Fixed Plate		2
67-3	20EVS-T67-3	Cross Head Screw.....	3/16"x3/8"	11
67-5	20EVS-T67-5	Washer.....	3/16"	8
68	TS-1551061	Spring Washer.....	M8.....	8
69	TS-1515011	Hex Socket Cap Screw.....	M8x12	8
70	20EVS-T70	Electric Control Box w/Door and Latch.....		1
		(serial no. 3040097 and higher on the 460V model)		
71	TS-1515011	Hex Socket Cap Screw.....	M8x12	4


Electrical Cabinet Assembly

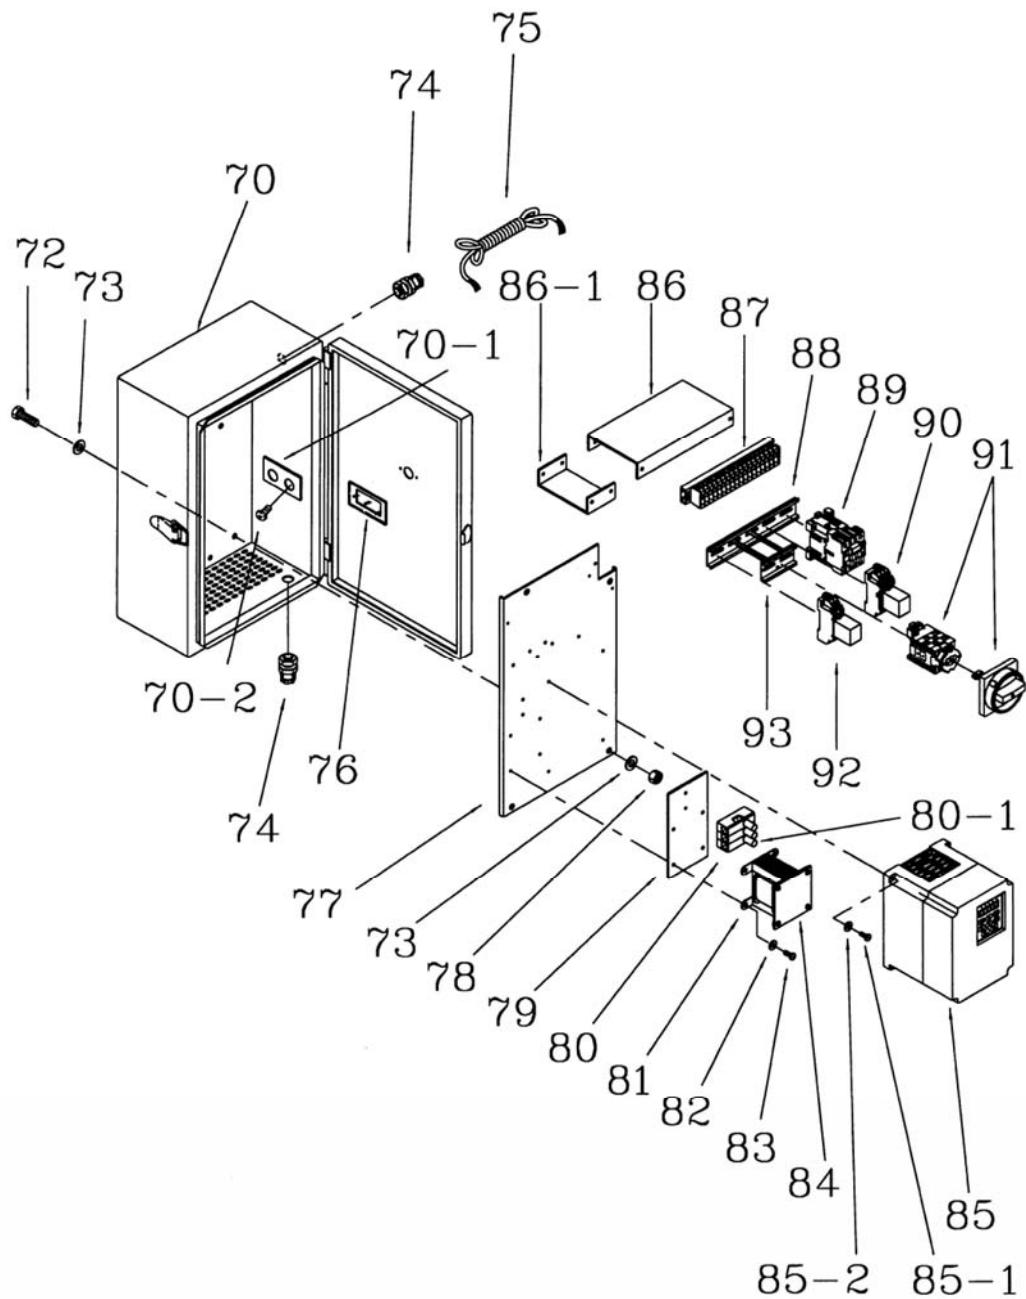

Parts List: Electrical Cabinet Assembly

Index No.	Part No.	Description	Size	Qty
70	20EVS-T70	Electric Control Box w/Door and Latch <i>(serial no. 3040097 and higher on the 460V model)</i>		1
70-1	20EVS-T70-1	Brass Plate		1
70-2	20EVS-T70-2	Screw		4
72	20EVS-T72	Hex Cap Bolt	.5/16"X1"	3
73	TS-0680031	Washer	.5/16"	6
74	20EVS-T74	Cable Relief		2
75	20EVS-T75	Electric Cable	1.25MM^2	1
76	20EVS-T76	Plastic Plate		1
77	20EVS-T77	Electric Base Plate		1
78	TS-0570021	Nut	.5/16"	3
79	20EVS-T79	Insulation Board		1
80	20EVS-T80	Fuse (0.5A)		2
80-1	20EVS-T80-1	Fuse (2A)		1
81	20EVS-T81	Transformer		1
82	TS-1550031	Washer	M5	4
83	20EVS-T83	Screw	M5x10	4
84	20EVS-T84	Insulation Board		1
85	VFD-B-230V	Delta Inverter (for 230V) <i>(serial no. 3040097 and higher)</i>		1
	VFD-B-460V	Delta Inverter (for 460V) <i>(serial no. 3040097 and higher)</i>		1
85-1	20EVS-T85-1	Screw	M4x20	4
85-2	20EVS-T85-2	Washer	M4	8
86	20EVS-T86	Connecting Board		1
86-1	20EVS-T86-1	Connecting Board (small)		1
87	20EVS-T87	Terminal Plate		1
88	20EVS-T88	Aluminum Rail Plate		1
89	20EVS-T89	Contactor		1
90	20EVS-T90	Relay	250V	1
	20EVS-T90-460	Relay	460V	1
91	20EVS-T91	Safety Switch Assembly		1
92	20EVS-T92	Relay	250V	1
	20EVS-T92-460	Relay	460V	1
93	20EVS-T93	Aluminum Rail Plate (small)		1

Column/Table/Base Assembly

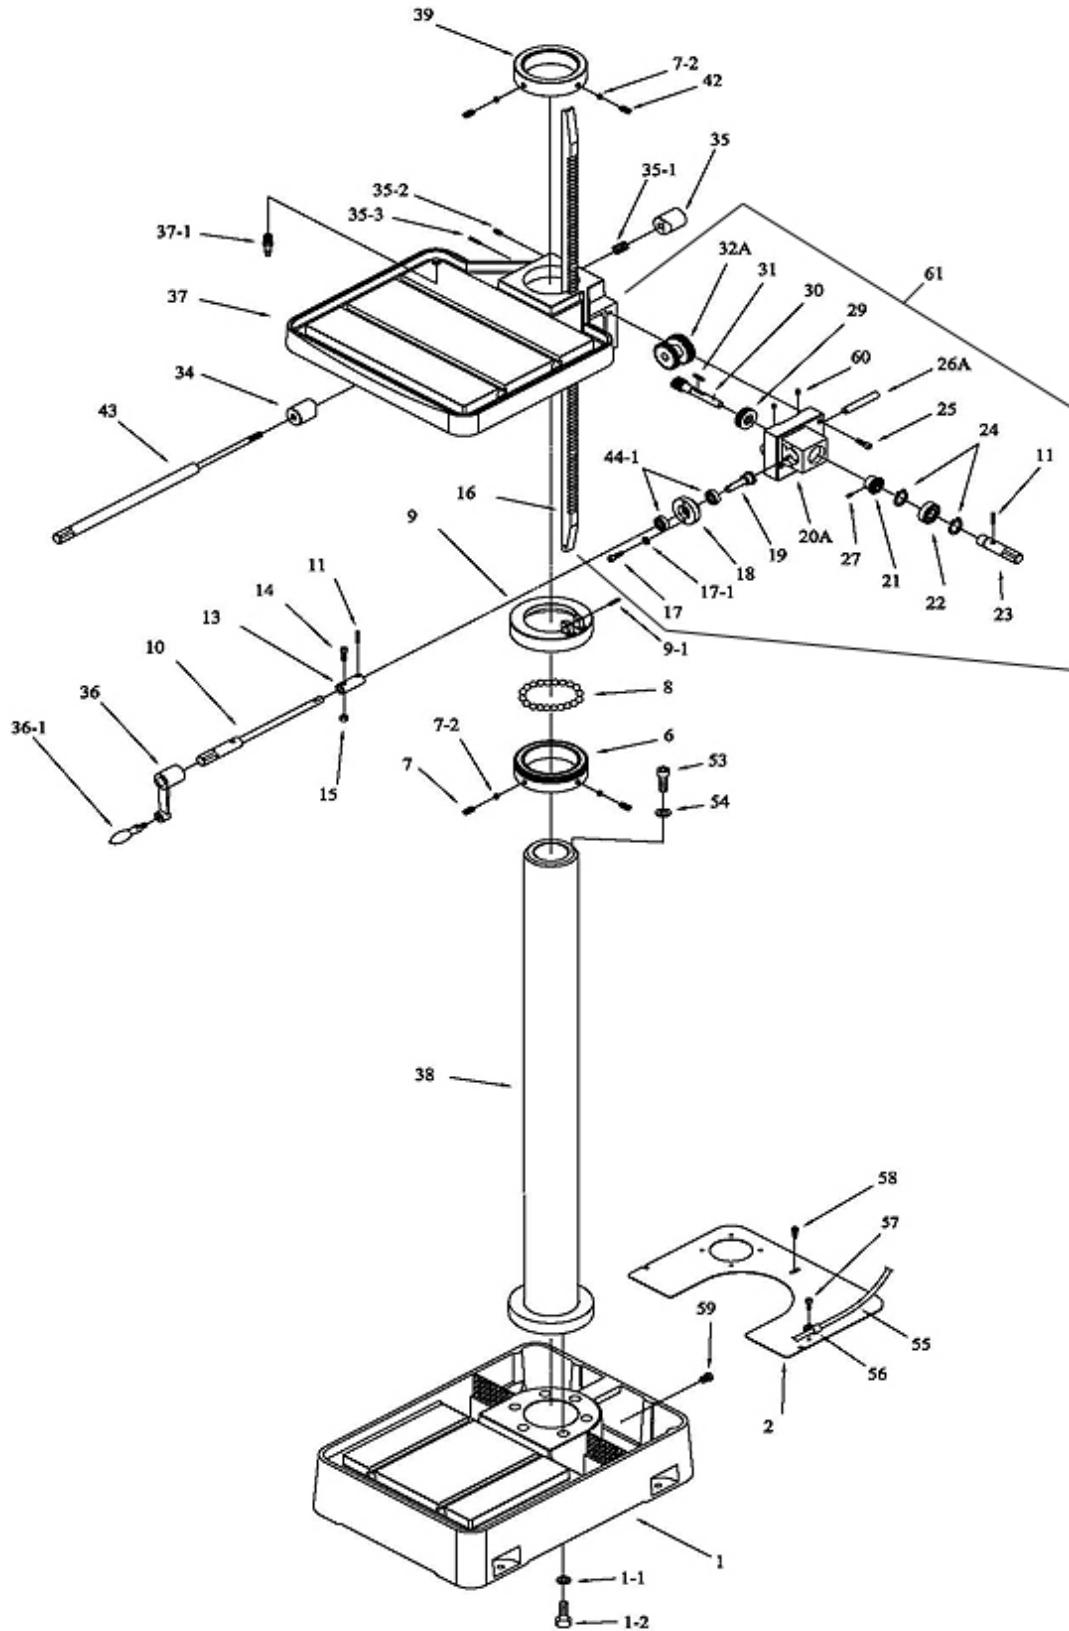


Parts List: Column/Table/Base Assembly

Index No.	Part No.	Description	Size	Qty
1.....	20EVS-C1.....	Coolant Base.....		1
	20EVS-C1N.....	Coolant Base (serial no. 7090372 and higher)		1
1-1.....	TS-0720111.....	Lock Washer	1/2"	6
1-2.....	TS-0070031.....	Hex Cap Screw	1/2" x 1-1/2"	6
2.....	20EVS-C2.....	Cover		1
6.....	20EVS-C6.....	Support Bearing Collar		1
	20EVS-C6-1.....	Support Bearing Collar (serial no. 7090372 and higher)		1
7.....	20EVS-C7.....	Set Screw.....	1/2"x3/4"	1
7-2.....	20EVS-C7-2.....	Brass Block		4
8.....	20EVS-C8.....	Steel Ball.....	M10.....	40
9.....	20EVS-C9.....	Column Bearing Collar.....		1
	20EVS-C9N.....	Column Bearing Collar (serial no. 7090372 and higher)		1
9-1.....	20EVS-C9-1.....	Screw	3/8"x1"	1
10.....	20EVS-C10.....	Crank Shaft w/ Connection Rod.....		1
11.....	20EVS-C11.....	Spring Pin.....	4x20.....	2
13.....	20EVS-C13.....	Sleeve		1
14.....	20EVS-C14.....	Hex Socket Cap Screw.....	1/4"x1-1/2"	1
15.....	TS-0561011.....	Hex Nut	1/4"	1
16.....	20EVS-C16.....	Rack.....		1
17.....	TS-1514031.....	Hex Socket Cap Screw.....	M6x20.....	2
17-1.....	TS-1541021.....	Spring Washer.....		2
18.....	20EVS-C18.....	Flange		1
19.....	20EVS-C19.....	Small Bevel Gear.....		1
20.....	20EVS-C20.....	Gear Bracket		1
20A	20EVS-C20A	Gear Bracket (serial no. 10120660 and higher)		1
21.....	20EVS-C21.....	Bevel Gear		1
22.....	BB-6005ZZ.....	Ball Bearing.....	6005ZZ.....	1
23.....	20EVS-C23.....	Crank Shaft		1
24.....	20EVS-C24.....	C-Clip	S25	2
25.....	TS-1515051.....	Hex Socket Cap Screw.....	M8x35.....	3
26.....	20EVS-C26.....	Shaft		1
26A	20EVS-C26A	Shaft (serial no. 10120660 and higher)		1
27.....	20EVS-C27.....	Set Screw.....	1/4" x 3/8"	1
29.....	20EVS-C29.....	Thrust Bearing.....	51102.....	1
30.....	20EVS-C30.....	Worm Shaft		1
31.....	20EVS-C31.....	Key	4x4x20	1
32.....	20EVS-C32.....	Gear		1
32A	20EVS-C32A	Gear Assembly (serial no. 10120660 and higher)		1
34.....	20EVS-C34.....	Lock Sleeve.....		1
35.....	20EVS-C35.....	Lock Sleeve (thread).....		1
35-1.....	20EVS-C35-1.....	Spring		1
35-2.....	20EVS-C35-2.....	Set Screw.....	M6x25	1
35-3.....	20EVS-C35-3.....	Pin	5x25	1
36.....	20EVS-C36.....	Lift Handle Crank		1
36-1.....	20EVS-C36-1.....	Handle		1
37.....	20EVS-C37.....	Table		1
37-1.....	20EVS-C37-1.....	Hose Coupler	1/2"	1
38.....	20EVS-C38.....	Column		1
	20EVS-C38N.....	Column (serial no. 7090372 and higher)		1
39.....	20EVS-C39.....	Rack Collar.....		1
42.....	20EVS-C42.....	Set Screw	1/2"x3/4"	2
43.....	20EVS-C43.....	Connecting Rod (threaded)		1
44-1.....	BB-6202ZZ.....	Ball Bearing.....	6202ZZ	2
53.....	20EVS-C53.....	Hex Socket Cap Screw		1
54.....	20EVS-C54.....	Washer		1
55.....	20EVS-C55.....	Hose	1/2"	1
56.....	20EVS-C56.....	Clamp		1

Index No.	Part No.	Description	Size	Qty
57.....	20EVS-C57.....	Pan Head Screw		1
58.....	20EVS-C58.....	Pan Head Screw		1
59.....	20EVS-C59.....	Plug.....	3/8"PT	1
60.....	TS-1522021	Socket Set Screw	M5x8	2
61.....	20EVS-TRM.....	Table Raising Mechanism Assembly.....		1
.....	20EVS-SBCA.....	Support Bearing Collar Assembly (includes #6,7,7-2,8,9 and 9-1)		1


Coolant Pump Assembly

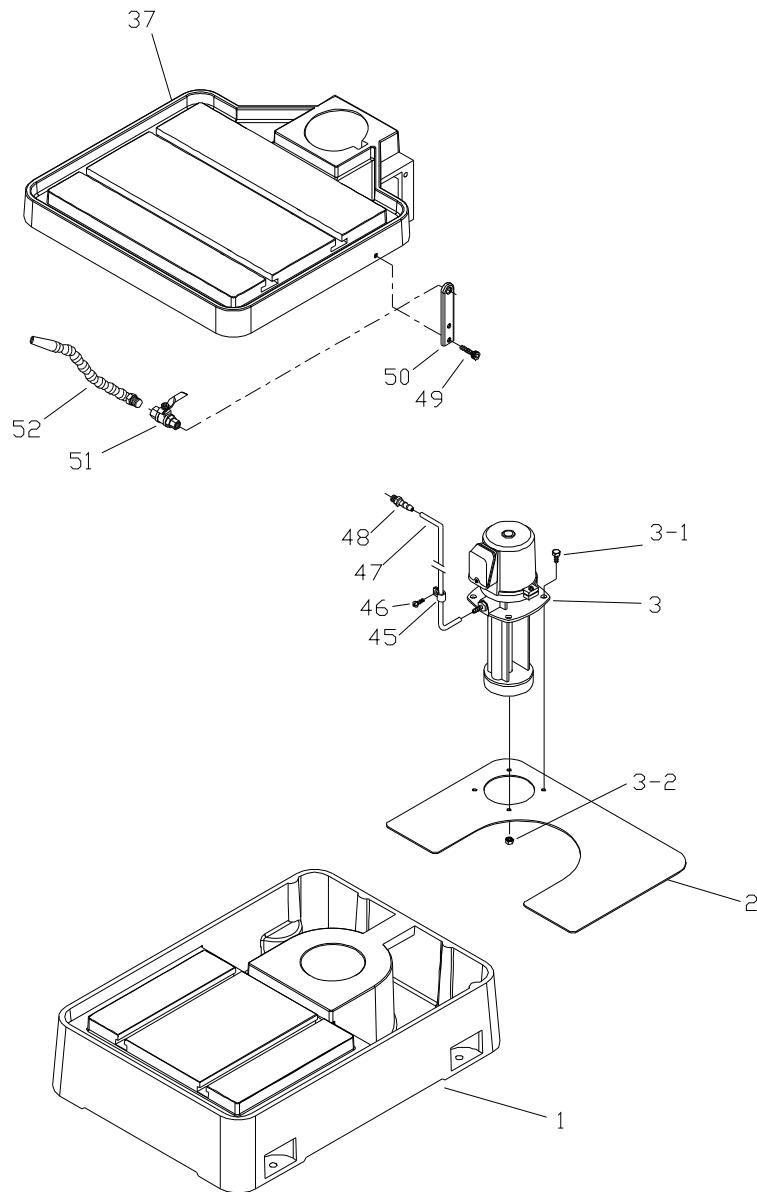

Index No.	Part No.	Description	Size	Qty
1.....	20EVS-C1.....	Coolant Base.....		1
2.....	20EVS-C2.....	Cover		1
3.....	20EVS-CP3PH.....	Coolant Pump.....	1/8 HP, 230V, 3 Ph.....	1
.....	20EVS-CP1PH.....	Coolant Pump.....	1/8 HP, 230V, 1 Ph.....	1
3-1.....	20EVS-C4.....	Hex Cap Bolt	1/4"x1/2"	4
3-2.....	20EVS-C5.....	Hex Nut		4
37.....	20EVS-C37.....	Table		1
45.....	20EVS-C45.....	Clamp		1
46.....	20EVS-C46.....	Cross Cap Screw		1
47.....	20EVS-C47.....	Tube		1
48.....	20EVS-C48.....	Connector		1
49.....	TS-1515031	Hex Socket Cap Screw.....	M8x20	1
50.....	20EVS-C50.....	Support Plate.....		1
51.....	20EVS-C51.....	ON/OFF Valve.....		1
52.....	20EVS-C52.....	Nozzle		1

Electrical Cabinet

Index No.	Part No.	Description	Size	Qty
Q.....	20EVS-T91	Safety Switch Assembly	500Vac,16A.....	1
F1	20EVS-T80	Fuse.....	0.5A	1
F2	20EVS-T80	Fuse.....	0.5A	1
F3	20EVS-T80-1	Fuse.....	2A	1
KM1	20EVS-T89	Contactor	1
KM1-1	20EVS-T89-1	Connector.....	1
KM2	20EVS-T90	Relay.....	250V	1
.....	20EVS-T90-460	Relay.....	460V	1
KR.....	20EVS-T92	Relay.....	250V	1
.....	20EVS-T92-460	Relay.....	460V	1
TR.....	20EVS-T81	Transformer.....	1
VFD-B.....	VFD-B-230V	Delta Inverter (<i>serial no. 3040097 and higher</i>)	AC Motor.....	1
VFD-B.....	VFD-B-460V	Delta Inverter (<i>serial no. 3040097 and higher</i>)	AC Motor.....	1

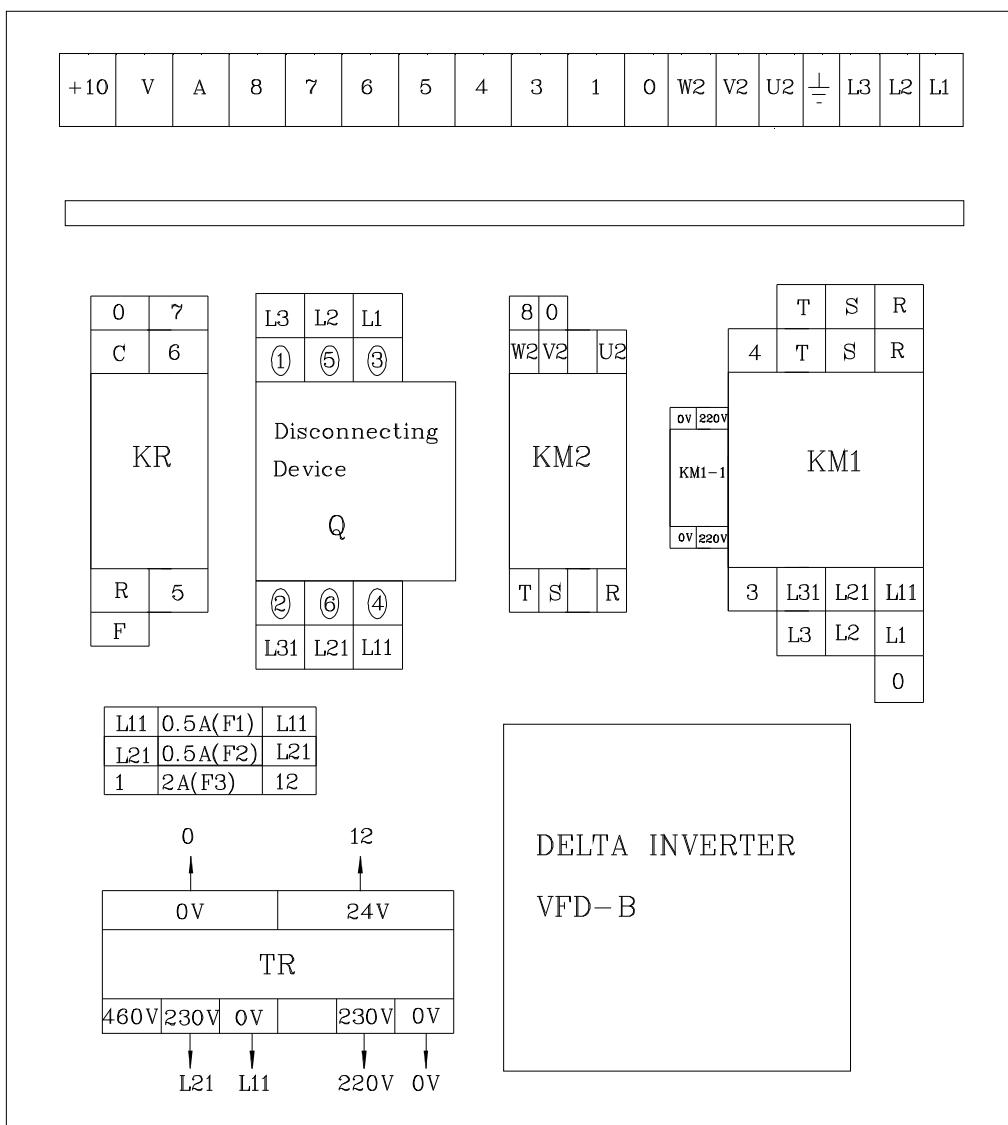

Wiring Diagram – 460 Volt, 3 Phase

