



4125G

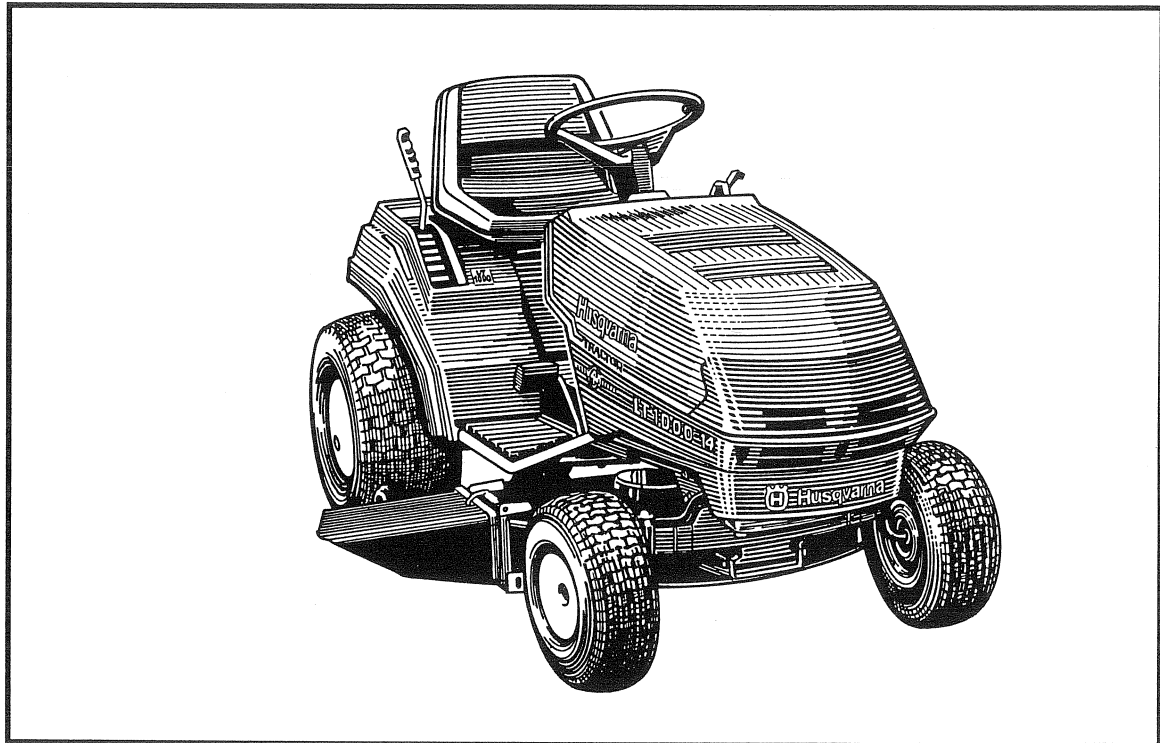

1.1992
Spare Parts

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

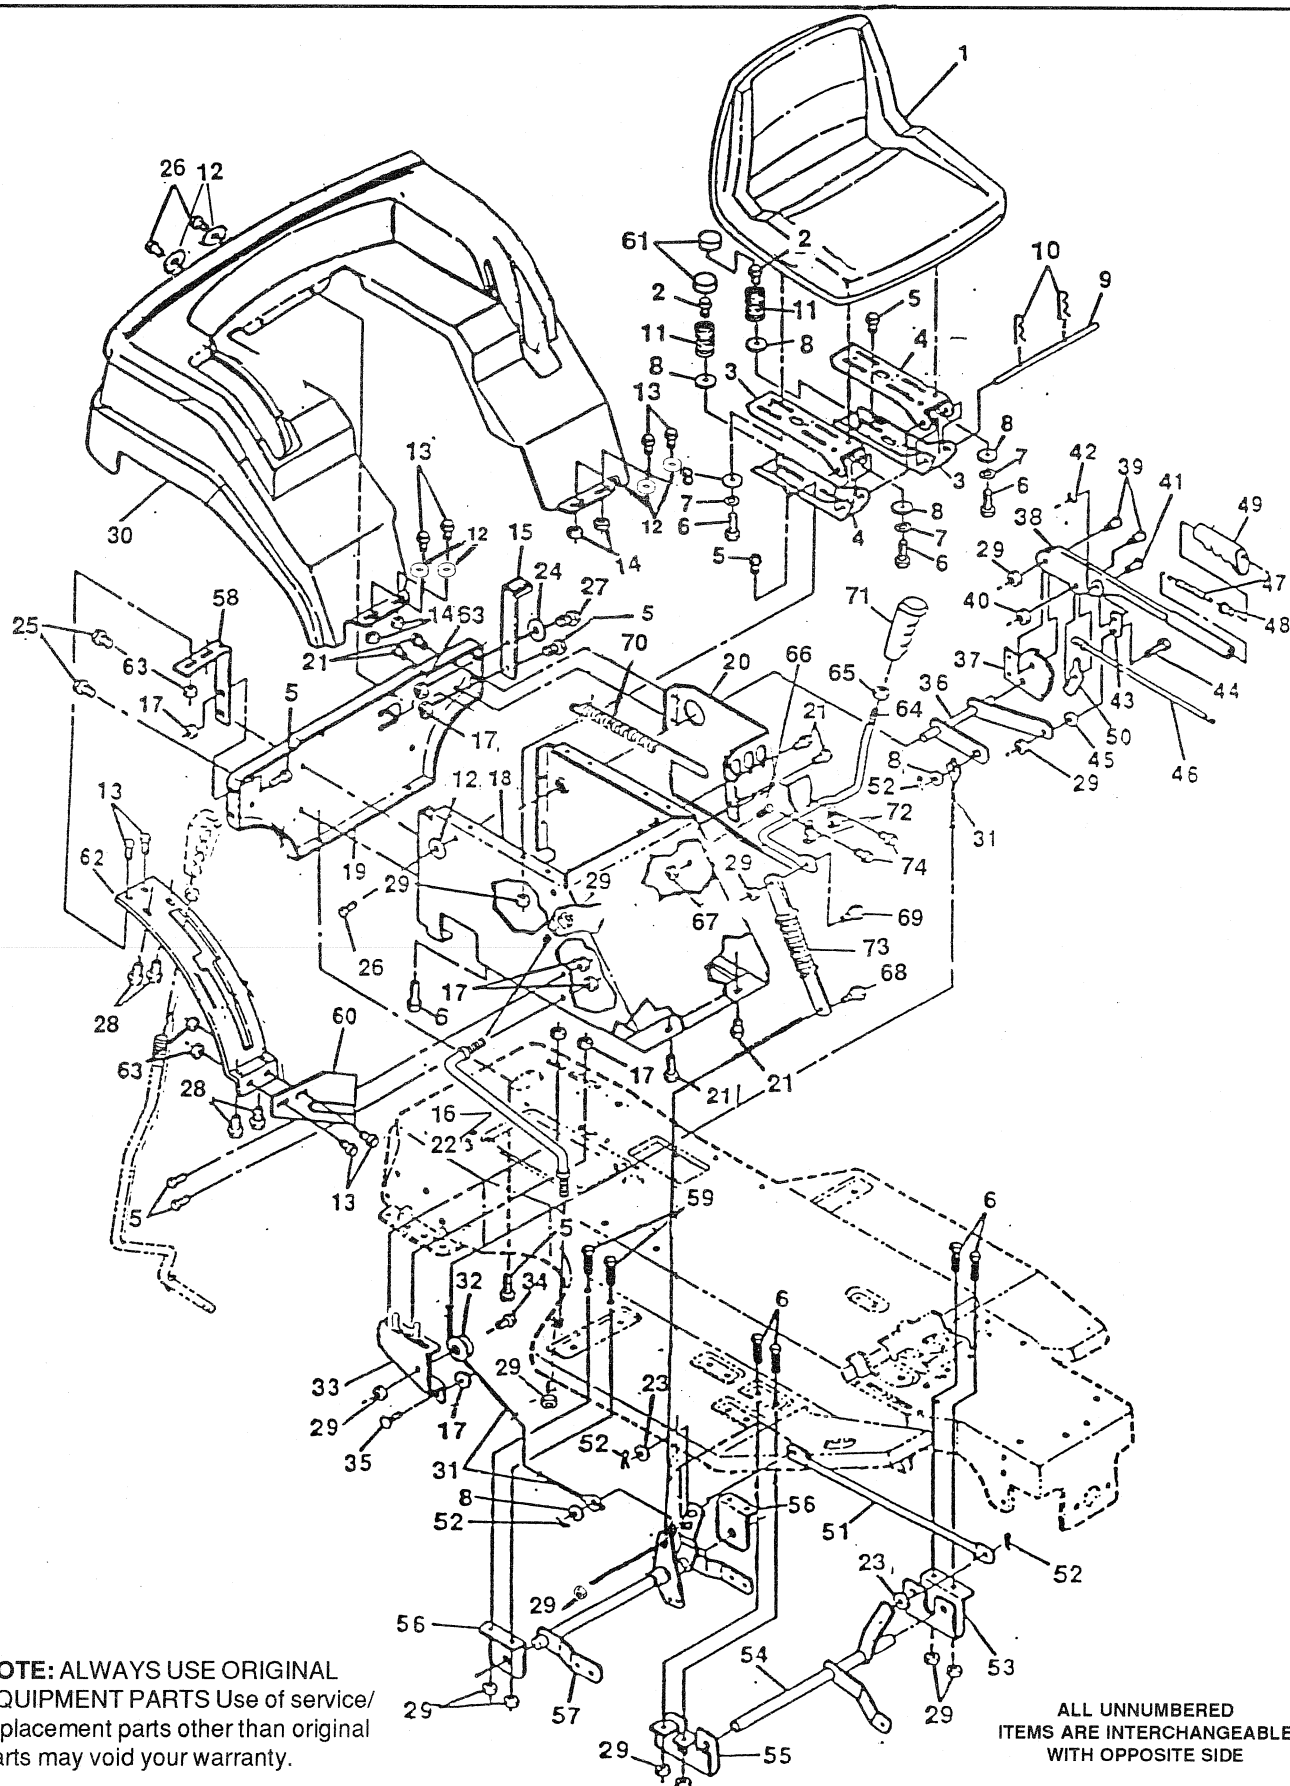

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G (601 10 00-04)

Key No.	Part No.	Description	Key No.	Part No.	Description
1	6010003-95	Seat	47	6010006-42	Spring, Height Adjust
2	6010005-43	Screw, 5/16 18 x .63	48	6010006-41	Knob, Height Adjust
3	6010007-07	Channel, Seat L. H	49	6010002-38	Handle, Lift
4	6010007-63	Channel, Seat R. H.	50	6010001-26	Pawl, Height Adjust
5	6010005-97	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	51	6010001-59	Tie Rod
6	6010000-28	Screw, Hx Hd, 5/16-18 x 3/4 In.	52	6010000-25	Cotter Pin
7	6010000-23	Washer, Lock 5/16 In.	53	6010007-16	Bracket, L. H. Front Hanger
8	6010000-19	Washer, Flat, 11/32 In.	54	6010007-21	Assembly, Front Lift Shaft
9	6010007-64	Rod, Seat Support	55	6010007-17	Bracket, R. H. Front Hanger
10	6010005-23	Hair Pin, .073 Dia. x 1.13 In.	56	6010007-20	Bracket, Hanger
11	6010002-62	Seat Spring	57	6010007-19	Assembly, Rear Lift Shaft
12	6010000-03	Washer, Flat, 9/32 In.	58	6010002-58	Fender Support, R. H.
13	6010000-67	Screw, Hx Hd, 1/4-20 x 5/8 In.	59	6010000-06	Screw, Hx Hd, 5/16-18 x 5/8 In.
14	6010000-62	Nut, Lock, 1/4-20 Thd.	60	6010002-59	Support, Shift Plate
15	6010002-57	Fender Support, L. H.	61	6010006-20	Cover, Seat Spring
16	6010007-65	Support, LH footrest stiffener	62	6010007-37	Quadrant
17	6010005-95	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	63	6010005-75	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
18	6010007-66	Seat Support	64	6010007-70	Assembly Brkt & Engagement Hand
19	6010007-67	Support, Fender & Seat	65	6010000-08	Nut, HX Ctrlk, 1/2-13 Thd.
20	6010001-34	Bracket, Support Engage	66	6010000-35	Screw, Hex, 3/8-16x2-1/4 In.
21	6010005-19	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.	67	6010001-04	Nut, Hex Keps, 3/8-16 Thd.
22	6010007-68	Support, LH footrest stiffener	68	6010000-88	Bolt, .437x.156 Hhsh 5/16-18
23	6010001-06	Flatwasher, 13/32 In.	69	6010002-75	Bolt, Shoulder, 7/16 In.
24	6010000-17	Flatwasher	70	6010002-51	Spring, Tension
25	6010005-70	Screw, Tap, 5/16-18 x 7/8 I	71	6010002-37	Handle, Lift
26	6010006-67	Screw, Hx, Wshr Hd, Tap 1/4-20 x 5/8 In.	72	6010001-32	Clip
27	6010000-68	Screw, 1/4-20 x 3/4 In	73	6010002-28	Assembly, Spring Cartridge
28	6010001-13	Screw, Hx Hd, Tap #10 x 1/2 In.	74	6010000-66	Screw, 1/4-20x1/2 In.
29	6010000-59	Nut, Hx Ctrlk, 5/16-18 Thd.	75	6010007-71	Part's Manual (Not Illustrated) French and English
30	6010007-69	Fender	76	6010007-72	Operator's Manual (Not Illustrated) French
31	6010001-91	Cable, Deck Lift	77	6010007-73	Operator's Manual (Not Illustrated) English
32	6010005-60	Pulley			
33	6010001-93	Assembly, Pulley Bracket			
34	6010002-63	Shoulder Bolt, 5/16-18 Thd.			
35	6010000-52	Bolt, Carriage, 5/16-18 x 5/8 In.			
36	6010001-33	Assembly, Upper Shaft			
37	6010001-60	Quadrant			
38	6010007-47	Lift Lever			
39	6010001-10	Shoulder Bolt, 5/16-18 Thd.			
40	6010005-40	Nut, Hx Wd Fl Lk 5/16-18 Thd.			
41	6010001-15	Clevis Pin			
42	6010001-16	E-Ring			
43	6010001-56	Link			
44	6010005-21	Shoulder Bolt, 5/16-18 Thd.			
45	6010005-47	Washer			
46	6010006-43	Actuator Rod			

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

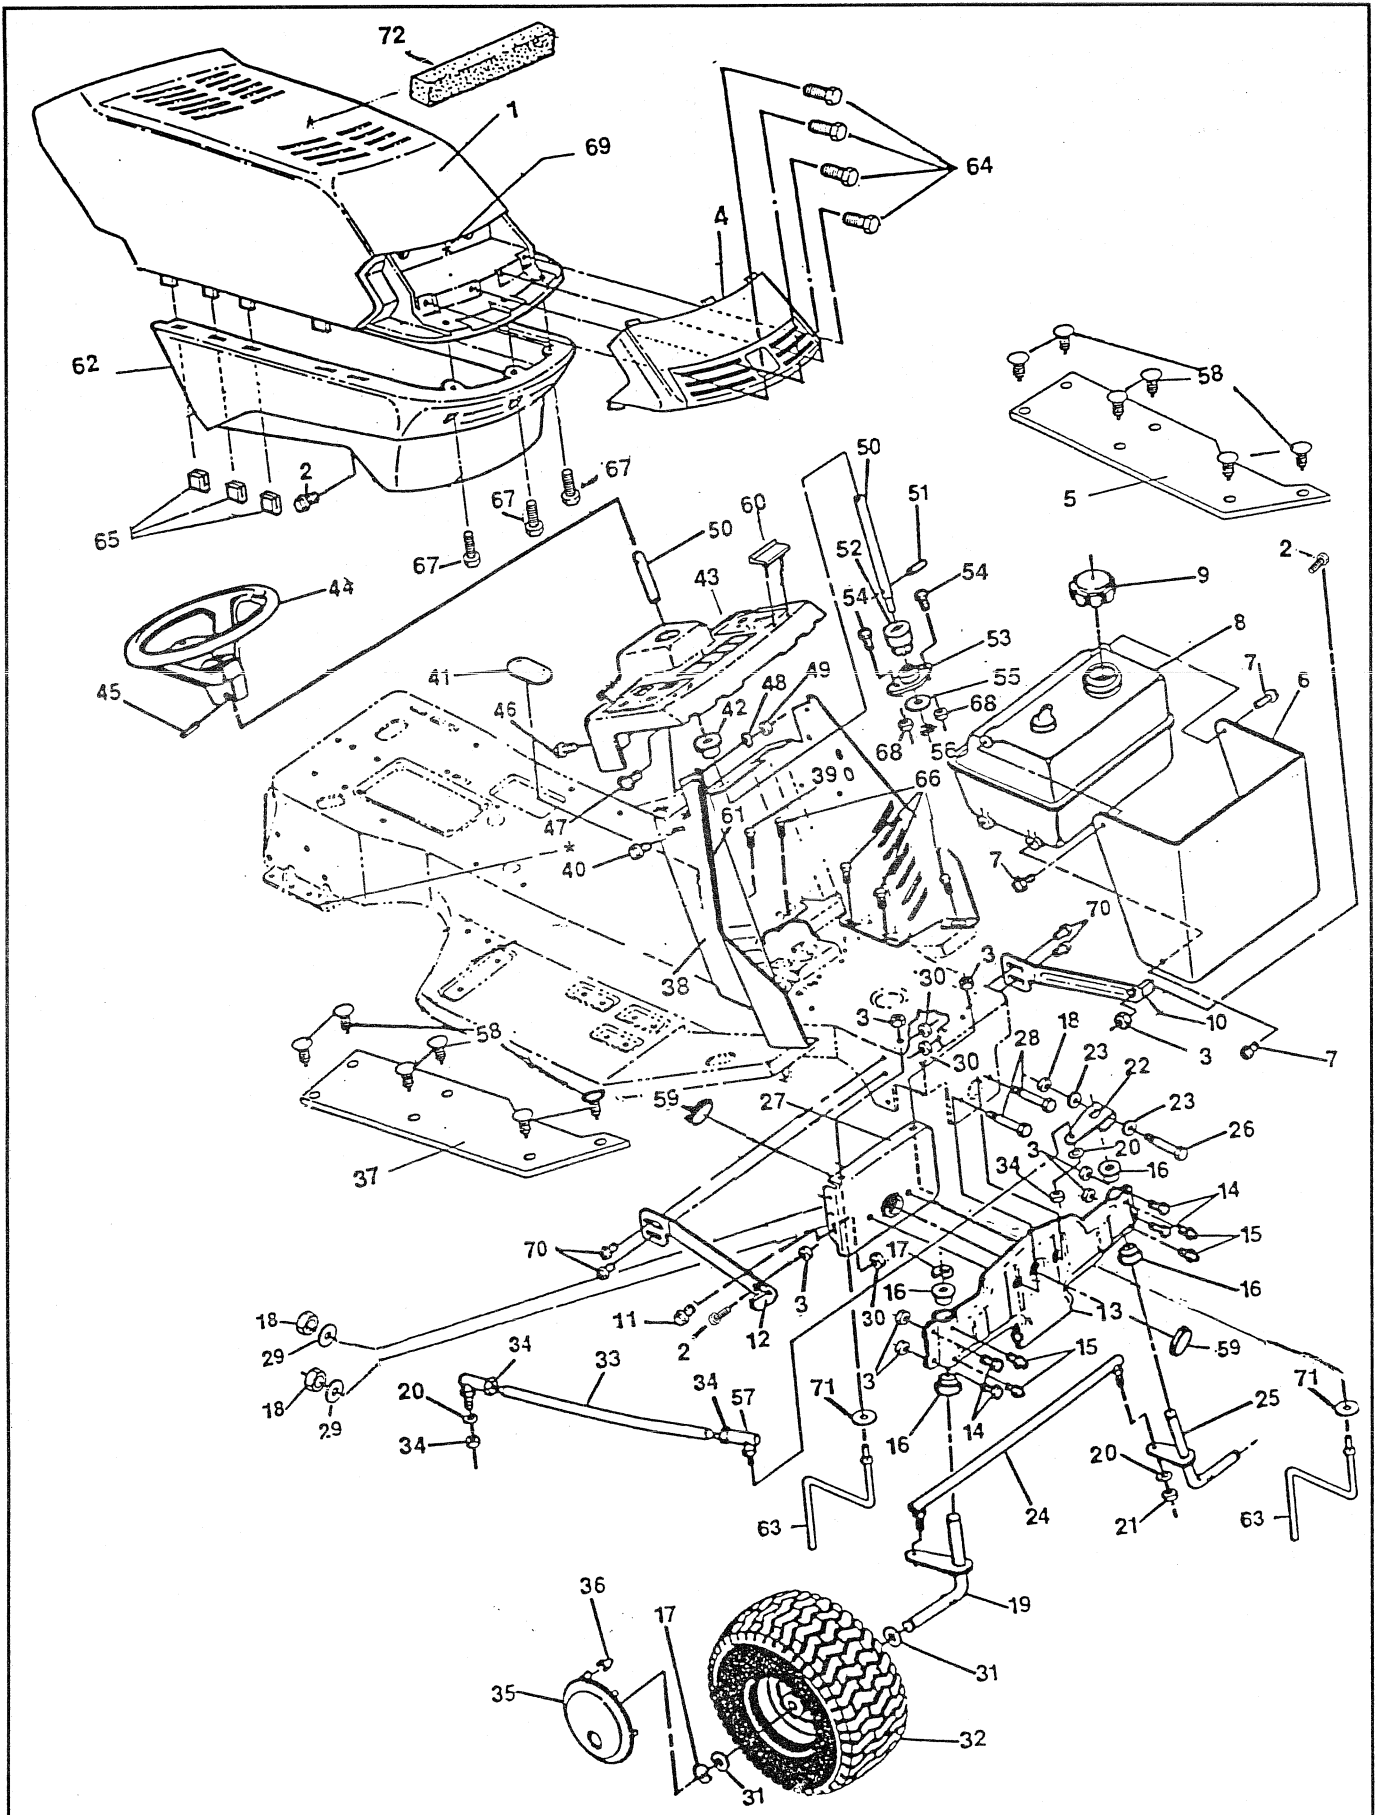

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125G (601 10 00-04)

Key No.	Part No.	Description	Key No.	Part No.	Description
1	6010003-98	Hood	44	6010001-90	Steering Wheel
2	6010000-99	Shoulder Bolt, 5/16-18 Thd.	45	6010005-48	Pin, , Spring, 1/4 x 2 In.
3	6010000-59	Nut, Hx, Ctrlk, 5/16-18 Thd.	46	6010002-74	Screw, Tap, 1/4-20 x 1/2 In.
4	6010003-04	Lens, Headlight	47	6010000-24	Screw, Hx Hd, 1/4-20 x 5/8 In.
5	6010004-65	Assembly, Foot Pad L. H.	48	6010000-18	Washer, Flat, 9/32 In.
6	6010007-12	Heat Shield	49	6010000-62	Nut, Hx, Ctrlk, 1/4-20 Thd.
7	6010001-14	Screw, Hx Hd, Plastite 1/4 Dia. x 3/4 In	50	6010001-49	Shaft, Steering
8	6010002-72	Tank, Gas 1.5 Gal W/Sensor	51	6010001-64	Pin, Dowel
	6010002-71	Low Fuel Sensor	52	6010001-51	Pinion, Steering
9	6010000-49	Cap, Fuel	53	6010001-63	Bearing, Flange
10	6010007-53	Bracket, Hood L. H.	54	6010007-60	Screw, 5/16-24x.75 Sq.
11	6010005-97	Screw, Hx Hd, 5/16 -18 x 3/4 In.	55	6010001-09	Washer, Flat, 1/2 In.
12	6010007-54	Bracket, Hood R. H.	56	6010000-89	E-Ring
13	6010007-55	Front Axle W/Bearings	57	6010006-23	Ball, Joint, 3/8 Thd.
14	6010000-06	Screw, Hx Hd, 5/16-18 x 5/8 In.	58	6010004-06	Ratchet Fastener
15	6010006-51	Grease Fitting	59	6010003-07	Plug, Front Axle
16	6010001-47	Bearing, Spindle	60	6010007-61	Bumper, Hood/Dash
17	6010005-25	E-Ring	61	6010005-56	Wide Trim 18 "
18	6010000-60	Nut, Hx, Ctrlk, 3/8-16 Thd.	62	6010003-02	Grille
19	6010007-56	Spindle, R. H.	63	6010001-22	Belt Guide
20	601000015	Washer, Split, Lock 3/8 In.	64	6010004-17	Screw, #4-24 x 1/2 In.
21	6010000-10	Nut, Hx, 3/8-24 Thd.	65	6010003-03	Clip, Tinnerman
22	6010001-48	Steering Arm, Upper	66	6010005-19	Screw, 5/16-18 x .50 In.
23	6010006-70	Washer, Flat, 25/64 In.	67	6010001-13	Screw, #10 x 1/2 In.
24	6010001-19	Assembly, Tie Rod	68	6010007-62	Nut, 5/16-24 Hxwdflk
25	6010007-57	Spindle, L.H.	69	6010003-97	Decal, Reflector Ver II, Hood
26	6010000-77	Screw, Hx Hd, 3/8-16 x 2-1/2 In.	70	6010005-91	Screw, Hex Fl, 5/16-18 x 3/4 In.
27	6010007-08	Support Bracket, Front Axle	71	6010000-57	Washer, Internal Tooth
28	6010000-37	Screw, Hx Hd, 3/8-16 x 3 In.	72	6010003-19	Foam, Hood Baffle
29	6010000-98	Washer, Spring			
30	6010005-95	Nut, Hx, Wd Fl Lk 5/16-18 Thd.			
31	6010006-45	Washer, Flat, 3/4 In.			
32	^	Wheel & Tire Assembly, Front			
	Tire	Refer to Tire Tread Page			
	6010007-58	Wheel/With Bearing			
	6010000-96	Valve Stem			
	6010004-58	Bearing			
33	6010001-81	Drag Link			
34	6010000-48	Nut, Hx, Jam, 3/8-24 Thd.			
35	6010002-90	Hubcap, Front			
36	6010002-94	Clip, Hubcap			
37	6010004-64	Assembly, Foot Pad R. H.			
38	6010007-00	Dash, Lower			
39	6010005-44	Screw, Tap, 5/16-18 x 3/8 In.			
40	6010006-68	Screw, Self-Tap, 1/4-20 x 1/2 In.			
41	6010002-47	Cover			
42	6010001-92	Bushing, Upper Steering			
43	6010007-59	Dash, Upper			

(^) Order Parts Individually

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

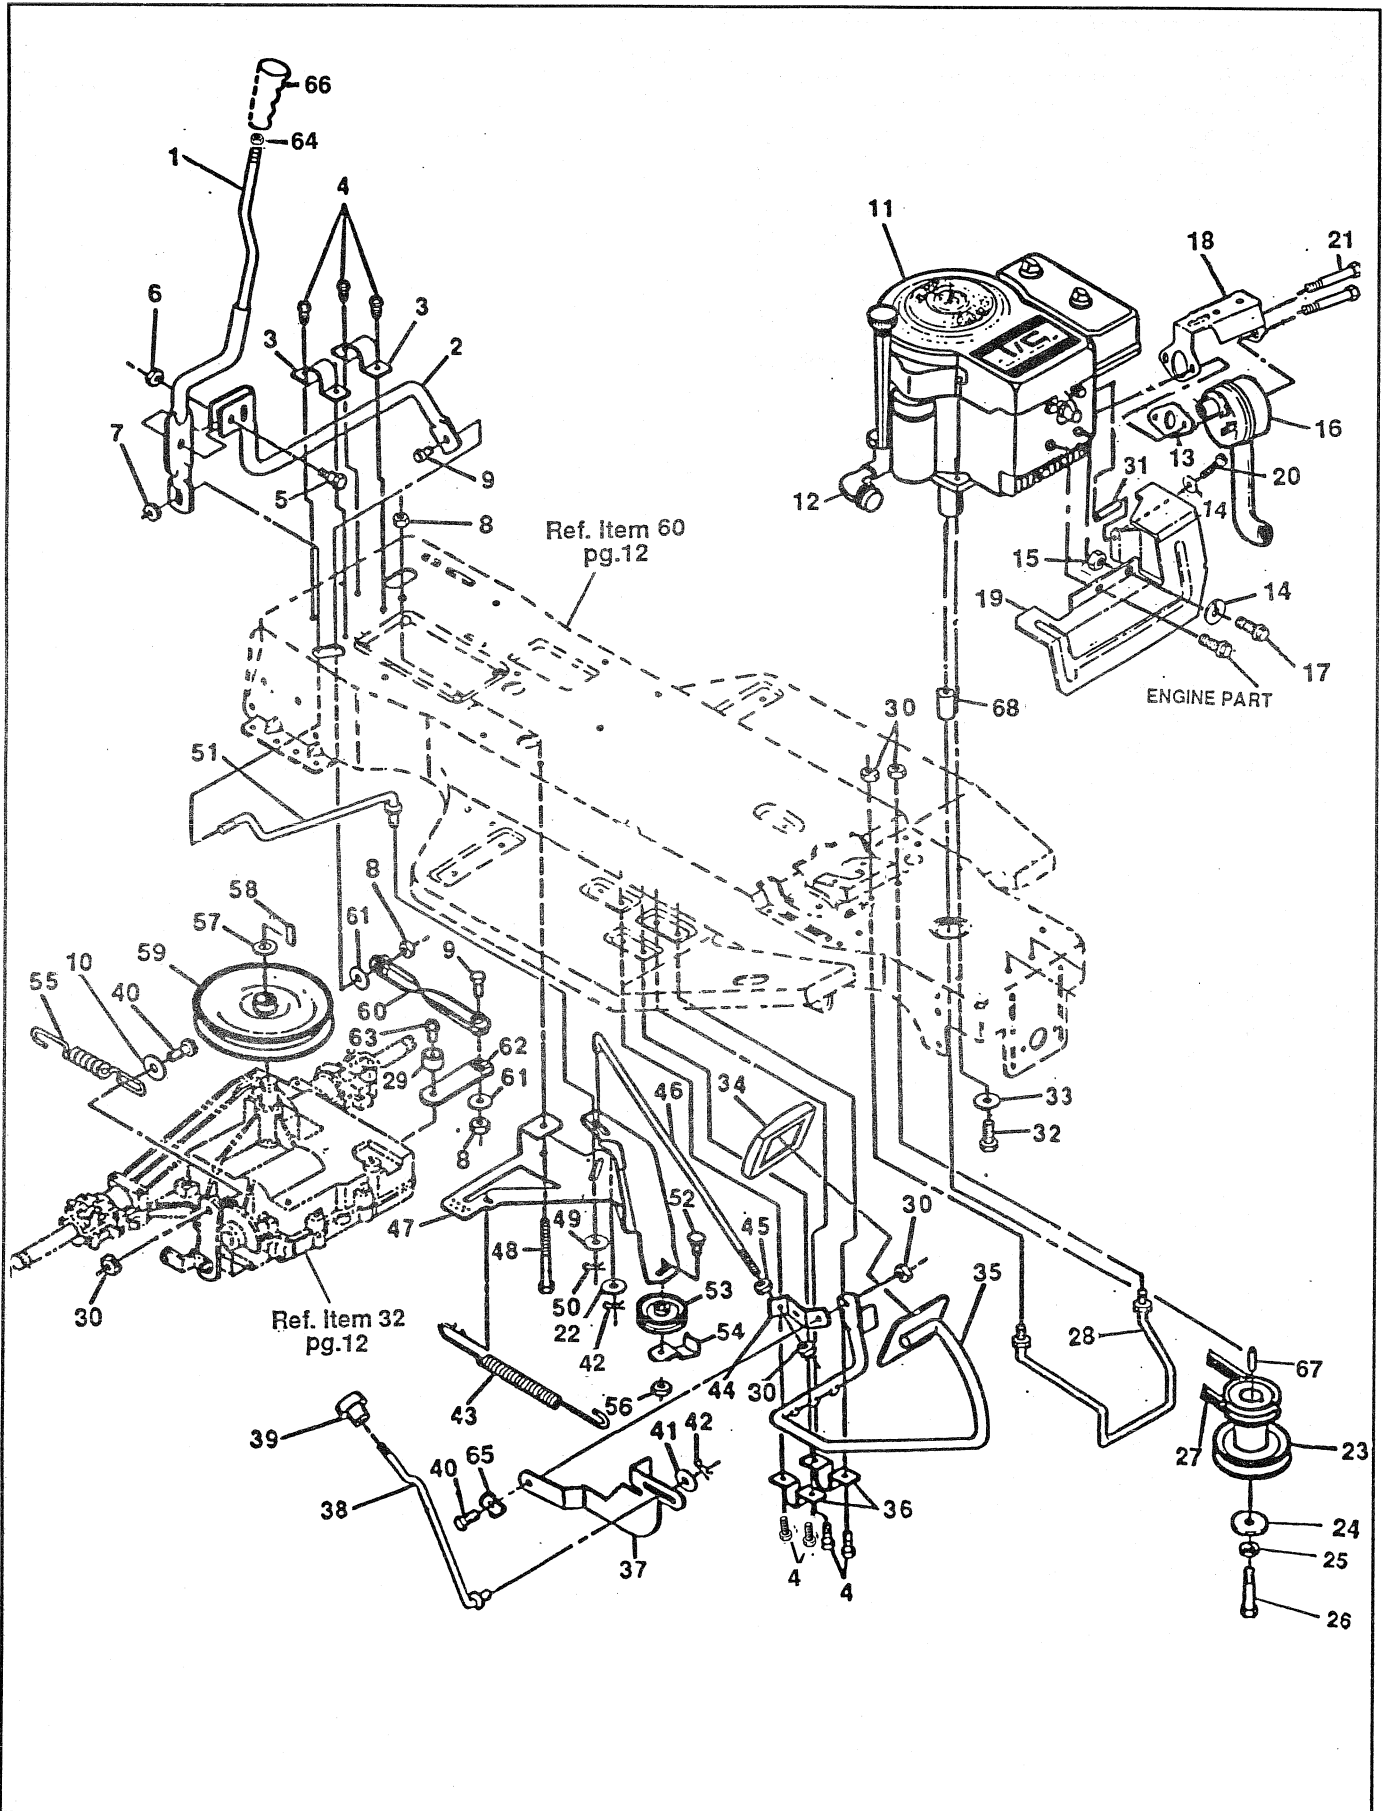

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125G (601 10 00-04)

Key No.	Part No.	Description	Key No.	Part No.	Description
1	6010006-98	Tube Assembly, Shift Pivot	35	6010007-74	Assembly, Clutch/Brake Arm
2	6010001-96	Tube Assembly, Shift	36	6010004-42	Bracket, Clutch/Brake Arm
3	6010001-65	Clip, Shift Lever	37	6010002-11	Lever, Park Brake
4	6010005-19	Screw, Hx Hd, Wshr Tap 5/16-18 x 1/2 In.	38	6010002-14	Rod, Parking Brake
5	6010001-99	Shoulder Bolt	39	6010002-19	Knob, Parking Brake
6	6010000-62	Nut, Hx, Ctrlk, 1/4-20 Thd.	40	6010000-99	Shoulder Bolt, 5/16-18 Thd.
7	6010006-53	Nut, Hx, Nylon, Lock 3/8-16 Thd.	41	6010000-17	Washer, 9/16 In.
8	6010000-60	Nut, Hx, Ctrlk, 3/8-16 Thd.	42	6010000-26	Cotter Pin
9	6010000-33	Screw, 3/8-16 x 1-1/4 In.	43	6010002-12	Spring, Clutch
10	6010003-22	Washer	44	6010002-07	Bracket, Brake Rod
11		Engine 12.5 Horsepower B&S	45	6010001-03	Nut, Hx, Keps, 5/16-18 Thd.
12	6010000-05	Elbow, 90°, 3/8 In.	46	6010002-13	Rod, Clutch
13	6010005-53	Gasket, Muffler	47	6010001-97	Arm, Idler
14	6010000-14	Washer, Split Lock	48	6010005-74	Shoulder Bolt, 3/8-16 Thd.
15	6010000-12	Nut, Hex 5/16-18 Thd.	49	6010001-06	Washer, Flat, 13/32 In.
16	6010003-89	Muffler, Round 5" Diameter	50	6010005-23	Hairpin
17	6010001-17	Screw, Wa Tap, 1/4-20 x 7/8 In	51	6010001-98	Rod, Shift-On-The-Go
18	6010002-61	Shield, Muffler	52	6010006-27	Carriage Bolt, 3/8-16 x 2 In.
19	6010007-26	Heat Shield, Engine	53	6010005-30	Idler Sheave, Backside
20	6010000-84	Screw, Hex Hd, 1/4-20 x 3-1/2 In.	54	6010002-01	Belt Retainer
21	6010002-60	Bolt, Shoulder, 5/16-18 x 4-1/3 In.	55	6010002-09	Spring, Brake
22	6010000-18	Flatwasher, .281 Idx.63 Od	56	6010005-42	Nut, Flange, 3/8-16 Thd,
23	6010002-93	Pulley, Engine	57	6010000-93	Retaining Ring
24	6010006-13	Washer, Pilot	58	6010001-29	Key, Woodruff, #606
25	6010000-16	Washer, Split, Lock 7/8 In.	59	6010001-89	Pulley
26	6010005-38	Screw, Hx Hd, 7/16-20 X 5 In.	60	6010003-59	Shift Link
27	6010001-94	V-Belt, 90 In. Long	61	6010000-20	Washer, Flat, 13/32 In.
28	6010003-76	Belt Guide	62	6010001-66	Shift Lever, Transaxle
29	6010006-22	Washer, Special	63	6010006-06	Screw, Hx Hd, 1/4-28 X 3/4 In.
30	6010000-59	Nut, Hex, Ctrlk, 5/16-18 Thd.	64	6010000-13	Nut, 3/8-16 Reg Hx
31	6010003-90	Spacer, Heat Shield	65	6010001-78	Washer, Wave
32	6010005-73	Screw, Hex Hd Tap, 3/8-16 x 1-1/4 In.	66	6010002-36	Handle, 3/8-16 Molded Grey
33	6010000-56	Washer, 3/8 In.	67	6010006-35	Key, Square 1/4
34	6010001-54	Pad, Clutch/Brake, Molded	68	6010002-15	Spacer, Engine Pulley

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

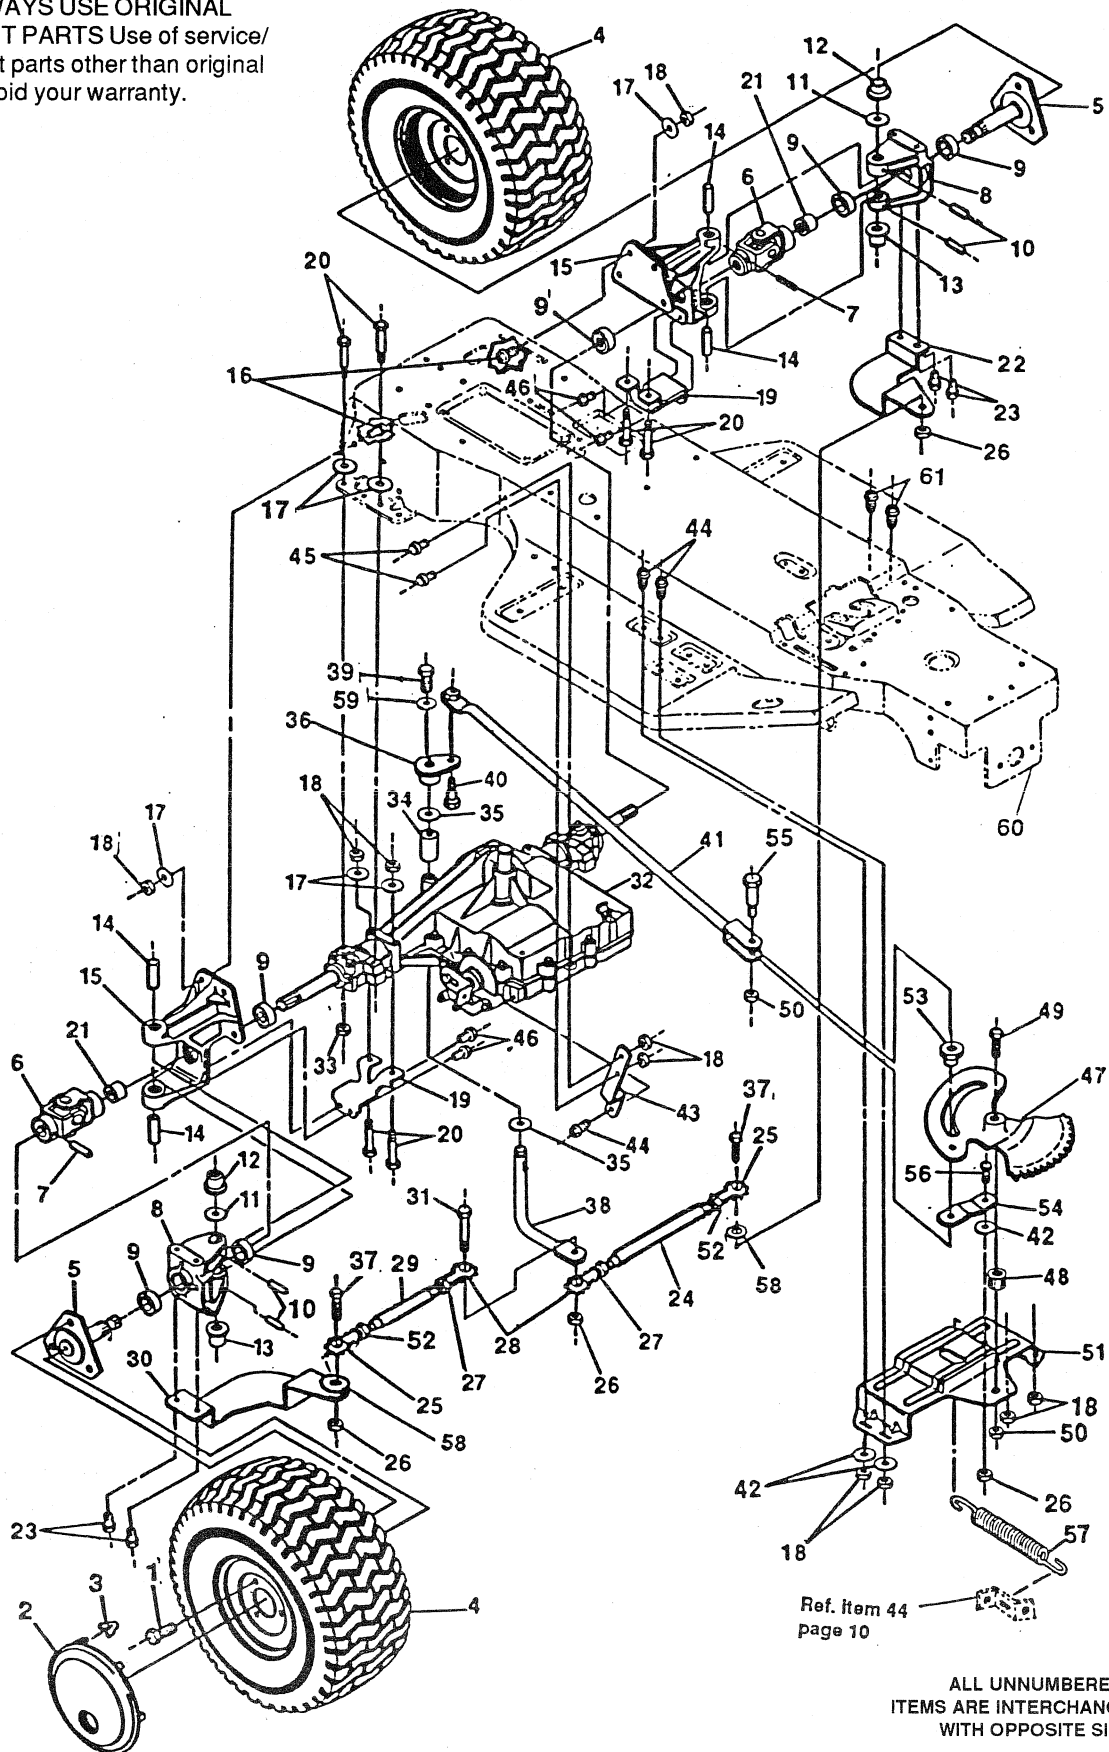

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G (601 10 00-04)


Key No.	Part No.	Description	Key No.	Part No.	Description
1	6010000-44	Screw, Hx Hd, 1/2-20 x 1/2 In.	39	6010005-36	Screw, 5/16-24 x 1 In.
2	6010002-91	Hubcap, 8 In.	40	6010000-41	Bolt, Shoulder, 3/8-24 Thd.
3	6010002-94	Clip, Hubcap	41	6010001-68	Rod Assembly, Rear Wheel Steer
4	(^)	Wheel & Tire Assembly, Rear	42	6010005-41	Washer, Flat, 3/8 In.
	6010006-40	Tire, 20x10.0x8, Turf	43	6010007-79	Bracket, Transaxle Stabilizer
	6010000-46	Wheel	44	6010005-20	Screw, Hx Hd, Self-Tap, 5/16-18 x 3/4 In.
	6010000-96	Valve Stem	45	6010000-60	Screw, 5/16-18x.63 Hhc Gr2
5	6010007-34	Hub Assembly	46	6010005-70	Screw, 5/16-18X.88 Wahhtap
6	6010007-75	U-Joint Assembly	47	6010001-75	Assembly, Sector Gear
7	6010005-22	Pin, Grooved, 1/4 x 1-1/2 In.	48	6010001-76	Bushing, Sector Gear
8	7601000-04	Bracket Assembly, Steering Pivot, Outer	49	6010002-18	Screw, Hx Hd, 1/2-20 x 2-3/8 In.
9	6010000-43	Bearing	50	6010001-07	Nut, Hx, Ctrlk, 1/2-20 Thd
10	6010005-50	Pin, Spring, 1/4 x 1-1/2 In.	51	6010007-18	Plate, 4-Wheel Steer Pivot
11	6010000-92	Washer, Flat	52	6010003-34	Nut, Jam, 3/8-24 Thd.
12	6010000-38	Bushing, Shouldered	53	6010002-03	Cam Yoke Roller
13	6010000-42	Bushing, Shouldered	54	6010001-69	Arm, Roller Swing
14	6010000-39	Pin, Steering Hinge	55	6010002-05	Shoulder Bolt, Cam Roller
15	7601000-04	Bracket Assembly, Steering Pivot, Inner	56	6010001-67	Shoulder Bolt, Cam Follower Arm Pivot
16	6010000-29	Screw, Hx Hd, 5/16-18 x 1 In.	57	6010005-17	Spring, Clutch/Brake Pedal Return
17	6010000-19	Washer, Flat, 11/32 In.	58	6010000-15	Washer, Split Lock
18	6010000-59	Nut, Hx, Ctrlk 5/16-18 Thd.	59	6010005-47	Washer, Flat
19	6010007-76	Bracket, Transaxle Mounting	60	6010007-80	Main Frame
20	6010007-77	Screw, 5/16-18x2.50 Hhc Gr5.	61	6010005-19	Screw, 5/16-18 x 1/2 In. Taptite
21	6010002-06	Spacer			
22	6010007-10	Arm, Rear Wheel Steer, L. H.			
23	6010007-78	Screw, 3/8-16x1.00 Wahhtap blk			
24	6010003-35	Tie Rod, L.H. (1/2"x9-1/2")			
25	6010003-33	Tie Rod End, L.H.			
26	6010005-32	Nut, Hex, Ctrlk, 3/8-24 Thd.			
27	6010000-48	Nut, Hex, Jam, 3/8-24 Thd.			
28	6010002-17	Tie Rod End, R.H.			
29	6010003-36	Tie Rod , 1/2 x 8" Long			
30	6010007-09	Arm, Rear Wheel Steer, R. H.			
31	6010000-82	Screw, Hx Hd, 3/8-24 x 1-3/4 In. (*)			
32		Transaxle			
33	6010005-40	Nut, Hx, Wd Fl, Lk 5/16-18 Thd			
34	6010002-02	Spacer			
35	6010001-00	Washer, Flat, 49/64 In.			
36	6010003-39	Steering Pivot			
37	6010000-81	Screw, 3/8-24 x 1-1/4 In.			
38	6010003-41	Shaft, Steering Pivot			

(^) Order Individual Parts

(*) Contact Your Nearest Transaxle Dealer For Parts & Service

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

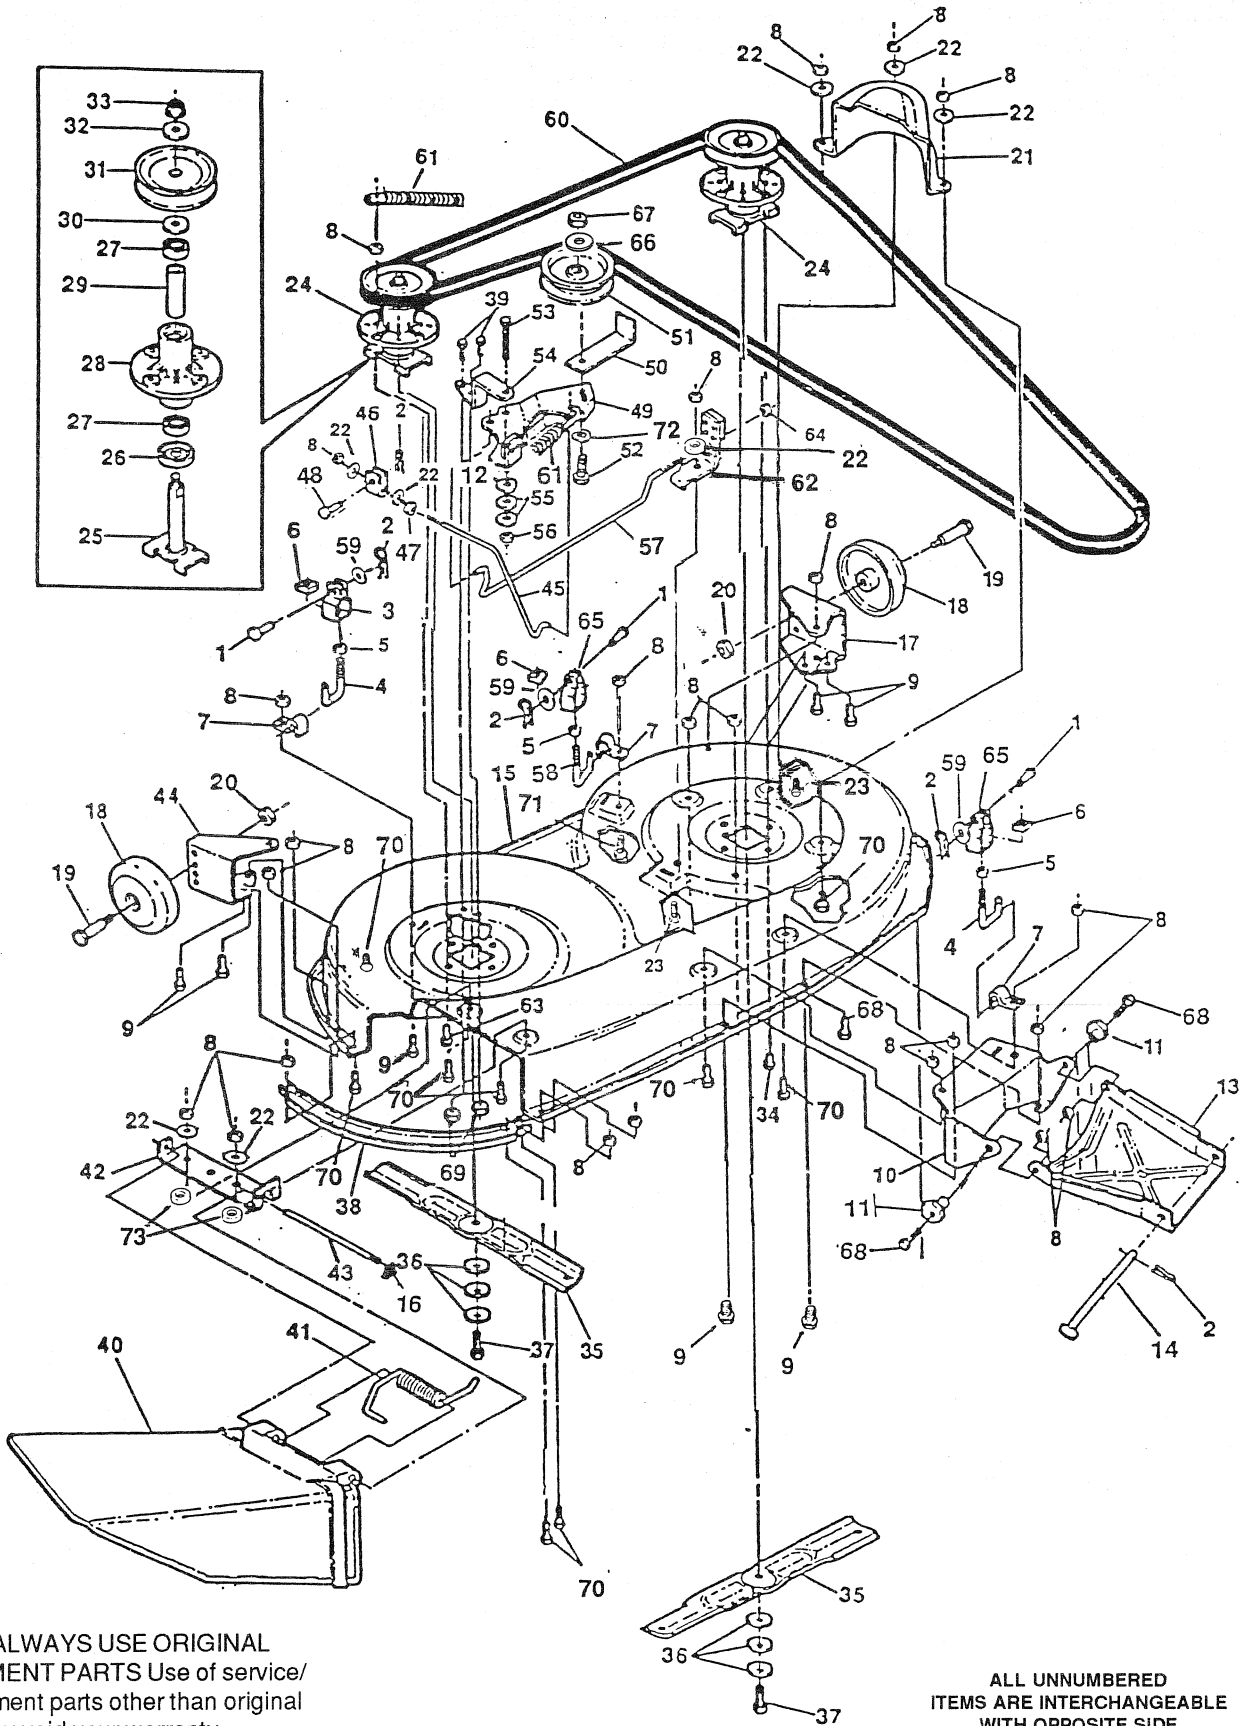

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G (601 10 00-04)

Key No.	Part No.	Description	Key No.	Part No.	Description
1	6010001-18	Pin, Clevis	41	6010004-66	Spring
2	6010006-04	Hairpin, Cotter	42	6010001-58	Bracket, Chute Mount
3	6010002-48	Clevis	43	6010002-24	Rod, Chute
4	6010003-62	Lift Rod	44	6010002-10	Wheel Bracket, R. H.
5	6010000-08	Nut, Hx Jam 1/2-13 Thd.	45	6010001-88	Clutch Rod
6	6010000-04	Nut, Sq. 1/2-13 Thd.	46	6010002-49	Clevis
7	6010001-32	Clip	47	6010000-12	Nut 5/16-18
8	6010000-59	Nut, Hx, Lock 5/16-18 Thd.	48	6010005-63	Clevis, Pin
9	6010000-72	Screw, Hx Hd, 5/16-18 x 5/8 In.	49	6010007-85	Idler Assembly
10	6010003-53	Bracket, Front	50	6010000-54	Belt Retainer
11	6010006-39	Nut, Adjusting	51	6010003-91	Idler Pulley
12	6010006-69	Washer .391 x 1.00 x .209	52	6010006-27	Carriage Bolt, 3/8-16 x 2 In.
13	6010004-02	Channel, Draw Bar	53	6010002-22	Shoulder Bolt, 3/8-16 x 3/4 In.
14	6010001-83	Rod, Drawbar	54	6010001-57	Idler Brace
15	6010007-81	Mower Deck	55	6010006-70	Washer, Flat .391 x 1.00 x .125
16	6010005-16	Push Nut	56	6010005-42	Nut, Hx, Wd Fl, 3/8-16 Thd.
17	6010002-25	Wheel Bracket, L. H.	57	6010001-72	Brake Rod
18	6010001-70	Wheel	58	6010004-22	Lift Rod
19	6010000-95	Shoulder Bolt, 3/8-16 Thd.	59	6010001-06	Flatwasher
20	6010000-60	Nut, Hex, Ctrlk, 3/8-16 Thd.	60	6010005-58	Belt, 83 In. Long
21	6010001-73	Belt Cover, Left Pulley	61	6010005-17	Spring
22	6010000-18	Flatwasher, 11/32 In.	62	6010002-04	Brake Blade
23	6010000-06	Screw, Hx Hd, 5/16-18 x 5/8 In.	63	6010001-21	Screw, Tap, 5/16-18 x 1-3/8 In.
24	6010006-11	Quill Assembly (Incl Nos. 25-33)	64	6010000-62	Nut 1/4-20
25	6010006-12	Saddle & Shaft Assembly	65	6010002-27	Clevis
26	6010005-69	Dust Shield	66	6010000-15	Washer, Split, Lock 3/8 In.
27	6010000-50	Bearing	67	6010000-13	Nut, Hx, 3/8-16 Thd.
28	6010007-82	Quill Housing	68	6010000-74	Screw, 5/16-18 x 1 In.
29	6010005-72	Spacer Tube	69	6010005-40	Nut, 5/16-18 Thd.
30	6010007-83	Spacer	70	6010007-86	Bolt, Carriage 5/16-18x.63 Gr5
31	6010007-84	Pulley	71	6010005-46	Bolt, Carriage 5/16-18x.63 Gr2
32	6010006-09	Washer	72	6010005-41	Washer, 3/8x7/8x.082
33	6010000-53	Nut, Wd Fl, Lk 7/16-20 Thd.	73	6010007-87	Flatwasher, .469x.92x.065
34	6010005-70	Screw, Wshr Hd, 5/16-18 x 7/8"			
35	6010001-87	Blade, 20.32 Hi-Lift			
36	6010000-98	Washer, Spring			
37	6010005-27	Screw, Hx Hd, 3/8-24 x 1 In.			
38	6010002-00	Toe Guard			
39	6010000-73	Screw, Hx Hd, 5/16-18 x 3/4 In.			
40	6010002-23	Chute Deflector			

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

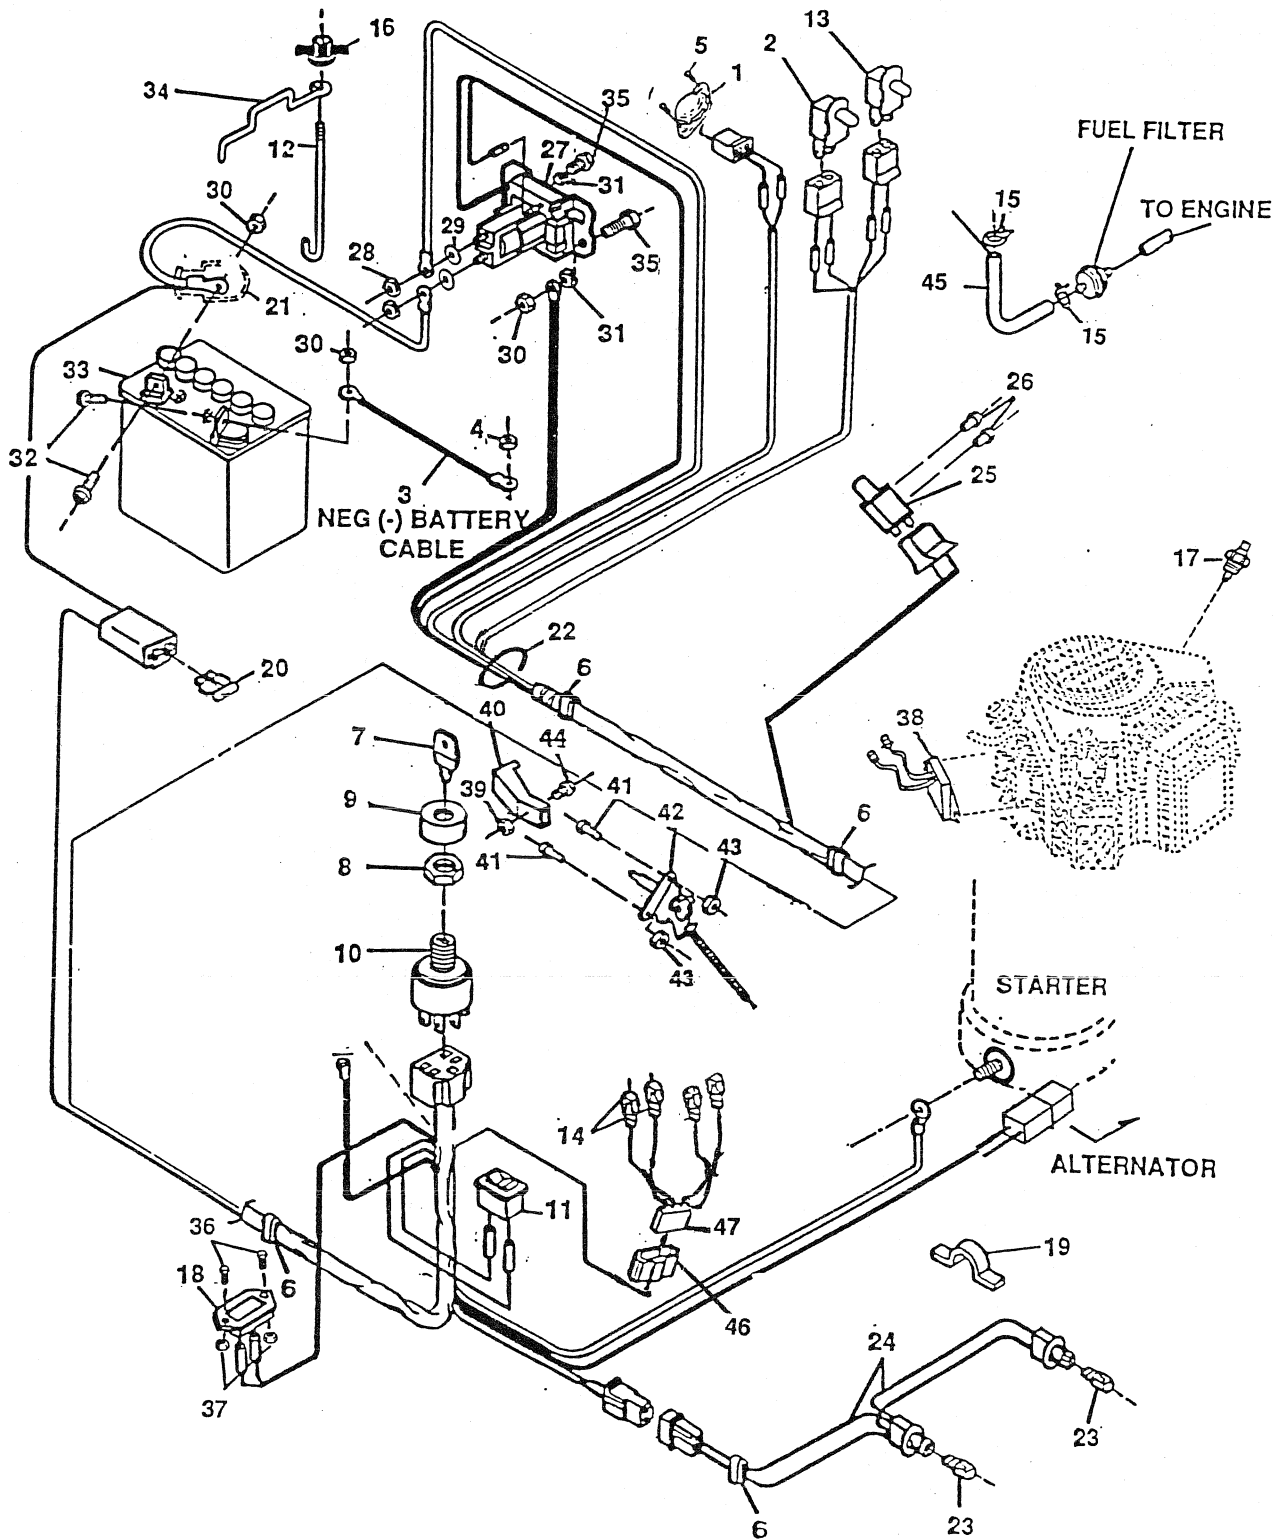

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125G (601 10 00-04)

Key No.	Part No.	Description
1	6010006-29	Seat Switch
2	6010003-21	Switch, Snap Mnt No. .140 Blue
3	6010005-96	Cable, Battery, Negative
4	6010001-30	Nut, Hx, Keps, 5/16-18 Thd.
5	6010000-65	Screw, 1/4-20 x .38
6	6010006-28	Tie Cable
7	6010001-23	Key, Ignition Switch
8	6010001-11	Nut, Switch
9	6010001-12	Boot, Switch
10	6010002-70	Switch, Ignition
11	6010001-20	Switch, Light
12	6010006-30	Rod, Battery Hold-Down
13	6010000-51	Switch, Snap Mnt No. .140 Wh.
14	6010006-33	Bulb, Indicator
15	6010005-61	Clamp, Gas Line
16	6010003-71	Wingnut
17	6010004-62	Oil Sensor
18	6010002-40	Minature Hour Meter
19	6010005-34	Press Clip
20	6010001-27	Fuse, 15A-32V, Spade Type
21	6010003-23	Boot, Rubber (Battery Cable)
22	6010007-88	Wire Harness
23	6010005-89	Bulb Headlamp
24	6010001-86	Assembly, Light Wire
25	6010006-91	Switch
26	6010006-26	Screw, Pn Hd, Tap #12 x 1/2 In.
27	6010005-92	Solenoid
28	6010000-09	Nut, Hx 5/16-24 Thd.
29	6010000-55	Washer, Lock 5/16 In.

Key No.	Part No.	Description
30	6010001-02	Nut, Hx, Keps, 1/4-20 Thd.
31	6010000-62	Nut, Hx, Ctrlk, 1/4-20 Thd.
32	6010000-24	Screw, 1/4-20 x 5/8 In.
33	6010001-36	Battery
34	6010001-82	Bracket, Battery Hold-Down
35	6010000-83	Screw, 1/4-20 x 3/4 In.
36	6010007-89	Screw, #6-32 x .50
37	6010001-05	Nut, Hx Keps 6-32
38	6010003-06	Regulator, Sen. Volt BS with Sensor
39	6010000-22	Nut, Hex. #8-32 Thd.
40	6010002-26	Knob, Throttle Control
41	6010007-90	Screw #10-24 x 5/8
42	6010004-81	Throttle Control
43	6010003-37	Nut, Hex, Nylon Lock #8-32 x 3/8 In.
44	6010000-63	Screw, Ph, Pn, #8-32 x 3/8 In.
45	6010005-55	Gas Line
46	6010007-91	Low Fuel Wire
47	6010002-69	4-Pin Lamp Holder

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G

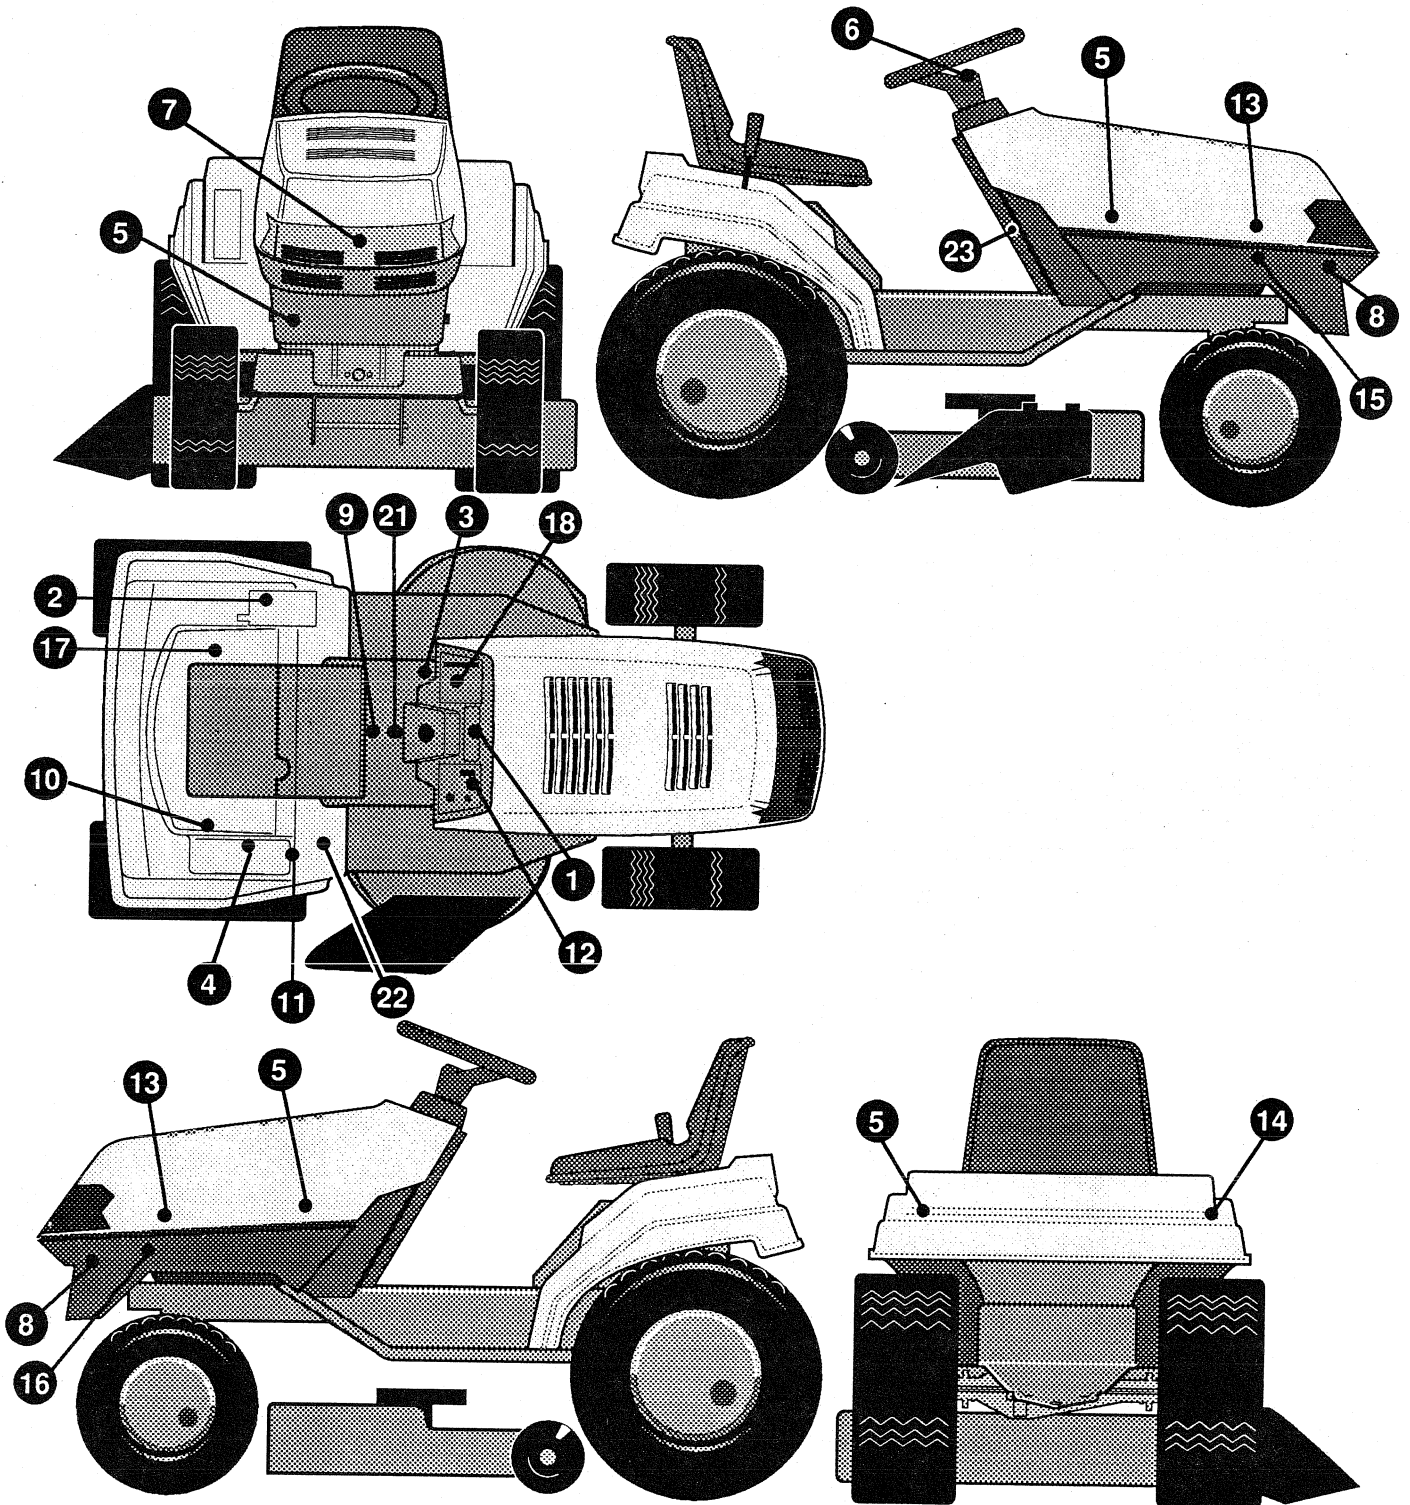

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125G (601 10 00-04)

Key#	Part#	Description	Qty.
1.	6010007-92	DECAL, DASH CHG,BLK,FUEL,ALL SY	1
2.	6010003-14	DECAL, GEAR SHIFT 6 SPEED ERO	1
3.	6010006-74	DECAL, GEAR SHIFT NEUTRAL ERO	1
4.	6010007-93	DECAL, BLADE CLUT/DECK HGTH ERO	1
5.	6010007-94	DECAL, INSTR FRENCH (CAN) ERO LT	1
6.	6010007-95	DECAL, SHIFT INDICATOR EXPORT	1
7.	6010004-10	DECAL, FENDER REAR,HOOD HUSQ.	4
8.	6010004-11	DECAL, GUNSIGHT CENT. STEER	1
9.	6010004-12	DECAL, GUNSIGHT CLEAR BACK	1
10.	6010004-13	DECAL, WHEEL 4 STEER HUSQ.	2
11.	6010007-96	DECAL, INSTRUC CONSOLE TOP	1
12.	6010004-38	DECAL, 4WS PATENT NO. 5048853	1
13.	6010004-47	DECAL, DEPRESS CL/BRAKE	1
14.	6010007-97	DECAL, DASH RH ISO HR,LG,SW	1
15.	6010004-89	DECAL, SHIFT-N-GO (HUSQ)	2
16.	6010007-98	DECAL, MODEL #4125G	2
17.	6010004-92	DECAL, PIN STRIPE RH	1
18.	6010004-93	DECAL, PIN STRIPE LH	1
19.	6010007-99	DECAL, DASH LEFT ENGLISH/ISO	1
20.		REFERENCE ONLY	
21.		REFERENCE ONLY	
22.	6010008-01	DECAL, OPER. INSTR. ERO TOP FRAME	1
23.	6010008-02	DECAL, DANGER FR/ENG	1
24.	6010008-03	DECAL, PARK BRAKE EXP	1



Husqvarna Forest & Garden Co.
a Division of WCI Outdoor Products Inc.
9006-J Perimeter Woods Drive
Charlotte, NC 28216