



# SERVICE PARTS LIST

**BULLETIN NO.**  
54-00-2590

<b>SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS</b>		REVISED BULLETIN	DATE OCT. '80
<b>10 H.P. ALTERNATOR—5000 WATTS</b>			
<b>CATALOG NO. 4772</b>	STARTING SERIAL NO. <b>H793 477202</b>	<b>WIRING INSTRUCTION 58-01-0968</b>	

3600 R.P.M.

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	-	10 H.P. Engine (For Components Refer to Engine Manufacturer)	(1)
2	06-55-1970	5/16-18 Hex. Nut W/E.T. Lockwasher	(6)
3	42-36-1320	Receptacle Box Bracket	(2)
4	06-55-1505	1/4-20 Hex. Nut W/E.T. Lockwasher	(4)
5	42-04-3550	Engine to Generator Adapter	(1)
6	06-75-0498	3/8-16x7/8" Hex. Hd. Cap screw W/I.T. Lockwasher	(4)
7	23-40-0490	Rotor (Includes 22-84-0730 Fan)	(1)
8	06-92-1260	5/16 x6.69" Stud	(1)
9	45-22-0370	Sleeve	(1)
10	23-58-0650	Stator	(1)
11	06-55-3780	Internal Wrenching Nut	(1)
12	06-75-0005	8-32x3/8" Hex. Hd. Cap screw W/Cone Washer	(12)
13	22-12-0180	Receptacle Box Wrapper	(1)
14	-	Receptacle Panel	(1)
15	-	End Bell	(1)
16	22-68-0180	End Bell Cover	(1)
17	06-81-5490	6-32x1.88" Pan Hd. Screw	(2)
18	06-97-2600	1/4" I.T. Lockwasher	(5)
19	42-36-1300	Generator Mounting Bracket	(1)
20	06-75-0268	1/4-20x5-1/2" Hex. Hd. Cap screw	(4)
21	06-57-5165	3/8-16 Hex. Locking Nut	(4)
22	06-75-0021	10-32x1/2" Hex. Hd. Cap screw W/E.T. Lockwasher	(2)
23	23-74-0760	Ground Lug	(1)
24	45-56-0171	Ground Strap	(1)
25	06-97-5450	No. 10 E.I.T. Lockwasher	(1)
26	06-75-0338	5/16-18x1-3/4" Hex. Hd. Cap screw W/E.T. Lockwasher	(4)
27	42-20-0570	Mounting Channel	(2)
28	06-75-0302	5/16-18x3/4" Hex. Hd. Cap screw W/E.T. Lockwasher	(2)
29	44-34-0090	Vibration Dampener	(4)
30	43-40-0205	Carrying Frame	(1)
31	02-50-4250	Roller Bearing	(1)
32	44-60-0580	Locking Pin	(4)
33	06-81-5670	6x3/8" Pan Hd. Tapping Screw	(4)
34	42-36-0990	Capacitor Mounting Bracket	(1)
35	23-33-0230	Capacitor	(1)
36	42-25-0330	End Bell	(1)
37	23-94-9690	3" Lead	(1)
	23-94-9695	3-1/4" Lead	(1)
38	22-20-0310	Brush Guide	(1)
39	22-18-0510	Carbon Brush	(2)
40	23-74-0770	Terminal Tab	(1)
41	23-74-0490	Terminal Tab	(1)
42	06-75-0014	6x5/8" Hex. Hd. Cap screw	(1)
43	-	Control Assembly	(1)
44	42-42-0170	Hole Plug	(4)
45	06-81-5640	8-32x3/4" Pan Hd. Screw W/E.T. Lockwasher	(1)
46	23-74-0790	Terminal Tab	(1)
47	22-36-0110	20 AMP Circuit Breaker	(2)
	22-36-0120	30 AMP Circuit Breaker	(1)
	22-36-0100	15 AMP Circuit Breaker	(2)
48	23-38-2781	Bridge Rectifier	(1)
49	06-55-0830	8-32 Hex Nut	(1)
50	23-66-1210	Switch	(1)
51	23-33-0390	240V 20A Twist Lock Receptacle	(1)
52	23-33-0380	120V 30A Twist Lock Receptacle	(1)
53	23-33-0370	120V Duplex Receptacle	(1)
54	23-35-0290	Receptacle Panel	(1)
55	06-81-5477	6-32x3/8" Pan Hd. Screw W/E.T. Lockwasher	(5)

SEE REVERSE SIDE FOR ILLUSTRATION

