



Parts List for 50-788 Type 1

Item Number	Part Number	Description	Qty Required
1	5140099-46	MOTOR	1
2	5140099-50	GASKET	1
3	5140099-51	SCREW	12
4	5140099-61	WASHER	33
5	5140099-52	BLOWER COVER	1
6	5140099-53	STAR WASHER	4
7	5140099-31	HEX BOLT	24
8	5140099-54	GASKET	1
9	5140099-55	IMPELLER	1
16	5140099-08	FILTER	1
17	5140099-56	BLOWER HOUSING	1
18	5140099-57	DUST INTAKE PORT	1
19	5140099-59	CROSS PANEL	2
20	5140099-60	SUPPORT PANEL	3
21	5140099-62	BASE	1
22	5140099-64	CASTER	2
23	5140099-66	BAND CLAMP	1
24	5140099-68	DUST BAG	2
25	5140099-69	CASTER	2
27	5140099-70	SCREW	2
28	5140099-73	CAP	2
30	5140099-74	FLEX HOSE	1
31	5140099-75	CLAMP	2
32	A15971	ID LABEL	1
33	5140099-76	CAPACITOR	1
34	5140099-77	CAPACITOR	1
35	5140099-78	SWITCH	1

Parts List for 50-788 Type 1

Item Number	Part Number	Description	Qty Required
36	5140099-79	KEY	1
37	5140099-80	SCREW	1
38	N055248	WARNING LABEL	1
39	N060608	NAMEPLATE	1
40	N064027	MOTOR LABEL	1
41	A16716	ROTATION LABEL	1
42	N045431	DANGER LABEL	1
43	A24358	WARNING LABEL	3
44	5140099-81	CIRCUIT BREAKER	1
45	5140099-82	HANDLE	1
46	5140099-09	SHAFT	1
47	5140099-10	PADDLE	4
48	5140099-11	CANVAS	4
49	5140099-30	HANDLE	1
50	5140099-34	GEAR WHEEL	1
51	5140099-35	BEARING	1
52	5140099-38	SEAL	1
53	5140099-39	BASE	1
54	5140099-42	CLAMP	1
55	5140099-83	CLIP	2
56	5140099-84	PAL NUT	2
57	5140099-85	SCREW	4
58	N061245	LABEL	2
60	N072494	LABEL	1
61	N061244	LABEL	1
63	A24379	WARNING LABEL	1
70	5140099-47	POWER CORD	1

Parts List for 50-788 Type 1

Item Number	Part Number	Description	Qty Required
71	5140099-48	STRAIN RELIEF	1
72	5140099-49	SWITCH BOX	1
73	5140099-58	SCREW	4
75	5140099-63	NUT	14
76	5140099-65	LOCK WASHER	2
77	5140099-67	BAG CLAMP	1
78	5140099-71	FLAT WASHER	4
79	5140099-72	NUT	2
80	5140099-12	HEX BOLT	16
81	5140099-28	FLAT WASHER	32
82	5140099-29	NUT	20
84	5140099-32	FLAT WASHER	2
85	5140099-33	HANDLE COVER	1
86	5140099-36	HEX BOLT	8
87	5140099-37	FLAT WASHER	12
846	5140099-87	HARDWARE PACK	1