



Ref. No.	Part No.	Description
1	802694	Adjustment Screw
2	802602	Adjustment Screw
3	802350	Cam Screw
4	804378	Cam
5	802562	Screw
6	48016	Finger Templet, 1/2"
7	803535	Bracket
8	804469	Lock Nut
9	804511	Spring
11	839632	Screw
12	858127	Clamp Bar
*	Use Ref. 13	If replacing old "T" type Clamp Bar with new "L" type Clamp Bar
13	850962	Spacer
14	858126	Base
15	804260	Locking Nut
16	879727	Knob, (Late)
	802777	Wing Nut, (Early)
18	858168	#10 x 1 3/4" Wood Screw
*	802102	Adjustment Screw Wrench, (1/16" Hex)

ACCESSORIES

- For 1/2" Dovetails Use:**
- 48016 Finger Templet, 1/2"
 - 43640 1/2" Dovetail Bit, 14°
 - 42027 Templet Guide
 - 42237 Guide Lock Nut

- For 1/4" Dovetails Use:**
- 48021 Finger Templet, 1/4"
 - 43639 1/4" Dovetail Bit, 7°
 - 42054 Templet Guide
 - 42237 Guide Lock Nut

- For 1/2" Rabbeted Dovetails Use:**
- 48029 Finger Templet, 1/2" Rabbeted
 - 43640 1/2" Dovetail Bit, 14°
 - 42027 Templet Guide
 - 42237 Guide Lock Nut