



# SERVICE PARTS LIST

**BULLETIN NO.**  
54-24-3023

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
<b>3/4" ROTARY HAMMER</b>		54-24-3022	Oct. '82
<b>CATALOG NO. 5351</b>	<b>STARTING SERIAL NO. 488-27500</b>	<b>WIRING INSTRUCTION</b> <b>58-01-0182</b>	
<b>CAT. NO. 5351-6</b>	<b>START SER. NO. 488-27500</b>	<b>BILINGUAL LABEL 10-98-6400</b>	

FOR CAT. NO. 5351-2  
(240V) TOOL USE:  
16-36-0105 ARMATURE  
18-36-0100 FIELD  
22-16-0257 CARBON BRUSH  
22-64-4100 CORD SET

FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.
1	49-96-0080	3/16 Socket Wrench	(1)	43	06-97-4050	1/4 Split Ring Lock Washer	(3)
2	48-86-0050	Drift Pin	(1)	44	45-88-7030	Ram Spring Washer	(1)
3	06-75-2900	1/4-20x3/8 Skt. Hd. Screw	(1)	45	06-97-2600	Internal Tooth Lock Washer	(1)
4	44-94-0140	Depth Gauge Rod	(1)	46	06-81-4700	1/4-20x1/2 Rd. Hd. Screw	(1)
5	43-76-0252	Nose Housing Assembly (Includes Fig. No. 6)	(1)	47	34-60-1600	Retaining Ring	(1)
6	42-40-0421	Nose Housing Bushing	(1)	48	28-14-1312	Gear Case Assembly	(1)
7	43-12-0081	Hex Driver	(1)	49	43-62-0410	Handle	(1)
8	06-77-0625	6x1/4 Rd. Driv-In Screw	(2)	50	38-50-4973	Spindle	(1)
9	45-22-0252	Sleeve Assembly (Includes Fig. No. 8)	(1)	51	02-50-2010	Needle Bearing	(1)
10	02-20-4000	Ball Bearing	(1)	52	36-66-4026	Intermediate Pinion Shaft	(1)
11	30-15-0075	Cam	(1)	53	32-42-1291	Intermediate Gear	(1)
12	34-80-3100	Retaining Ring	(1)	54	02-04-0820	Ball Bearing	(1)
13	49-62-0080	Hammer Dust Shield	(1)	55	34-40-0900	Shift Shaft O-Ring	(2)
14	48-03-3610	Adapter ("A" Taper)	(1)	56	45-08-0101	Shift Shaft	(1)
15	44-40-0301	Sleeve Nut	(1)	57	40-50-1200	Spring	(1)
16	43-46-0130	Depth Gauge Assembly	(1)	58	02-02-0180	3/16 Steel Ball	(1)
17	31-55-0050	Shield	(1)	59	34-60-0525	Shift Shaft Retaining Ring	(1)
18	34-80-2925	Internal Retaining Ring	(1)	60	02-04-0940	Ball Bearing	(1)
19	45-06-0150	Grease Seal	(1)	★61	16-30-0110	120 V Armature	(1)
20	34-40-1400	O-Ring	(1)	★62	10-98-5987	Caution Label (Not Shown) Omit For Canadian Tools	(1)
21	45-88-7040	Thrust Washer	(1)	63	31-05-0050	Baffle	(1)
22	38-50-5006	Chuck Spindle	(1)	64	06-57-2975	8-32 Flexlock Hex Nut	(2)
23	34-60-2020	Retaining Ring	(1)	65	18-30-0100	120 V Field	(1)
24	30-75-0072	Ram Assembly (Includes Fig. No. 25)	(1)	66	23-16-0456	Field Insulator	(1)
25	42-40-0431	Ram Bushing	(1)	67	31-55-0030	Coil Shield	(1)
26	40-50-7630	Ram Spring	(1)	68	02-04-0891	Ball Bearing	(1)
27	43-76-0211	Ram Housing Assembly (Includes Fig. Nos. 45 & 46)	(1)	69	28-50-6148	Motor Housing	(1)
28	43-44-0260	Gasket	(1)	70	12-99-0050	Nameplate	(1)
29	06-81-7610	12-24x2-3/8 Fil. Hd. Sem	(3)	71	06-85-0200	6x1/4 Rd. Hd. Type Z Screw	(2)
30	34-80-3100	Retaining Ring	(1)	72	06-81-0047	8-32x1/2 Pan Hd. Screw	(4)
31	02-08-0750	Ball Bearing	(1)	73	06-81-0472	8-32x1 Pan Hd. Screw	(5)
32	44-60-0370	Shift Pin	(1)	★74	06-55-0825	8-32 Hex Nut	(5)
33	40-50-7610	Shift Pin Spring	(1)	★75	31-44-0562	R.H. Half D Handle	(1)
34	32-75-2681	Spindle Gear	(1)	76	06-81-8625	6-32x1/4 Ground Screw	(1)
35	06-42-0800	Woodruff Key	(2)	77	31-86-0120	Insulating Spacer	(2)
36	06-81-3620	8-32x1/2 Oval Hd. Screw	(2)	78	06-81-1055	8-32x2-3/16 Field Bolt	(2)
37	31-15-0050	Vent Cover	(2)	★79	06-95-0215	8-18x1/2 Thread Form. Screw	(1)
38	02-50-3100	Needle Bearing	(1)	80	23-66-0505	Switch	(1)
39	28-28-1432	Diaphragm (Includes 06-65-0800 Groove Pin)	(1)	★81	22-22-0302	Brush Holder Assembly	(1)
40	40-50-7620	Ram Buffer Disc Spring	(3)	★82	23-44-0120	Brush Retaining Screw	(2)
41	43-76-0221	Buffer Spring Housing	(1)	83	23-52-0160	Brush Spring	(2)
42	06-75-3200	1/4-20x1-1/4 Skt. Hd. Cap Screw	(3)	84	22-16-0250	Carbon Brush	(2)
				85	06-81-5477	6-32x3/8 Phillips Pan Hd. Sem	(2)
				★86	31-44-0572	L.H. Half D Handle	(1)
				★87	22-64-0405	Cord Set	(1)

