



SERVICE PARTS LIST

BUL. 54-40-2020

7-1/4" WORM DRIVE SAW

REVISED BUL.

DATE

March '79

Catalog No.

6373

Starting
Serial No. **626-1001**

WIRING INSTRUCTIONS
58-01-0345

Specify Catalog and Serial No. when ordering parts

FOR CAT. NO. 6372-2
(240V) TOOL USE:
16-76-0070 ARMATURE
18-76-0080 FIELD
22-64-4000 CORD SET

4400 R.P.M.
15 AMPS

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	06-95-0217	8-32x5/8" Pan Hd. Thd Form Screw	(2)	44	06-95-6260	8-32x7/8" Oval Hd. Swage Screw	(3)
2	31-44-0600	Top Handle	(1)	45	06-95-0212	8-32x1/2" Pan Hd. Swage Screw	(4)
3	06-57-5050	5/16 24 Lock Nut	(1)	46	28-14-1252	Gear Case (Includes Fig No. 47)	(1)
4	45-88-0610	Washer	(1)	47	45-58-0090	Spring Anchor Stud	(1)
5	02-04-1030	Ball Bearing	(1)	48	06-95-5400	10-24x1" Hex. Hd. Swage Screw	(3)
6	45-36-0980	Spacer	(1)	49	43-44-0230	Gasket	(1)
7	32-91-0110	Worm	(1)	50	44-68-0130	Oil Plug	(1)
8	45-06-0270	Armature Seal	(1)	51	06-95-5620	1/4-20x3/8" Hex. Hd. Swage Screw	(1)
9	45-36-0970	Spacer	(1)	52	45-88-7440	Nylon Washer	(1)
10	02-04-1535	Ball Bearing	(1)	53	43-44-0240	Gasket	(1)
11	34-80-2120	Internal Retaining Ring	(1)	54	28-72-1070	Bearing Cover Plate	(1)
12	16-70-0070	120V Armature (Includes Fig. No. 13)	(1)	55	06-95-0217	8-32x5/8" Pan Hd. Thd. Form Screw	(4)
13	34-60-1315	Ext. Retaining Ring	(1)	56	34-60-0525	Retaining Ring	(2)
14	23-16-0850	Insulating Sleeve	(1)	57	44-60-0341	Pivot Pin	(1)
15	06-95-0395	10-24x2-1/2" Pan Hd. Swage Screw	(2)	58	28-20-2521	Guard Cover	(1)
16	18-70-0080	120V Field	(1)	59	42-38-0100	Bumper	(1)
17	02-04-0850	Ball Bearing	(1)	60	45-88-0570	Bumper Washer	(1)
18	28-50-6062	Motor Housing (Includes Fig. No. 19)	(1)	61	02-50-2423	Needle Bearing	(1)
19	06-92-0750	5/16-18x1-1/8" Stud	(1)	62	06-95-0210	8-32x3/8" Pan Hd. Swage Screw	(2)
20	06-85-0200	6x1/4" Rd. Hd. Type Z Screw	(2)	63	31-15-0110	Hood	(1)
21	12-99-0010	Nameplate Blank	(1)	64	06-42-2200	Woodruff Key	(1)
22	06-83-2650	1/4-20x3/8" Knrl Set Screw	(2)	65	38-50-5170	Spindle	(1)
23	23-66-0355	Switch	(1)	66	32-90-0101	Worm Gear	(1)
24	06-81-9125	10-24x1/4" Lg. Sems Ground Screw	(1)	67	45-36-0473	Spacer	(1)
25	06-81-0472	8-32x1" Pan Hd. Screw	(4)	68	45-06-0260	Spindle Seal	(1)
26	12-98-7081	Caution Label (Not Shown)	(1)	69	34-80-2960	Internal Retaining Ring	(1)
27	06-95-0340	10-24x3/4" Fil. Hd. Swage Screw	(4)	70	02-04-1746	Ball Bearing	(1)
28	49-96-6200	9/16" Wrench (Not Shown)	(1)	71	34-40-2120	O-Ring	(1)
29	31-44-0450	R.H. Handle Half	(1)	72	43-78-0125	Lower Hub	(1)
30	31-44-0440	L.H. Handle Half	(1)	73	40-50-3780	Lower Guard Spring	(1)
31	06-55-0825	8-32 Hex. Nut	(4)	74	06-81-5800	6-32x5/16" Fil. Hd. Sem	(2)
32	23-86-0060	Washer	(2)	75	43-62-0390	Saw Guard Handle	(1)
33	22-22-1015	Brush Holder Assembly	(2)	76	14-32-0160	Saw Guard Assembly	(1)
34	22-18-0055	Carbon Brush Assembly	(2)	77	34-60-2150	Retaining Ring	(1)
35	23-44-0030	Brush Retaining Screw	(2)	78	43-34-0231	Inner Flange	(1)
36	22-64-0075	Cord Set	(1)	79	—	Saw Blade (Select From Catalog)	(1)
37	06-81-5400	8-32x5/16" Binder Sems	(2)	80	43-34-0141	Outer Blade Flange	(1)
38	44-20-0070	Lever Lock	(2)	81	45-04-0340	Blade Retaining Screw	(1)
39	44-10-0090	Nut Adjusting Lever	(2)	82	06-55-1000	10-24 Hex Nut	(1)
40	44-40-0240	Shoe Adjustment Nut	(2)	83	06-97-5450	1/4 Lock Washer	(1)
41	45-88-5245	Washer	(2)	84	06-92-2520	10-24x1-5/16 Stud	(1)
42	14-74-0160	Shoe Assembly	(1)				
43	06-10-3195	5/16-18x3/4" Carriage Bolt	(1)				

