



Parts List for 7346SP Type 1

Item Number	Part Number	Description	Qty Required
1	A24449	FIELD CASE	1
2	A24734	SWITCH BUTTON	1
3	A24417	SWITCH SLIDE	1
4	449899-05	RING,BRUSH	1
5	619346-00SV	FIELD	1
6	330019-25	SCREW,THD.FORM	2
7	445861-25	BRUSH	2
8	445217-01	RUBBER CUP	1
9	A27517SV	ARMATURE ASSEMBLY	1
10	874197	BEVEL GEAR	1
11	699937	GEAR SHAFT	1
12	5140081-84	GEAR CASE KIT	1
13	872502	SPACER	1
14	699924	SPACER-BEARING	1
15	838995SV	BALL BEARING	2
16	699925	SPACER-BEARING	1
17	881500	VACUUM HOUSING	1
18	883486	SCREW	3
19	884277	ECCENTRIC HSG KIT	1
20	874513	ECCENTRIC WASHER	1
21	A29148	SCREW	1
22	907359	PLUG-RUBBER	1
24	872991	SPINDLE & BRNG ASSY	1
26	874011	COUNTERWEIGHT	1
26	699933	COUNTERWEIGHT	1
27	877817	SCREW	2
28	699938	PLATE-GEAR	1

Parts List for 7346SP Type 1

Item Number	Part Number	Description	Qty Required
29	882187	SCREW	1
31	697029	O-RING	1
33	A25100	END CAP ASSY	1
34	A25385	CORDSET	1
35	330019-02	SCREW,PLASTITE	2
36	380414-00	CLAMP,CORD	1
37	A25305	LEAD ASSY.	1
38	851584	WASHER	1
39	A26323	SWITCH	1
40	N059511	SPEED CONTROL	1
41	A26907	LEAD ASSY.	1
42	A26656	WIRE NUT	1
43	A24755	DISK	1
44	330019-13	SCREW,M4X19	3
45	A24354	BAFFLE	1
46	876651	SCREW	4
47	A27275	WARNING LABEL	1
48	A25830	SPEC-LABEL	1
49	A25831	ID LABEL	1
52	891111	PAD	1
52	A14387	PAD	1
52	16000	6 IN STANDARD PAD	1
53	A24447	CAP	1
100	445860-00	SPRING,BRUSH	2
101	330003-05	BEARING,BALL	2
102	872503	SPACER	1
103	872990	PINION-BEVEL	1

Parts List for 7346SP Type 1

Item Number	Part Number	Description	Qty Required
104	882408	CORD PROTECTOR	1
105	699681	AUX HANDLE	1
106	692900	WRENCH	1
800	875914	TUBE GREASE	1
800	875667	LUBRICANT-4LBS	1
856	876329	HOSE ADAPTER	1
856	5140042-92	DUST HOOD	1
856	39335	1 1/2-2 1/4 ADAPTER	1
856	850218	WASHER	1
856	73333	DUST COLLECTION KIT	1