


## Breakdown for the HB-1648H & HB-2248H Hand Brake

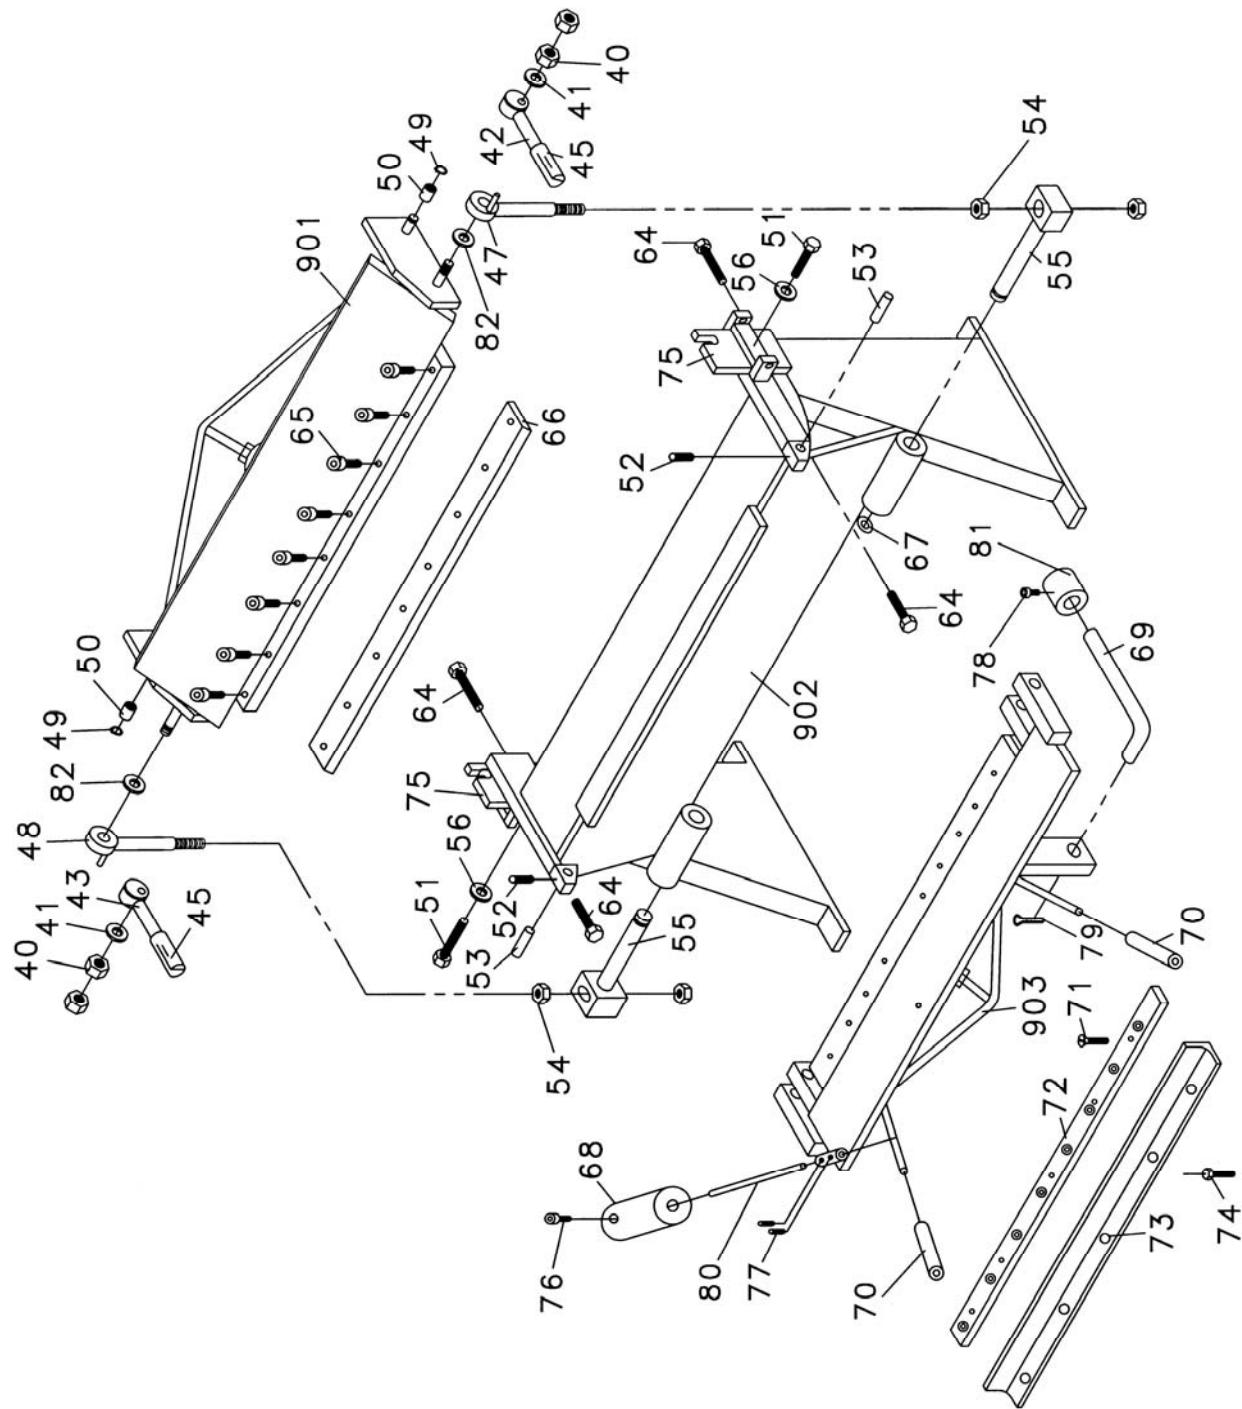

## Parts List for the HB-1648H & HB-2248H Hand Brake

<b>Index</b>	<b>Part</b>		<b>Description</b>	<b>Size</b>	<b>Quantity</b>
<b>No.</b>	<b>No.</b>				
901	HB1648N-901		Hold Down Assembly		1
	HB2248N-901		Hold Down Assembly		1
902	HB1648N-902		Base Assembly		1
	HB2248N-902		Base Assembly		1
903	HB1648N-903		Apron Assembly		1
	HB2248N-903		Apron Assembly		1
40	HB1648N-40		Lock Nut	M16	4
41	HB1648N-41		Flat Washer	M16	2
42	HB1648N-42		Clamp Handle R.H.		1
43	HB1648N-43		Clamp Handle L.H.		1
45	HB1648N-45		Handgrip		2
47	HB1648N-47		Yoke Assembly R.H.		1
48	HB1648N-48		Yoke Assembly L.H.		1
49	HB1648N-49		Retainer Ring	12	2
50	HB1648N-50		Bushing		2
51	HB1648N-51		Hex Cap Screw	M12x30	2
52	HB1648N-52		Set Screw	M6x10	2
53	HB1648N-53		Hinge Pin		2
54	HB1648N-54		Hex Nut	M16	4
55	HB1648N-55		Swivel Pin		2
56	HB1648N-56		Washer	M12	2
64	HB1648N-64		Hex Cap Screw	M8x50	4
65	HB1648N-65		Screw	M8x10	8
66	HB1648N-66		Holddown		1
67	HB1648N-67		C-Clip	22	2
68	HB1648N-68		Counter Weight		1
69	HB1648N-69		Stop Rod		1
70	HB1648N-70		Pipe		2
71	HB1648N-71		Flat Head Screw	M8x16	8
72	HB1648N-72		Blade		1
73	HB1648N-73		Angle Support		1
74	HB1648N-74		Hex Cap Screw	M8x25	5
75	HB1648N-75		Step Bracket L & R		2
76	HB1648N-76		Socket Head Cap Screw	M8x30	1
77	HB1648N-77		Set Screw	M8x10	2
78	HB1648N-78		Socket Head Cap Screw	M10x14	1
79	HB1648N-79N		Cotter Pin	2x20	1
80	HB1648N-80		Rod		1
81	HB1648N-81		Stop		1
82	HB1648N-82		Flat Washer	M20	2
	HB1648N-ID		ID Label (not shown)		1
	HB2248N-ID		ID Label (not shown)		1
	HB1648N-W		Warning Label (not shown)		1
	HB1648N-J		JET Label (not shown)		1