


77

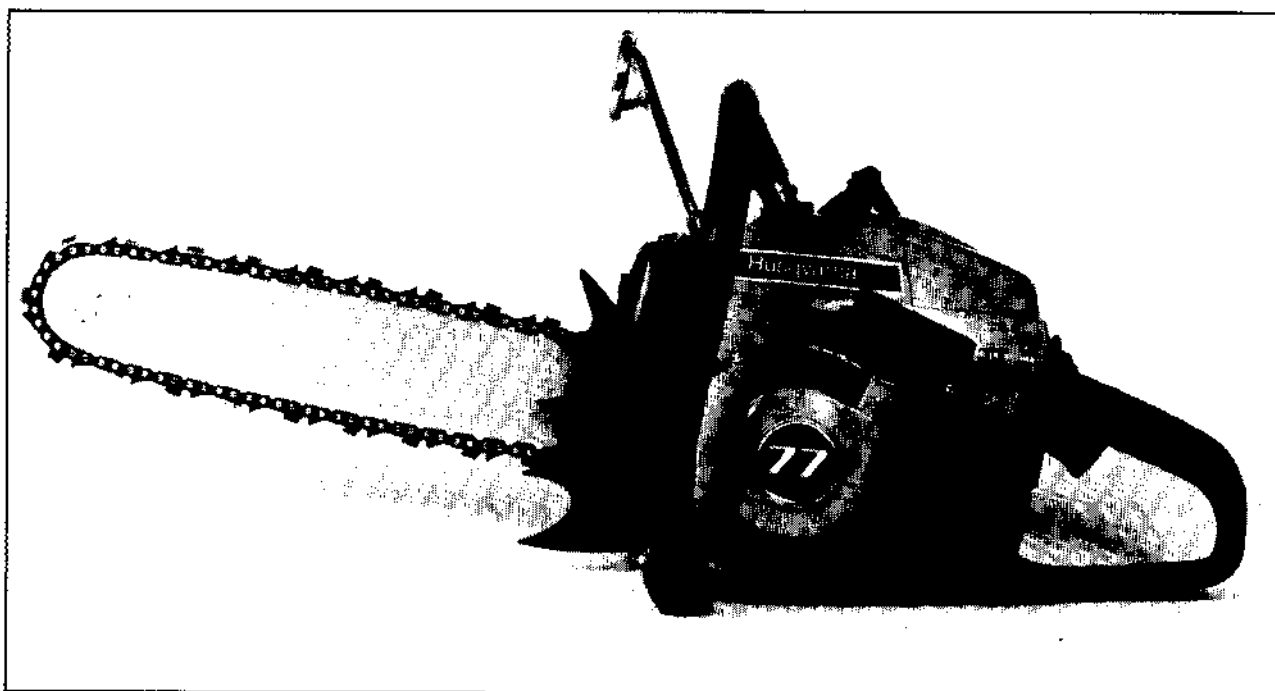

1. 1984



Reservdelar




Spare parts

Ersatzteile

Pièces de rechange

A * compl 501 69 22-01

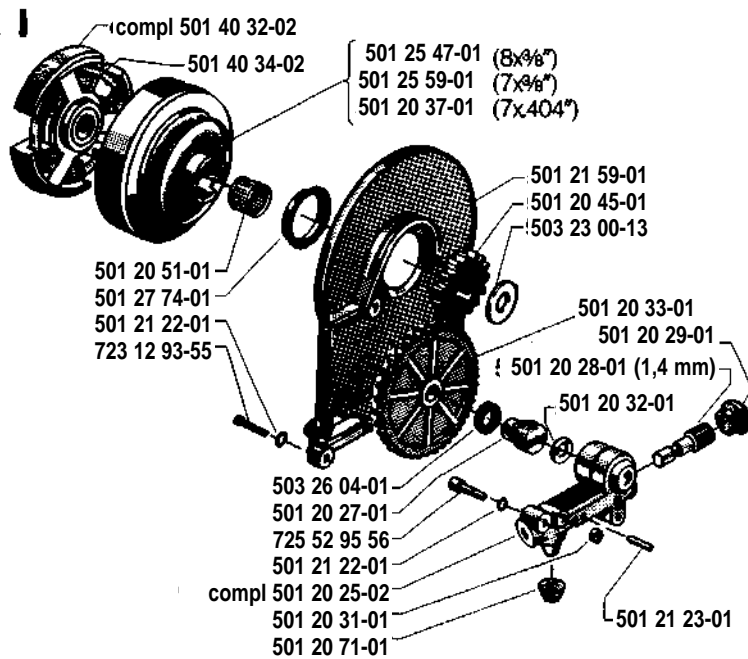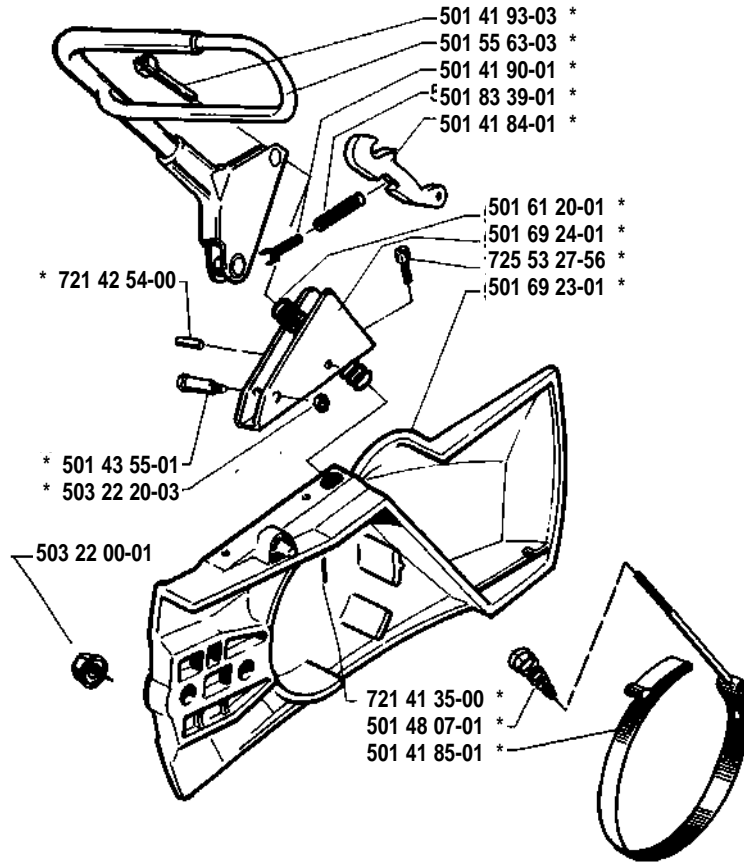

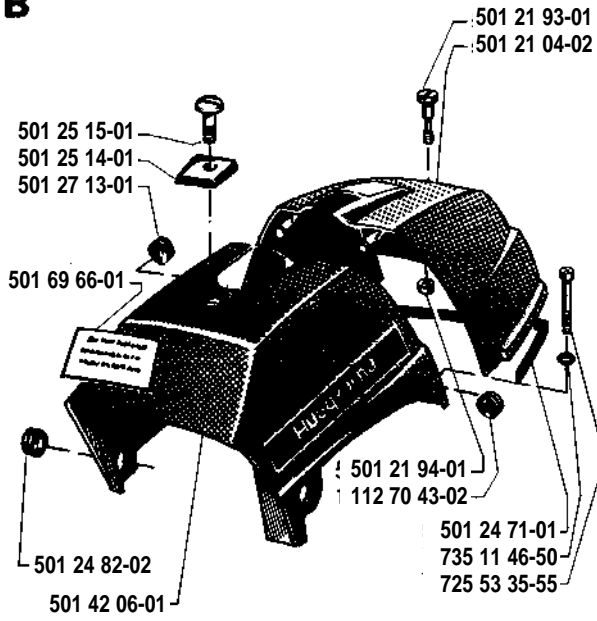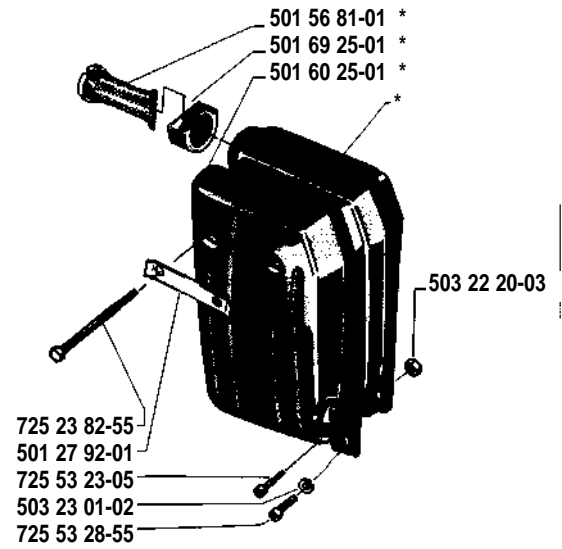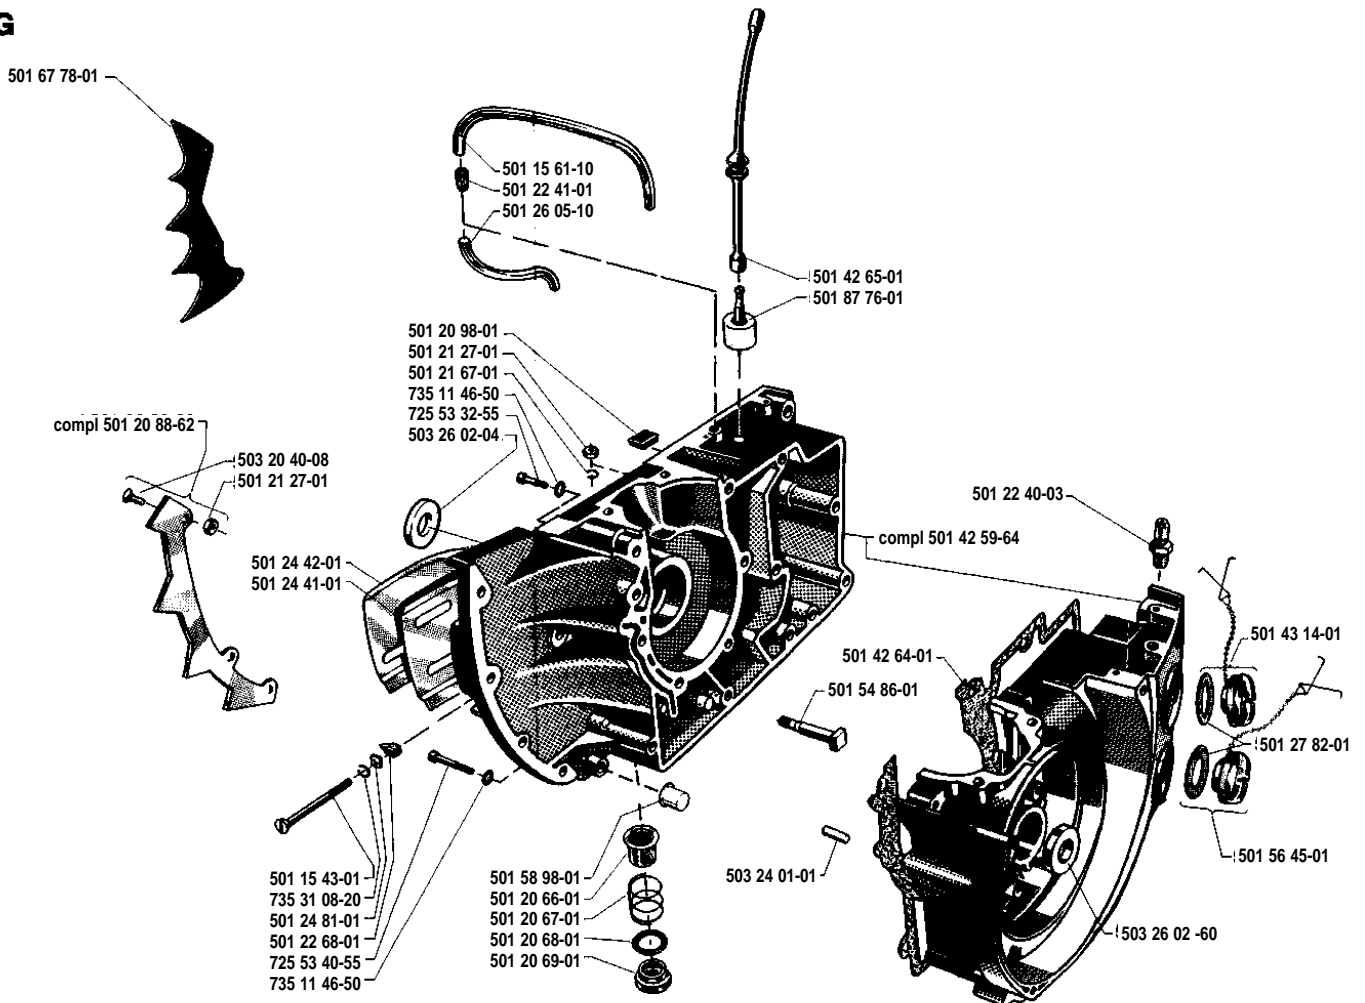B**C** * compl 501 61 69-02**G**

D * compl 501 25 02-61

503 23 50-11 (CJ7Y)
503 23 51-08 (RCJ7Y)


735 11 46-50
725 53 37-55

⓪ 501 25 21-01
⓪ 501 28 93-01

! 501 25 04-03 (B)
! 501 25 04-04 (C)
! 501 25 04-05 (D)

501 15 28-01 *


* 501 57 62-01
* 501 05 64-01

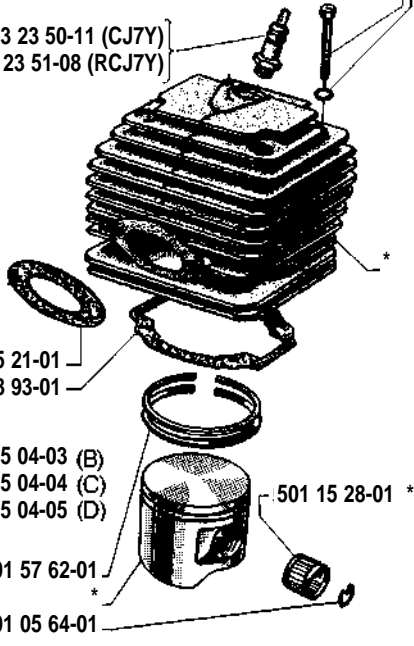

H * compl 501 55 61-01


* 501 15 28-01
* 738 22 02-25

738 22 02-25 *
735 88 06-00

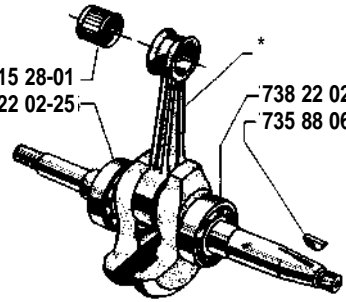

E

501 20 61-01
503 22 20-03
501 41 75-04

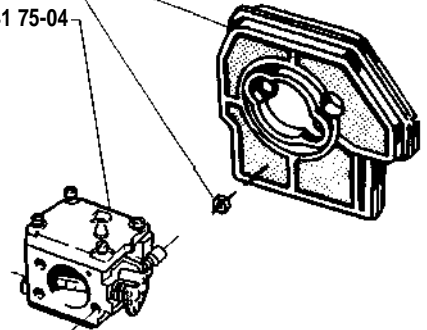


501 41 06-01

501 83 43-01


501 25 08-01

501 25 10-01
⓪

503 20 81-01

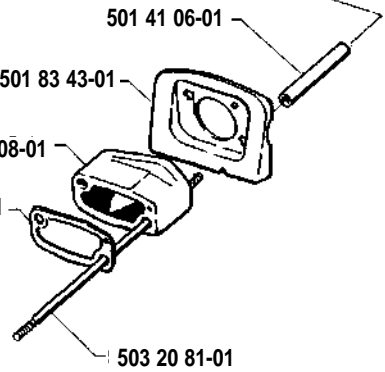


N

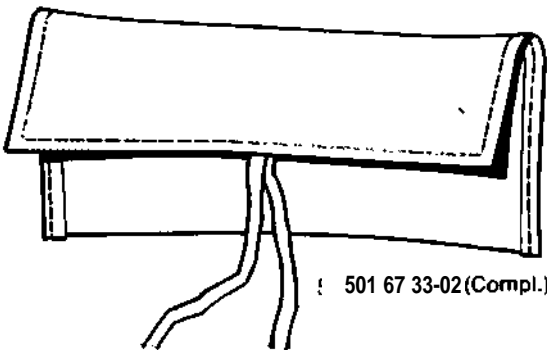


! 501 67 33-02 (Compl.)









F

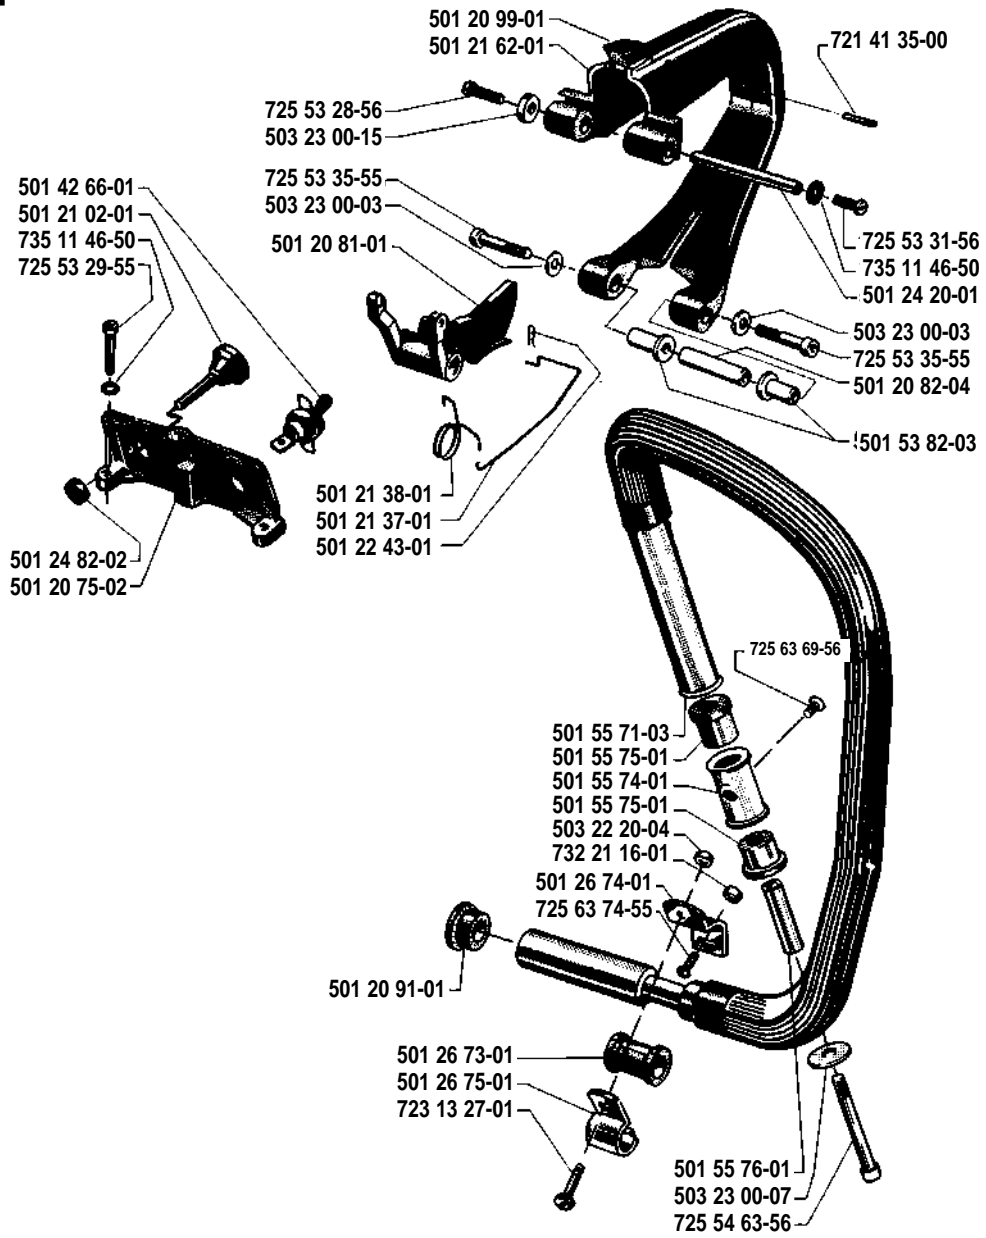


L

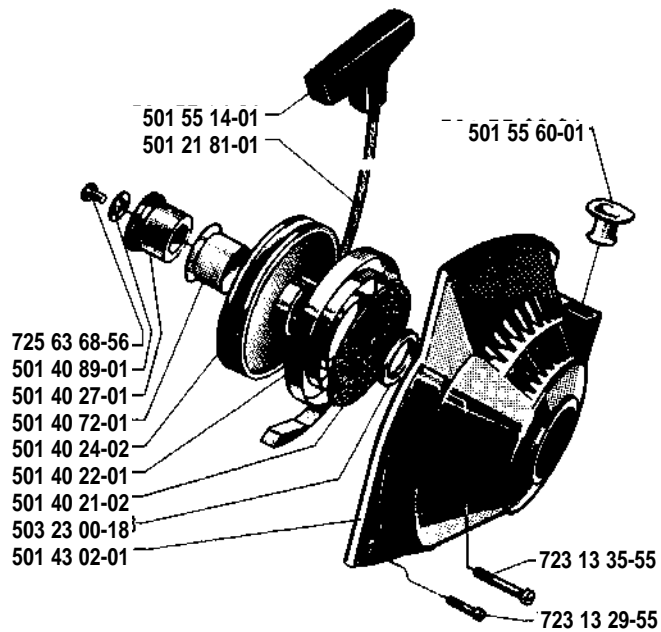

Accessories
Accessoires
Zubehöre

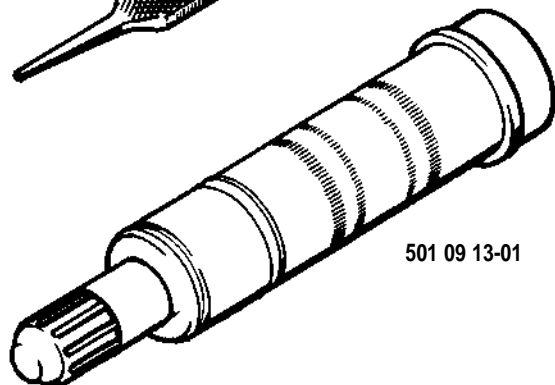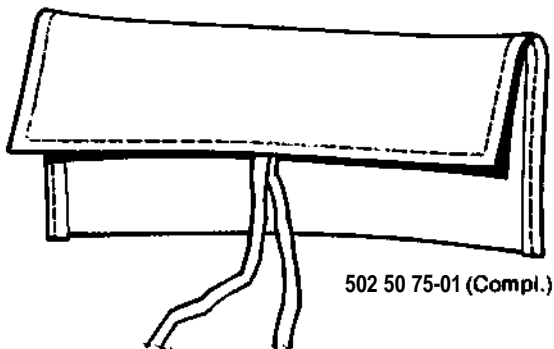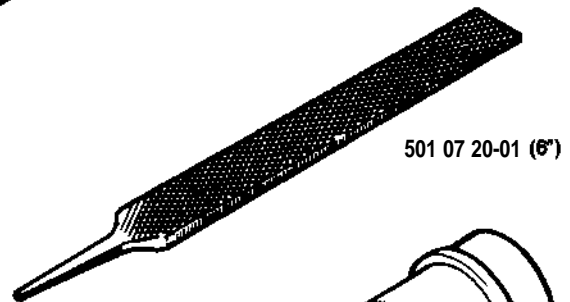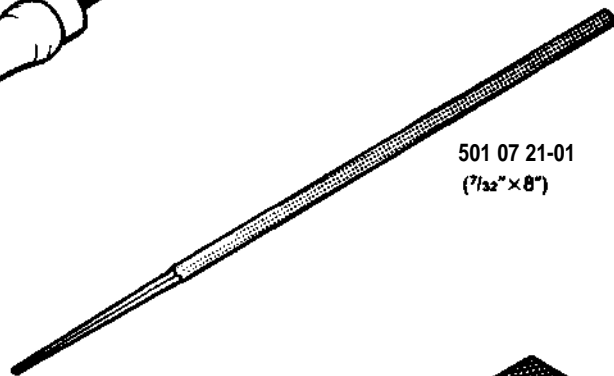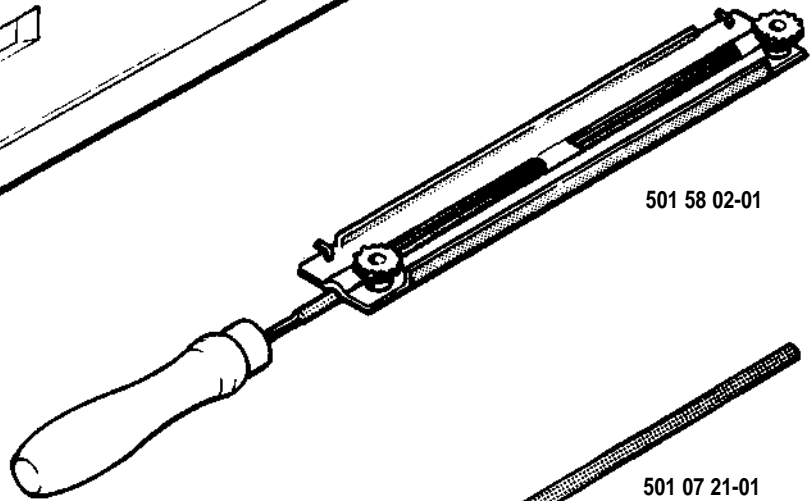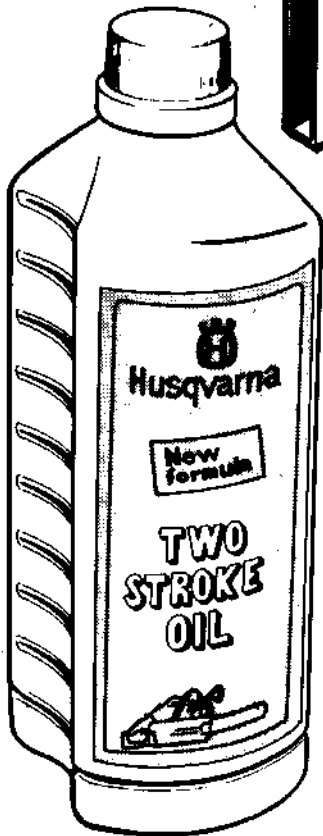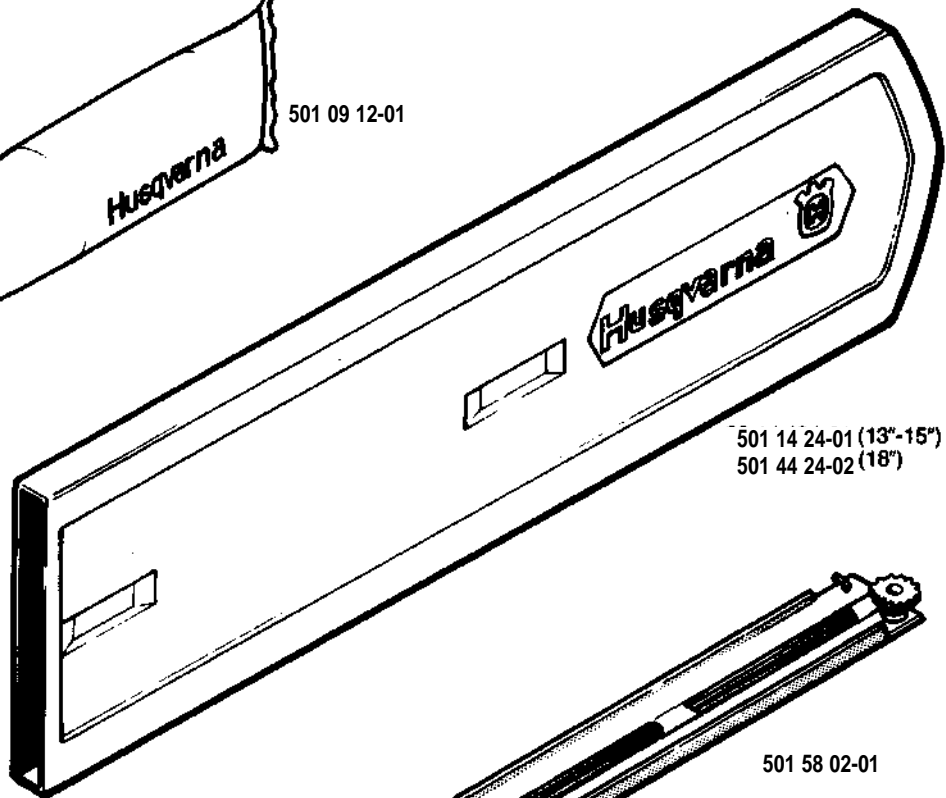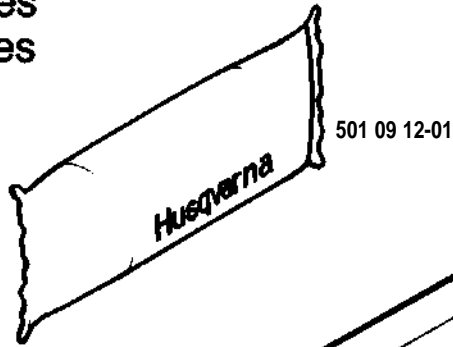

K

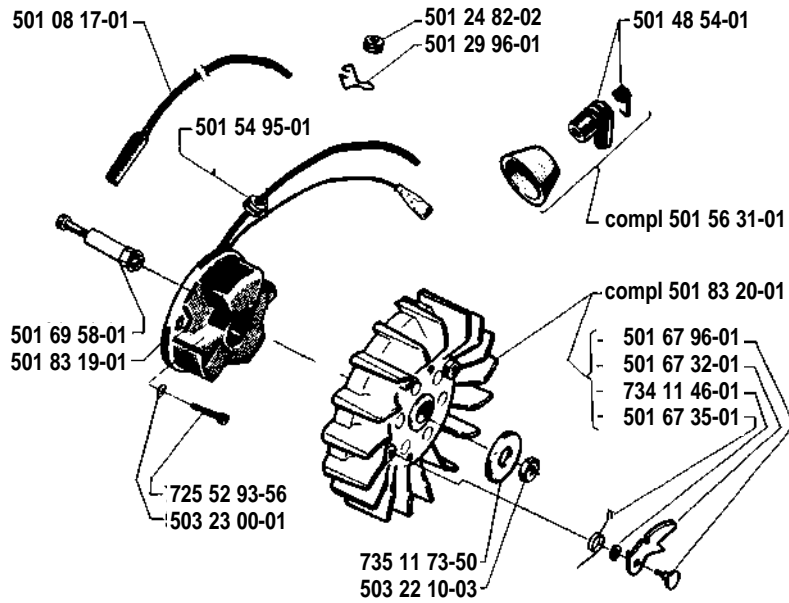

M * compl 501 41 75-04

Tillotson HS 123 A

