 


Wiring Diagram



IMPORTANT! – To assure product SAFETY and RELIABILITY, repairs, maintenance or adjustments should be performed by MAKITA Service Centers, or other qualified service organizations. Always use MAKITA replacement parts.

Fig.	Part No.	Qty. Used	Description	Fig.	Part No.	Qty. Used	Description
1	183201-6	1	HOUSING SET (INCL. FIG. 20)	19	265999-8	4	TAPPING SCREW 4X25
3	266130-9	7	TAPPING S. BIND PT 3X16	20	183201-6	1	HOUSING SET (INCL. FIG. 1)
4	344391-2	2	BIT HOLDER	22	911143-2	1	PAN HEAD SCREW M4X22
5	654168-0	1	SPRING TERMINAL (+)	23	122575-0	1	GRIP ASS'Y (INC. 1 EA. GRIP
6	654169-8	1	SPRING TERMINAL (-)				36 CPL. 152521-9, SCREW
7	687085-9	1	HOLDER				M5X10 251812-6, HEX. BOLT
8	651939-6	1	SWITCH C3LA-1A				M8X10 921919-9, HEX NUT
9	416079-5	1	F/R CHANGE LEVER				M5 931202-6)
10	125091-1	1	SPEED CHANGE LEVER ASS'Y				
11	251465-1	1	-FLAT HEAD SCREW M6X32				
13	125099-5	1	GEAR ASS'Y (INCL. 1 EA.				
			CHANGE LEVER 416629-6)				
14	629733-4	1	DC MOTOR 12V (INCL. 1 EA.				
			SPUR GEAR 20 226361-2,				
			INCL. FIG. 16,17)				
15	911006-2	1	PAN HEAD SCREW M3X8	400	193065-0	1	KEYLESS DRILL CHUCK 13
16	191971-3	1	CARBON BRUSH CB-430	401	122576-8	1	STOPPER POL ASS'Y (INCL. 1
17	643929-3	2	HOLDER CAP				EA. CAP 20 286226-0)
18	266134-1	3	TAPPING SCREW ST 4X8	402	824546-0	1	PLASTIC TOOL CASE
				403	414938-7	2	BATTERY COVER
				404	784614-0	2	PHIL/SLOTTED BIT 2-45
				406	193157-5	2	BATTERY 1234
				407	DC1411	1	BATTERY CHARGER DC1411

ACCESSORIES

2 MODEL 8413DWDE

05-00