



Parts List for DCD970KL Type 3

Item Number	Part Number	Description	Qty Required
22	586200-10	KEYLESS CHUCK	1
23	605256-01	SCREW	1
24	652378-00	RETAINING PLATE	1
25	650470-00	LOCK RING	1
26	652379-00	ANVIL	1
27	654110-00	PIN	5
28	N388924	GEAR ASSEMBLY	1
32	N388150	GEAR ASSEMBLY	1
33	N388923	SHIFTER ASSEMBLY	1
34	N347360	BAFFLE ASSEMBLY	1
42	N014498SV	CLAMSHELL SET	1
43	N020621SV	SWITCH-V.S.R.	1
45	N161060	ARMATURE ASSEMBLY	1
46	648124-00	MAGNET RING	1
47	N007948	BEARING CAP	2
48	N091392	F/R BUTTON	1
49	N031214	BRUSH BOX SET	1
50	148354-03	BIT CLIP	1
51	N028034	ID LABEL	1
52	682211-00	SCREW,TORX	13
53	330019-52	SCREW PLASTITE	4
54	N014681	DETENT SPRING	2
56	650421-00	SIDE HANDLE	1
61	N219252	GEARCASE ASSY	1
70	N155136	RATING LABEL	1
800	N017298	GREASE	1
836	559662-99	MANDREL	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCD970KL Type 3

Item Number	Part Number	Description	Qty Required
836	596004-99	INSERT	1
836	233804-40	CHUCK REMOVAL FIXTURE	1
836	233947-00	HOLDING FIXTURE	1
861	N303239	KITBOX	1
866	DC9180	18V BATTERY PACK	2
867	650912-00	BATTERY CAP	1
871	DC9310	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.