







Parts List for 893PKL Type 2

Item Number	Part Number	Description	Qty Required
1	A22701	MOTOR HOUSING	1
2	901266	STRAIN RELIEVER	1
3	886538	SCREW	2
4	911024	CORDSET	1
5	696276	SCREW	2
6	610559-00	SWITCH	1
7	908697	BUSHING	1
8	A13684	BRUSH & HOLDER ASSY	2
9	682063	CONNECTOR VS	1
10	823030	SNAP-RING	1
11	876671	COLLET 1/2 INCH	1
11	42975	3/8 INCH COLLET ASSY	1
11	5140103-66	COLLET ASSY.	1
11	876669	COLLET 1/4 INCH	1
11	44010	COLLET 10MM	1
11	42950	1/2 INCH COLLET ASSY	1
11	42999	1/4 INCH COLLET ASSY	1
11	44008	COLLET 8MM	1
11	44006	COLLET 6MM	1
12	882185	SCREW MACHINE STEEL	4
13	861434	CORD CLAMP	1
14	330003-64	BALL BEARING	1
15	A22699	SWITCH ACTUATOR	1
16	A22697	COVER	1
17	A22698	COVER	1
18	912755SV	INSULATING SLEE	1
19	912032	WASHER	1

Parts List for 893PKL Type 2

Item Number	Part Number	Description	Qty Required
20	911807	RACK	1
21	908596	PIN	1
22	879999	SCREW	2
23	901287	SPINDLE LOCK RETAINE	1
24	803831SV	BEARING	1
25	875893	COLLET NUT	1
26	903053	CHUCK	1
27	250403	MAGNETIC DISC	1
28	912753	ARMATURE	1
29	A13650	FIELD	1
30	908568	MOTOR HOUSING	1
31	908566	CAP	1
32	A21384	SCREW	6
34	A23865	SPEED CONTROL	1
35	861737	RING	1
40	893792	SCREW	2
41	912030	WIRE NUT	1
44	800835	PIN	2
45	893728	FAN	1
55	A24391	WARNING LABEL	1
56	698709	SPRING	1
57	913226	INSULATING TAPE	1
59	A22709	OPEN-END WRENCH	1
59	907007	WRENCH	1
62	A22702	CLAMP	1
65	911800	WEAR PLATE	1
66	911801	INSERT	1

Parts List for 893PKL Type 2

Item Number	Part Number	Description	Qty Required
67	911751	ROD	1
68	910601	PLUG	1
69	911802	NUT	1
70	908572	HANDLE	2
71	908577	RING	1
72	911803	SCREW	1
73	908576	KNOB	1
75	911809	SCREW	2
76	810425	PLUG	1
77	911776	SCREW	1
78	911804	RETAINING RING	1
79	911796	SPRING	1
81	911797	LEVER	1
82	911710	DISK	1
83	681472	SCREW	1
84	904936	BASE-SUB	1
87	862641	NUT	1
134	802417	WASHER	1
135	903114	BUCKLE	1
136	903118	PIN	1
137	903693	NUT	1
138	A00323	WEAR PLATE	1
139	802350	SCREW	3
148	881290	KNOB	1
160	A22700	BASE HOUSING	1
161	911799	AXLE	1
200	A23122	CARRIER ASSY	1

Parts List for 893PKL Type 2

Item Number	Part Number	Description	Qty Required
201	A23121	BASE ASSY	1
203	698805	TURRET	1
204	606246-00	SUB BASE	1
205	A17176	CARRIER COVER	1
206	A17175	CARRIER COVER	1
207	608921-00	BELLOWS	1
208	608922-00	CAP	1
210	A22704	LOCK LEVER	1
211	699991	DEPTH ROD	1
213	608926-00	RETAINING CLIP	1
214	608932-00	SLEEVE	1
215	608975-00	COMPR. SPRING	1
216	699399	POINTER	1
218	608931-00	GUIDE BUSHING	1
219	330045-45	SCREW	6
220	608972-00	SPRING,EXT.	1
221	608920-00	SPRING	1
222	608919-00	SPRING	1
223	608929-00	LOCK BOLT	1
224	608925-00	RETAINING CLIP	1
225	647379-00	CLAMP SHAFT	1
229	324007-10	SCREW	1
230	608298-00	STAR WASHER	1
231	A17373	DEPTH SCALE	1
232	608930-00	SCREW	1
233	883806	SCREW	1
234	895591	WASHER	1

Parts List for 893PKL Type 2

Item Number	Part Number	Description	Qty Required
235	685533	WASHER	1
237	860687	BALL	1
238	609842-00	SCREW	3
239	850552	SPRING	1
240	608933-00	SPRING TORSION	1
241	608805-00	VACUUM ADAPTER	1
242	609118-00	COMPR. SPRING	1
245	801752	SCREW	1
247	A21564	DUST SHROUD	1
260	A22727	ID LABEL	1
262	A22976	WARNING LABEL	1
264	000000-00	No Longer Available	1
265	A22735	WARNING LABEL	1
267	607522-00	BASE ALIGN. SHAFT	1
268	607523-00	SUB BASE ALIGN. CONE	1
856	A27011	HEIGHT ADJUSTER	1
856	75301	R TABLE ACCY KIT	1
856	42690	ROUTER EDGE GUIDE	1
861	A22986	KITBOX	1