


## REPLACEMENT PARTS

REF. NO.	PART NO.	DESCRIPTION
1	1342505	Guard w/Hinged End Covers
1A	1342506	End Cover w/Hinge
2	1342509	Warning Label
3	902-04-010-1404	3/8-16 Wing Nut
4	904-02-010-1709	3/8" Lock Washer
5	904-01-031-7706	3/8" Flat Washer
6	902-01-010-5900	3/8-16 Hex Nut
7	902-01-040-1026	3/8-16 Hex Jam Nut
8	1342504	Short Stud (Mount Guard to Z-Platen)
9	1342503	Long Stud (Mount Guard to Base)
10	1342531	Guard
11	1342530	Graphite Pad
12	1342528	Platen
13	1342553	Z-Platen
14	904-01-010-1610	3/16" Flat Washer
15	1342558	#10 x 3/4" Wood Screw
16	1342526	3/8-16 x 2 1/4" Flat Hd Mach Screw
17	1342536	Table (Straight Platen Side)
18	1342549	Hand Knob
19	904-01-031-5734	1/2" Flat Washer
20	904-01-031-7706	3/8" Flat Washer
21	904-02-010-1709	3/8" Lock Washer
22	902-01-010-5900	3/8-16 Hex Jam Nut
23	1342551	Table Raising and Lowering Brackets
24	1342543	Shoulder Bolt
25	904-01-010-1605	3/8" Flat Washer
26	1342541	Tilt Table Pivot Bracket
27	1342507	Tilt Table Lock Knob
28	904-01-031-7706	3/8" Flat Washer
29	1342523	Stud
30	1342544	Table Support
31	902-01-010-5900	3/8-16 Hex Nut
32	1342543	Shoulder Bolt
33	904-01-010-1605	3/8" Flat Washer
34	902-01-040-1030	5/16-18 Hex Jam Nut
35	904-01-031-7706	3/8" Flat washer
36	904-02-010-1709	3/8" Lock Washer
37	902-01-010-5900	3/8-16 Hex Nut
38	901-11-020-0823	3/8-16 x 1 1/2" Carr Bolt
39	1342552	Adhesive Foam Pads
40	1342502	Base
41	1342542	Tilt Table Pivot Bracket
42	1342559	#8 x 1" Flat Hd Wood Screw
43	1342532	Guide (Door Lip Sanding)
44	1342534	Tilt Table (Form Sand Side)
45	1342524	3/8-16 x 2" Flat Hd Mach Screw
46	1342550	Stud Assembly

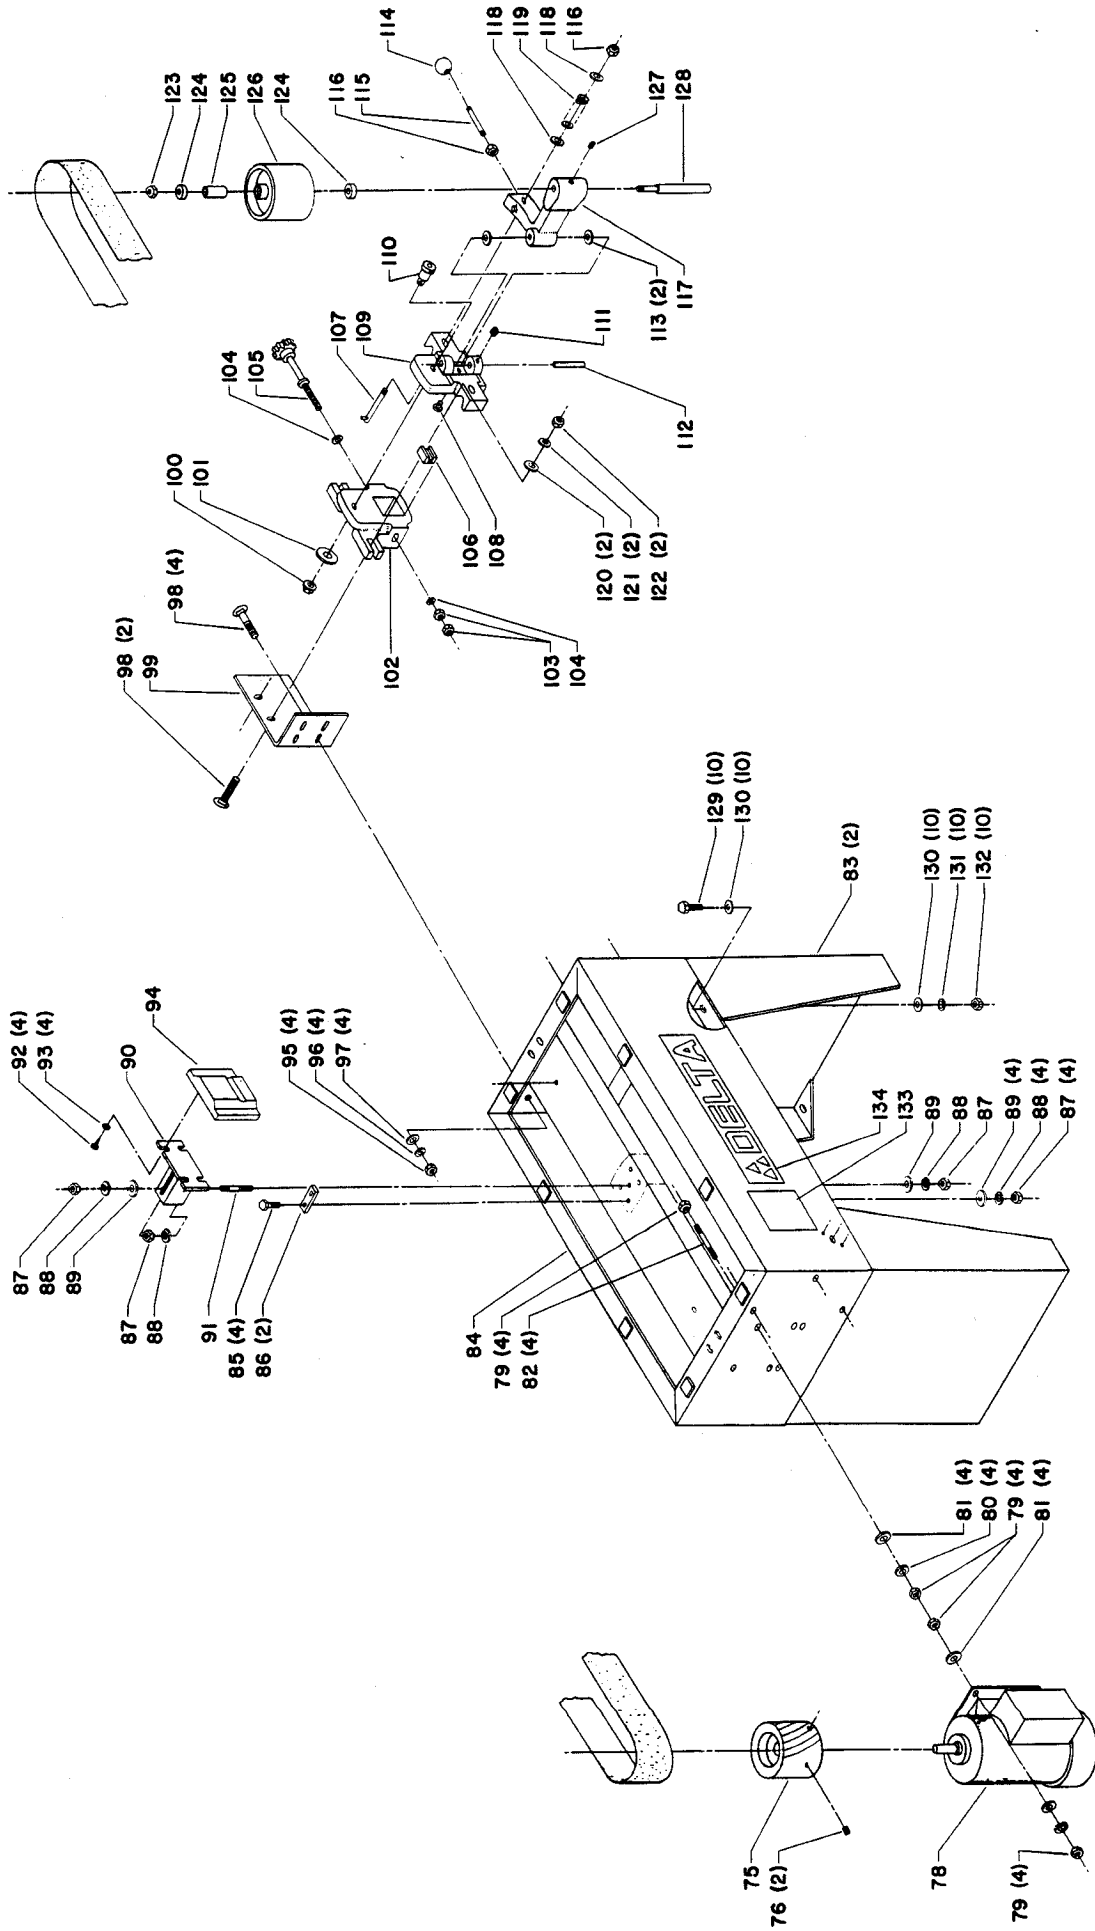

# REPLACEMENT PARTS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
75	1342539	Motor Pulley (7/8" Bore), Incl:	120	904-01-031-7706	3/8" Flat Washer
76	1342527	5/16-18 x 3/8" Hex Soc Set Screw	121	904-02-010-1709	3/8" Lock Washer
78	82-040	Motor - Single Phase 1 1/2 HP	122	902-01-010-5900	3/8-16 Hex Nut
78	60-056	Motor - Three Phase 2 HP	123	902-01-020-1227	1/2-20 Hex Nut
79	902-01-010-5900	3/8-16 Hex Nut	124	920-04-010-5355	Bearing
80	904-02-010-1709	3/8" Lock Washer	125	1342510	Bearing Spacer
81	904-01-031-7706	3/8" Flat Washer	126	1342533	Idler Pulley
82	1342538	Stud	127	1342557	1/2-20 x 1/2" Hex Soc Set Screw
83	1342501	Leg	128	1342511	Shaft
84	1342502	Base	129	901-01-060-0642	3/8-16 x 1" Hex Hd Cap Screw
85	901-01-060-0649	5/16-18 x 1" Hex Hd Screw	130	904-01-031-7706	3/8" Flat Washer
86	1342545	Guide	131	904-02-010-1709	3/8" Lock Washer
87	902-01-010-5900	3/8-16 Hex Nut	132	902-01-010-5900	3/8-16 Hex Nut
88	904-02-010-1709	3/8" Lock Washer	133	1342509	Warning Label
89	904-01-031-7706	3/8" Flat Washer	134	1342535	Nameplate
90	1342546	Form Block Holder	**	52-346	Single Phase Manual Switch
91	1342548	Stud	**	52-348	Three Phase Magnetic Control Switch
92	1342558	#10 x 3/4" Wood Screw	**	52-704	Single Phase Magnetic Starter w/Overload
93	904-01-010-1610	3/16" Flat Washer	**	52-702	Three Phase Magnetic Starter w/Overload
94	1342547	Standard Wooden Form Block			
95	902-01-010-5900	3/8-16 Hex Nut			
96	904-02-010-1709	3/8" Lock Washer			
97	904-01-031-7706	3/8" Flat Washer			
98	1342509	3/8-16 x 2" Carr Bolt			
99	1342508	Bracket			
*	1342512	Idler Tracking Assy, Const. of:	*	NOT SHOWN ASSEMBLED	
100	1342556	1/2-13 Flange Nut	**	NOT SHOWN	
101	904-01-010-1613	5/8" Flat Washer			
102	1342513	Idler Tracking Base Casting			
103	902-01-020-1227	1/2-20 Hex Jam Nut			
104	904-01-021-3564	Fiber Washer			
105	1342519	Adjusting Screw w/Hand Knob			
106	1342516	Tracking Adjusting Block			
107	1342525	Spring Tension Stud Assembly			
108	1342517	Swivel Pin			
109	1342514	Idler Tracking Hinge Casting			
110	1342555	1/2-13 x 1 1/2" Shoulder Bolt			
111	901-04-150-0230	5/16-18 x 3/8" Hex Soc Set Screw			
112	1342540	Pin			
113	1342518	Fiber Washer			
114	1342520	Ball Knob			
115	1342521	Belt Tension Lever			
116	902-01-020-1227	1/2-20 Hex Nut			
117	1342515	Idler Arm Bracket			
118	904-01-031-4953	1/2" Flat Washer			
119	1342522	Belt Tension Spring			

This parts list is provided to aid in obtaining service parts. Operational and maintenance information is contained in a separate owner's manual which is available through your local service outlet.