


## RYOBI RAPID CHARGER – MODEL NO. AP4500

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **RAPID CHARGER** or when ordering replacement parts.

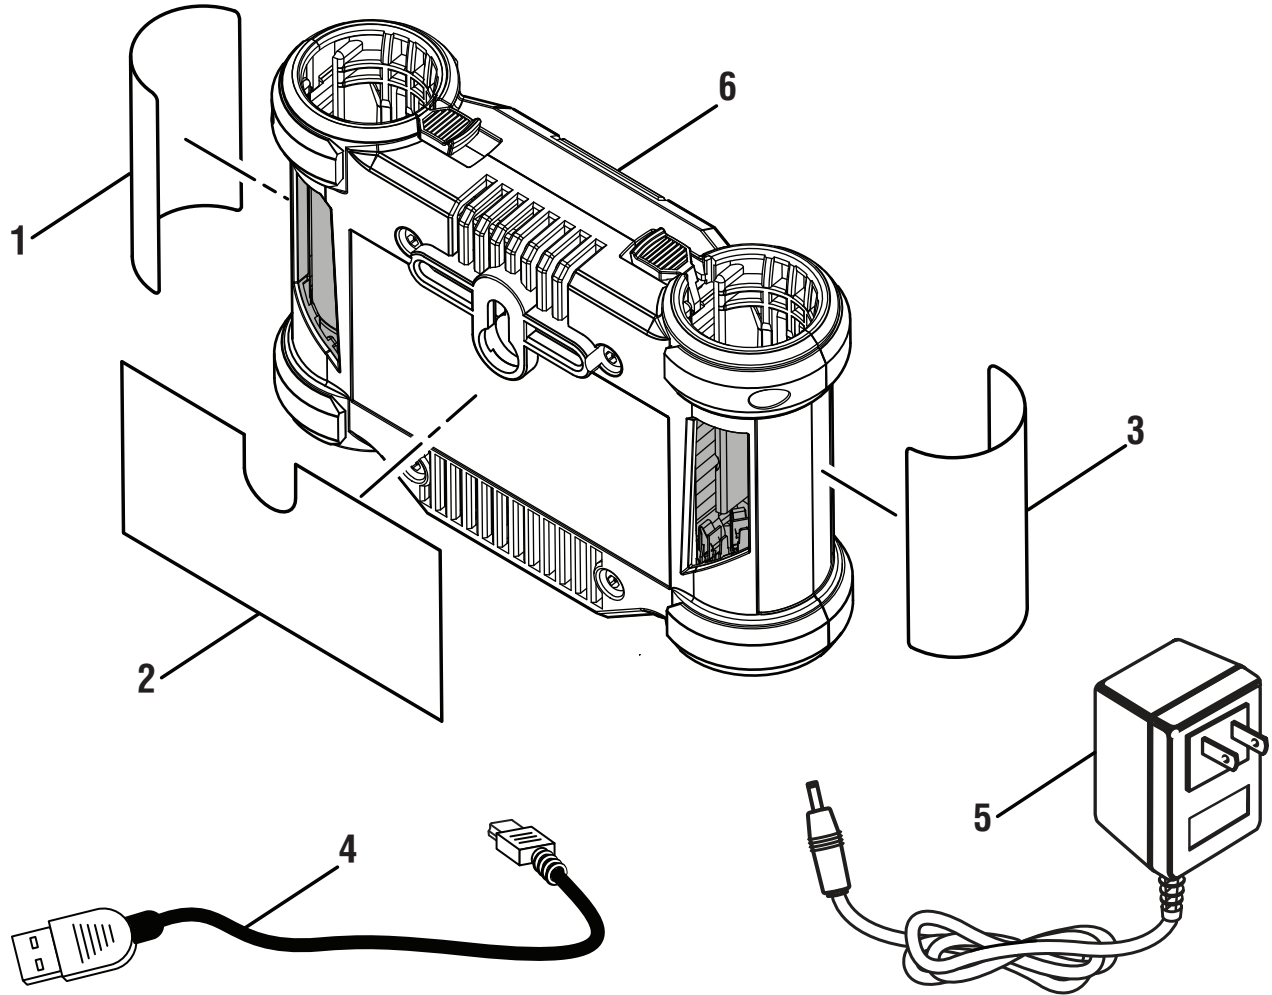

### PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	940221109	Fire Warning Label.....	1	<b>NOT SHOWN:</b> 987000653    Operator's Manual ..... 1			
2	940976597	Data/Warning Label.....	1				
3	940221110	Warning Label (Shock).....	1	6-19-09 (REV:00)			
4	730038003	Power Cord .....	1				
5	720038002	Wall Adapter .....	1				
6	140130001	Charger.....	1				