





## Parts Breakdown

AT638

*Products with multiple versions are listed in subsiding order with the newest version on top not indented*

<u>Fig #</u>	<u>Part ID</u>	<u>Part Name</u>	<u>Quantity</u>
1	A346-07	EXHAUST VALVE COLLAR, AT638	1
2	A311-OK	O RING 35.5-1.8, AT638	1
3	A312-03	COVER GRIP, AT638	1
4	A200-20	SCREW 5-35, AT638	1
5	I230-NO	EXHAUST COVER, AT638	1
6	A343-29	AIR SEAL, AT638	1
7	B346-06	EXHAUST VALVE ASS'Y, AT638	1
8	A210-25	SPRING, AT638	1
9	A311-OP	O RING 9.8-2.4, AT638	1
10	A311-96	O RING 32-2.5, AT638	2
11	A340-06	HEAD VALVE PISTON, AT638	1
12	A311-OR	O RING 13-3, AT638	1
13	A311-40	O RING 26.59-2.95, AT638	1
14	A311-54	O RING 22.9-2.7, AT638	1
15	A262-24	PISTON HEAD, AT638	1
16	A261-01	DRIVER BLADE PIN, AT638	1
17	A206-11	OUTER SPRING PIN 4-10, AT638	1
18	A206-12	INNER SPRING PIN 2.5-10, AT638	1
19	A260-C3	DRIVER BLADE, AT638	1
20	A334-02	SLEEVE RETAINER, AT638	1
21	A311-OT	O RING 44.8, 2.6, AT638	1
22	A334-02	SLEEVE RETAINER, AT638	1
23	A232-23	CYLINDER, AT638	1
24	A341-21	BUMPER, AT638	1
25	A343-24	GASKET, AT638	1
26	I22N-08	BODY, AT638	1
27	A342-01	NOZZLE, AT638	1
28	A205-04	E-RING 2.5, AT638	1
29	A206-65	STEP PIN 5-27.3, AT638	1
30	A343-02	AIR SEAL, AT638	1
31	A251-10	TRIGGER VALVE HEAD, AT638	1
32	A210-89	SPRING, AT638	1
33	A311-22	O RING 1.9-1.2, AT638	2
34	A251-12	TRIGGER VALVE STEM, AT638	1
35	A251-02	TRIGGER VALVE GUIDE, AT638	1
36	A311-11	O RING 9.8-1.9, AT638	1
37	A206-10	SPRING PIN 2-16, AT638	1
38	A250-06	RELEASING BLADE, AT638	1
39	A250-23	TRIGGER, AT638	1
40	A281-42	BLOCK, AT638	1
41	A206-29	SPRING PIN 3-24, AT638	1
42	A311-OU	O RING, AT638	1
43	A235-AO	TAIL COVER, AT638	1
44	B236-11	AIR PLUG WITH DUSTER, AT638	1
45	A290-20	SPACER, AT638	1
46	A293-04	SPACER, AT638	1
47	A275-07	SPRING HOLDER, AT638	1
48	A200-09	SCREW 5-20, AT638	1
49	A210-23	COMPRESSION SPRING, AT638	1
50	A206-61	SPRING PIN 1.5-10, AT638	1
51	A291-88	DRIVER GUIDE, AT638	1
52	A201-03	SCREW 4-18, AT638	1
53	A295-63	SPACER, AT638	1
54	A280-84	RELEASE CATCH, AT638	1
55	A295-60	DRIVER GUIDE COVER, AT638	1
56	A205-08	WASHER #4-1.2T, AT638	1
57	A200-23	SCREW 4-12, AT638	1
58	A205-05	WASHER #4-0.9T, AT638	1
59	A205-03	WASHER #5-1.1T, AT638	1
60	A200-01	SCREW 4-8, AT638	1
61	A204-02	NYLON NUT M5, AT638	1
62	A274-07	SUPPORT, AT638	1
63	A349-06	BELT HOOK, AT638	1
64	A271-91	LOWER MAG., AT638, B27191	1



## Parts Breakdown

**AT638**

65	A377-00	CLICK LEVER, AT638	1
66	A210-96	SPRING, AT638	1
67	A235-07	TAIL COVER, AT638	1
68	A204-01	NYLON NUT M4, AT638	1
69	A270-86	UPPER MAG., AT638,T1	1
70	A278-27	SPACER, AT638	1
71	A200-27	SCREW 4-37, AT638	1
72	A206-60	STEP PIN 5-14, AT638	1
73	A349-07	SCALE BOARD, AT638	1
74	A210-1A	FEEDER SPRING, AT638	1
75	A311-OW	O RING 4-1.25, AT638	1
76	A374-04	SPRING HOLDER, AT638	1
77	A275-63	PUSHER, AT638	1
78	A312-04	HANDLE GRIP, AT638	1
85	A311-B9	O RING 24.5-3, AT638	1
86	A311-OQ	O RING 22-1.5, AT638	1
87	A346-06	EXHAUST VALVE SET, AT638	1
88	A200-10	SCREW 5-22, AT638	1
400	1922-A	PROTECTIVE EYE WEAR, AN611	1
401	783201-2	HEX WRENCH 3, AF501	1
402	783202-0	HEX WRENCH 4, JR3000V	1
403	181434-7	OIL SUPPLY 30CC, AF502	1
404	824563-A	PLASTIC TOOL CASE, AT638	1