



Parts List for BCD702C1 Type 1

Item Number	Part Number	Description	Qty Required
1	90618579	KEYLESS CHUCK	1
2	149518-01	SCREW	1
3	N569223	ACTUATOR FWR/REV	1
4	148354-03	BIT CLIP	1
5	90541186	BIT	1
6	90565313	WARNING LABEL	1
50	N566163	RATING LABEL	1
866	LBXR20	BATTERY	1
871	LCS1620	CHARGER	1