



Parts List for BDCDE120C Type 1

Item Number	Part Number	Description	Qty Required
2	90591660	HOUSING SET	1
3	90595436	F/R ACTUATOR	1
4	90601046	SWITCH ASSEMBLY	1
5	000000-00	No Longer Available	1
6	90595753	KEYLESS CHUCK	1
7	148354-03	BIT CLIP	1
8	5101046-00	SCREW	3
9	5101046-01	SCREW	8
11	149518-01	SCREW	1
16	90603374	WARNING LABEL	1
18	90541186	BIT	1
20	498618-00	SPRING PIN	1
866	LBXR20	BATTERY	1
871	90590282-01	CHARGER	1