



Model BDF452HW Parts List

A = Standard Equipment

○ = Circuit Diagram

Fig.	Part No.	Description	Q'ty	Unit
1	862815-1	BDF452 NAME PLATE	1	
2	188187-9	HOUSING SET	1	
	D10	INC. 19		
3	266130-9	TAPPING SCREW BIND PT 3X16	9	PC.
4	125366-8	SPEED CHANGE LEVER ASS'Y	1	
	C10	233438-6	COMPRESSION SPRING 4	2 PC.
5	419250-0	F/R CHANGE LEVER	1	PC.
6	650583-6	SWITCH	1	
7	631735-8	LED CIRCUIT	1	
8	643812-4	TERMINAL	1	PC.
9	251472-4	- FLAT HEAD SCREW M6X26	1	
A 10	763193-1	KEYLESS DRILL CHUCK 13	1	
11	125348-0	GEAR ASSEMBLY	1	
12	638425-4	YOKE UNIT	1	PC.
13	619198-8	ARMATURE	1	
14	638494-5	BRUSH HOLDER COMPLETE	1	
15	194159-4	CARBON BRUSH CB-436	1	SET
16	263032-0	RUBBER PIN 4	2	PC.
17	419601-7	REAR COVER	1	
18	266130-9	TAPPING SCREW BIND PT 3X16	2	PC.
19	188187-9	HOUSING SET	1	
	D10	INC. 2		
20	232182-2	LEAF SPRING	1	PC.
21	689150-0	HEAT SINK	1	
22	911006-2	PAN HEAD SCREW M3X8	1	PC.
23	810292-1	CAUTION LABEL	1	
A A01	DC18RA	DC18RA FAST CHARGER	1	
A A02	784637-8	+ - BIT 2-45	1	PC.
A A03	824774-7	PLASTIC CARRYING CASE	1	
	C10	324679-6	SHAFT	1
	C20	417724-5	LATCH	2 PC.
	C30	419216-0	HANDLE	1 PC.
A A04	804677-1	BDF452HW MODEL NO.LABEL	1	
A A05	194309-1	BATTERY BL1815	2	PC.