



Parts List for BSL100-AR Type 1

Item Number	Part Number	Description	Qty Required
1	5140079-98	BEZEL	1
2	5140079-99	RING	1
3	5140080-00	SCREW	1
4	5140080-01	REFLECTOR	1
5	5140080-02	BULB	1
6	5140080-03	BATTERY BOX	1
7	5140080-04	SCREW	1
8	5140080-05	BATTERY	1
9	5140080-06	BATTERY CLAMP	1
10	5140080-07	GENERATOR	1
11	5140080-08	SCREW	1
12	5140080-09	REAR COVER	1
13	5140080-10	COTTER PIN	1
14	5140080-11	REVOLVING MEMBER	1
15	5140080-12	CRANK	1
16	5140080-13	PLATE	1
17	5140080-14	SCREW	1
18	5140080-15	CLAMSHELL	1
19	5140080-16	TRIGGER	1
20	5140080-17	SPRING	1
21	5140080-18	SPRING,STOP	1
22	5140080-19	SCREW	1
23	5140080-20	SWITCH	1
24	5140080-21	HANDLE GRIP	1
25	5140080-22	SCREW	1
26	5140080-23	SCREW	1
27	5140080-24	PCB ASSY	1

Parts List for BSL100-AR Type 1

Item Number	Part Number	Description	Qty Required
28	5140080-25	WASHER	1
29	5140080-26	SCREW	1
30	5140080-27	CRANK HANDLE	1
31	5140080-28	FIXED BOLT	1
32	5140080-29	CHARGER	1