



## Parts List for BT1200-B2 Type 2

Item Number	Part Number	Description	Qty Required
1	5140037-39	CHUCK	1
2	5140037-40	SHAFT	1
3	5140037-41	BEARING	1
4	5140037-42	BUSHING	1
5	5140037-43	RUBBER WASHER	1
6	5140037-44	BEARING	1
7	5140037-45	SNAP RING	1
8	5140037-46	BEARING	1
9	5140037-47	BEARING	1
10	5140037-48	SQUARE KEY	1
11	5140037-49	SNAP RING	1
12	5140037-50	PULLEY	1
13	5140037-51	NUT	8
14	5140037-52	WASHER	8
15	5140037-53	MICRO SWITCH	1
16	5140037-54	PULLEY COVER	1
17	5140037-55	V-BELT	1
18	5140037-56	MOTOR PULLEY	1
19	5140037-57	BOLT	2
20	5140062-22	MOTOR ASSY.	1
21	5140062-25	CAPACITOR	1
22	5140037-60	BEARING	1
23	5140037-61	BEARING	1
24	5140037-62	BOLT	2
25	5140037-63	WASHER	2
26	5140037-64	SHOCK ABSORBER	1
27	5140037-65	SLIDE BAR	1

## Parts List for BT1200-B2 Type 2

Item Number	Part Number	Description	Qty Required
28	5140037-66	SPRING	1
29	5140037-67	KNOB	1
30	5140037-68	BOLT	2
31	5140037-69	HEAD STOCK	1
32	5140037-70	NUT	1
33	5140037-71	QUILL	1
34	5140037-72	SCALE	1
35	5140037-73	BOLT	1
36	5140037-74	NUT	3
37	5140037-75	CORD CLAMP	1
38	5140037-76	CORD CLAMP	1
39	5140037-77	CORD PROTECTOR	1
40	5140037-78	GROMMET	1
41	5140037-79	SWITCH ASSY.	1
42	5140037-99	CORD & PLUG	1
43	5140037-81	LOCK NUT	1
44	5140037-82	ADJUSTING NUT	1
45	5140037-83	SPRING,HOLDING	1
46	5140037-84	COIL SPRING	1
47	5140037-85	SPRING COVER	1
48	5140037-86	SHAFT	1
49	5140037-87	HANDLE	3
50	5140037-88	CLAMP BOLT	1
51	5140037-89	SLEEVE	1
52	5140037-90	TABLE	1
53	5140037-91	TABLE BRACKET	1
54	5140037-92	SPRING WASHER	1

## Parts List for BT1200-B2 Type 2

Item Number	Part Number	Description	Qty Required
55	5140037-93	BOLT	1
56	5140037-94	BASE	1
57	5140037-95	SPRING WASHER	3
58	5140037-96	BOLT	3
59	5140037-97	COLUMN	1
60	5140037-98	EYESHIELD	1
61	5140062-18	FRONT COVER	1
62	5140062-19	BACK END COVER	1
63	5140062-20	FAN	1
64	5140062-21	FAN COVER	1