



Parts List for BT1400-B2C Type 3

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-----------------|--------------|
| 1 | 5140015-01 | SCREW | 1 |
| 2 | 5140015-02 | WASHER,SPRING | 1 |
| 3 | 5140015-03 | WASHER | 1 |
| 4 | 5140015-04 | SCREW | 1 |
| 5 | 5140015-05 | WASHER | 1 |
| 6 | 5140015-06 | TORSION SPRING | 1 |
| 7 | 5140015-07 | SHIELD | 1 |
| 8 | 5140015-08 | SHIELD | 1 |
| 9 | 5140015-09 | NUT | 1 |
| 10 | 5140015-10 | SHIELD | 1 |
| 11 | 5140015-11 | SHIELD | 1 |
| 12 | 5140015-12 | RING | 1 |
| 13 | 5140015-13 | SCREW | 1 |
| 14 | 5140015-14 | SCREW | 1 |
| 15 | 5140015-15 | DUST EXTRACTION | 1 |
| 16 | 5140015-16 | SPRING PIN | 1 |
| 17 | 5140015-17 | SPRING PLATE | 1 |
| 18 | 5140015-18 | SPRING | 1 |
| 19 | 5140015-19 | BOLT | 1 |
| 20 | 5140015-20 | NUT | 1 |
| 21 | 5140015-21 | SCREW | 1 |
| 22 | 5140015-22 | BOLT | 1 |
| 23 | 5140015-23 | OUTER FLANGE | 1 |
| 24 | 5140015-24 | INNER FLANGE | 1 |
| 25 | 5140015-25 | SCREW | 1 |
| 26 | 5140015-30 | SCREW | 1 |
| 26 | 5140015-31 | RING | 1 |

Parts List for BT1400-B2C Type 3

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------|--------------|
| 26 | 5140015-26 | COVER,FRONT | 1 |
| 26 | 5140015-29 | WASHER | 1 |
| 27 | 5140068-56 | SPINDLE | 1 |
| 28 | 5140068-55 | GEAR | 1 |
| 32 | 5140068-57 | KEY | 1 |
| 33 | 5140015-33 | BEARING | 1 |
| 34 | 5140015-34 | BEARING | 1 |
| 35 | 5140015-35 | SPRING | 1 |
| 36 | 5140015-36 | BUTTON | 1 |
| 37 | 5140015-37 | SPINDLE LOCK | 1 |
| 39 | 5140015-39 | GEAR CASE | 1 |
| 40 | 5140015-40 | O-RING | 1 |
| 41 | 5140015-41 | BEARING | 1 |
| 42 | 5140012-94 | ARMATURE | 1 |
| 43 | 5140015-43 | BEARING | 1 |
| 44 | 5140015-44 | RUBBER SLEEVE | 1 |
| 45 | 5140015-45 | BAFFLE, FAN | 1 |
| 46 | 5140015-46 | SCREW | 1 |
| 47 | 5140012-96 | STATOR | 1 |
| 48 | 5140047-27 | FIELD CASE | 1 |
| 49 | 5140015-49 | SCREW | 1 |
| 50 | 5140015-50 | BRUSH | 1 |
| 51 | 5140015-51 | BRUSH HOLDER | 1 |
| 52 | 5140015-52 | SPRING | 1 |
| 53 | 5140015-53 | SCREW | 1 |
| 54 | 5140015-54 | SCREW | 1 |
| 55 | 5140047-28 | CAP | 1 |

Parts List for BT1400-B2C Type 3

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|----------------|--------------|
| 56 | 5140026-57 | NAMEPLATE | 1 |
| 57 | 5140015-57 | SCREW | 1 |
| 58 | 5140015-58 | SCREW | 1 |
| 59 | 5140047-29 | HANDLE & COVER | 1 |
| 60 | 5140012-93 | CORD & PLUG | 1 |
| 61 | 5140047-30 | CORD PROTECTOR | 1 |
| 62 | 5140015-62 | PROTECTOR | 1 |
| 63 | 5140068-58 | CORD CLAMP | 1 |
| 64 | 5140047-31 | SCREW | 1 |
| 65 | 5140047-32 | SCREW | 1 |
| 66 | 5140047-33 | HANDLE | 1 |
| 67 | 5140047-34 | CLAMSHELL | 1 |
| 69 | 5140047-35 | SWITCH | 1 |
| 70 | 5140047-36 | TRIGGER | 1 |
| 71 | 5140015-71 | SCREW | 1 |
| 72 | 5140015-72 | SHIELD | 1 |
| 73 | 5140015-73 | SHIELD | 1 |
| 74 | 5140015-74 | TORSION SPRING | 1 |
| 75 | 5140015-75 | SCREW | 1 |
| 76 | 5140015-76 | PIVOT PLATE | 1 |
| 77 | 5140015-77 | BOLT | 1 |
| 78 | 5140015-78 | SHIELD | 1 |
| 79 | 5140015-79 | SCREW | 1 |
| 80 | 5140015-80 | WASHER | 1 |
| 81 | 5140015-81 | BEVEL KNOB | 1 |
| 82 | 5140015-82 | BAFFLE | 1 |
| 83 | 5140015-83 | NUT | 1 |

Parts List for BT1400-B2C Type 3

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------|--------------|
| 84 | 5140015-84 | PIN,SPLIT | 1 |
| 85 | 5140015-85 | LOCKING PIN | 1 |
| 86 | 5140015-86 | CAP | 1 |
| 87 | 5140015-87 | BEVEL SCALE | 1 |
| 88 | 5140015-88 | TRUNNION | 1 |
| 89 | 5140015-89 | HANDLE,ADJ. | 1 |
| 90 | 5140015-90 | STUD | 1 |
| 91 | 5140015-91 | PIVOT SHAFT | 1 |
| 92 | 5140015-92 | SCREW | 1 |
| 93 | 5140015-93 | SPRING WASHER | 1 |
| 94 | 5140015-94 | WASHER | 1 |
| 95 | 5140015-95 | BEVEL POINTER | 1 |
| 96 | 5140015-96 | NUT | 1 |
| 97 | 5140015-97 | WASHER | 1 |
| 98 | 5140015-98 | TABLE | 1 |
| 99 | 5140015-99 | BEVEL POINTER | 1 |
| 100 | 5140016-00 | DETENT SPRING | 1 |
| 101 | 5140016-01 | BUTTON | 1 |
| 102 | 5140047-37 | HANDLE | 1 |
| 103 | 5140016-03 | SCREW | 1 |
| 104 | 5140016-04 | CLAMP PLATE | 1 |
| 105 | 5140016-05 | SCREW | 1 |
| 106 | 5140016-06 | DETENT PLATE | 1 |
| 107 | 5140016-07 | KERF PLATE | 1 |
| 108 | 5140016-08 | WEAR PLATE | 1 |
| 109 | 5140016-09 | BASE | 1 |
| 110 | 5140016-10 | BOLT | 1 |

Parts List for BT1400-B2C Type 3

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-------------------|--------------|
| 111 | 5140016-11 | BRACKET | 1 |
| 112 | 5140016-12 | WRENCH | 1 |
| 113 | 5140016-13 | CLAMP | 1 |
| 114 | 5140016-14 | DUST BAG | 1 |
| 115 | 5140016-15 | BLADE | 1 |
| 116 | 5140047-38 | SOFT START MODULE | 1 |
| 118 | 5140047-39 | BRAND LABEL | 1 |
| 119 | 5140047-40 | LABEL | 1 |
| 120 | 5140047-41 | CAUTION LABEL | 1 |
| 121 | 5140047-42 | LABEL | 1 |
| 122 | 5140047-43 | HANDS WARNING | 1 |