







## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	488992-00	FENCE	1
2	488993-00	HEX HD SCREW	2
3	491549-00	TOOTH WASHER	2
4	491550-00	PAN HD SCR	1
5	488996-00	POINTER	1
7	490126-00	HANDLE	1
8	489077-00	HEX NUT	1
9	488997-00	ECCENTRIC CAM	1
10	488998-00	ADJUSTING SCREW	1
11	489001-00	PIN	1
12	489000-00	PIN	1
13	489002-00	FENCE BODY	1
14	489003-00	SPRING	1
15	491550-00	PAN HD SCR	2
16	489005-00	SPRING PLATE	1
17	489006-00	PLATE	1
18	489007-00	SPRING	1
19	489008-00	REAR CLAMP	1
20	489009-00	SLIDE	1
21	489010-00	LOCK ROD	1
54	489078-00	TABLE INSERT	1
55	821057	PAN HEAD SCREW	2
56	489080-00	NUT	2
57	489082-00	FLAT HEAD SCREW	6
58	489081-00	RUBBER BUMPER	2
60	489083-00	TABLE	1
61	489084-00	FILL HD SCREW	1

## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
62	489085-00	FILL HD SCREW	1
64	489053-00	SCALE	1
70	489086-00	KNOB	1
71	489087-00	FLAT WASHER	1
72	489088-00	MITER GAGE BODY	1
77	489089-00	GUIDE BAR	1
87	488848-00	CHEESE HEAD SCREW	1
88	488981-00	TOOTH WASHER	1
89	489091-00	SPRING CLIP	1
90	489092-00	BLOCK	1
91	000000-00	No Longer Available	1
94	488793-00	FLAT WASHER	4
95	488974-00	PAN HEAD SCREW	4
96	489096-00	FLAT HD SCREW	5
97	489097-00	SLEEVE	1
98	489096-00	FLAT HD SCREW	4
100	821057	PAN HEAD SCREW	3
101	489100-00	FIBER WASHER	1
102	489123-00	FLAT WASHER	1
103	489071-00	LEVER	1
104	489101-00	THREADED ROD	1
105	491430-00	HAND WHEEL	1
106	489102-00	FLAT HEAD SCREW	1
107	491431-00	HANDLE	1
108	491432-00	SCREW	1
109	90520200	SWITCH	1
110	488793-00	FLAT WASHER	3

## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
111	90515442	BREAKER	1
112	489107-00	TOOTH WASHER	1
114	821057	PAN HEAD SCREW	2
115	490844-00	CLAMP	1
116	489109-00	SWITCH COVER	1
117	489110-00	RUBBER FOOT	4
118	000000-00	No Longer Available	1
119	000000-00	No Longer Available	5
120	489113-00	BASE PLATE	1
121	187806-00	LABEL,RATING	1
130	488981-00	TOOTH WASHER	2
131	489013-00	WRENCH	1
132	490025-00	PAN HEAD SCREW	2
133	98173-03	LOCK WASHER	4
134	000000-00	No Longer Available	4
135	489116-00	LEAD,JUMPER	1
136	90519472	POWER CORD	1
137	488979-00	WIRE NUT	1
240	187809-00	WARNING LABEL	1
241	489118-00	RIVET	2
242	492720-00	GUARD	1
243	489121-00	HEX HEAD SCREW	1
244	489122-00	TOOTH WASHER	1
245	489123-00	FLAT WASHER	1
246	488994-00	TOOTH WASHER	1
247	489124-00	SPLITTER BRACKET	1
248	489125-00	SPLITTER BRACKET	1

## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
249	488994-00	TOOTH WASHER	2
250	489028-00	SPRING PIN	1
251	489023-00	PIN	1
252	489021-00	SPRING	1
253	489018-00	CLIP	2
254	489016-00	RUBBER BUMPER	1
255	489025-00	HEX HEAD SCREW	1
256	489017-00	SUPPORT	1
257	489029-00	FLAT WASHER	1
258	488994-00	TOOTH WASHER	1
259	489026-00	HEX NUT	1
260	489020-00	SPACER	2
261	489022-00	SPACER	2
262	489019-00	ANTI-KICKBACK FINGER	2
263	489018-00	CLIP	2
264	489127-00	WING NUT	1
265	492607-00	SPLITTER	1
266	489128-00	HEX HD SCREW	1
267	488994-00	TOOTH WASHER	2
268	489123-00	FLAT WASHER	2
269	489126-00	HEX HEAD SCREW	2
297	489143-00	WASHER	1
298	489144-00	WASHER	1
299	488807-00	FLAT WASHER	3
301	488979-00	WIRE NUT	1
302	489131-00	MOTOR CORD	1
303	489132-00	SCREW	1

## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
304	488981-00	TOOTH WASHER	1
305	489133-00	STRAIN RELIEF	1
306	821057	PAN HEAD SCREW	3
307	489135-00	END CAP	1
308	488793-00	FLAT WASHER	1
309	488916-00	BRUSH HOUSING	2
310	90512443	BRUSH	2
311	489138-00	PAN HEAD SCREW	3
312	488808-00	LOCK WASHER	3
314	489139-00	MOTOR HOUSING	1
315	489141-00	WAVE WASHER	1
316	489142-00	BEARING	1
317	90508432	FIELD	1
318	90508433	ARMATURE	1
319	489159-00	BALL BEARING	1
320	098197-03	LOCK WASHER	3
321	488848-00	CHEESE HEAD SCREW	3
323	562097-13	SCREW	2
324	489162-00	GEAR HOUSING	1
325	488957-00	BEARING ROLLER	1
326	492602-00	JACKSHAFT ASSEMBLY	1
327	489169-00	BLADE,10-INCH	1
328	489170-00	FLANGE	1
329	489171-00	ARBOR NUT	1
338	488807-00	FLAT WASHER	1
339	489172-00	SPRING PIN	1
340	489040-00	HEX FLANGE SCREW	3



## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
342	488808-00	LOCK WASHER	1
343	489032-00	BRACKET	1
344	489174-00	SADDLE	1
345	489175-00	STRAP	6
346	000000-00	No Longer Available	1
347	489030-00	FLANGE NUT	6
348	489177-00	HEX FLANGE SCREW	3
349	489030-00	FLANGE NUT	1
350	489039-00	BRACKET	1
351	489035-00	SPACER	1
352	489048-00	HEX HEAD SCREW	1
353	489030-00	FLANGE NUT	1
354	489178-00	SPRING PIN	1
355	489030-00	FLANGE NUT	3
356	489179-00	FLAT WASHER	2
357	489190-00	BLOCK	1
358	489191-00	HEX NUT	2
359	489192-00	FIBER WASHER	1
360	489193-00	FLAT WASHER	1
361	489194-00	WAVE WASHER	1
362	489037-00	PLATE	1
363	488808-00	LOCK WASHER	1
364	491557-00	SCREW	1
365	488807-00	FLAT WASHER	1
368	489123-00	FLAT WASHER	1
369	489026-00	HEX NUT	1
370	489031-00	SPACER	1

## Parts List for BT1800-B2 Type 1

Item Number	Part Number	Description	Qty Required
371	489048-00	HEX HEAD SCREW	1
375	491557-00	SCREW	1
376	488807-00	FLAT WASHER	1
377	491559-00	POINTER	1
378	488808-00	LOCK WASHER	1
380	489034-00	BRACKET	1
381	000000-00	No Longer Available	1
384	489036-00	SPACER	1
385	489033-00	MOUNTING PLATE	1
386	489027-00	SPRING PIN	1
601	489058-00	HEX NUT	4
602	489059-00	FLAT WASHER	4
603	489059-00	FLAT WASHER	4
604	489061-00	HEX HEAD SCREW	4
605	489197-00	BRACKET	2
606	489198-00	BRACKET	2
607	000000-00	No Longer Available	4
608	000000-00	No Longer Available	16
609	489199-00	LEG	4
610	489200-00	BRACKET	2
611	489059-00	FLAT WASHER	16
612	489058-00	HEX NUT	16
613	90517088	BRACKET	2