



## Parts List for BTE140K Type 1

Item Number	Part Number	Description	Qty Required
1	90596289	HOUSING SET	1
2	574853-08	BEARING	1
3	90538663	BRUSH RING	1
4	90545899	BRUSH	2
5	90568025	SPACER	2
6	90567892	BEARING PLATE	1
7	90567589	INTERSHAFT	1
8	90593576SV	GEAR CASE ASSY.	1
9	90593578	SHIFTER ASSY.	1
11	90567833	PLATE	1
12	90593579	KNOB	1
13	629149-00	SPRING	1
14	622172-00	RATCHET	1
15	90563338	GEAR	1
16	90563340	COMPRESSION SPRING	1
17	90563339	GEAR	1
18	90563337	GUIDE ROD	1
19	90566845	GUIDE PLATE	1
20	90596683	SWITCH	1
21	330005-01	PROTECTOR,CORD	1
22	330072-98	CORD/8FT/18-2SJ	1
23	329301-00	CLAMP,CORD	1
25	90571892	LEAD	1
26	90571893	LEAD	1
30	5140071-68	CHUCK & KEY	1
32	605256-01	SCREW	1
33	330019-14	SCREW	4

## Parts List for BTE140K Type 1

Item Number	Part Number	Description	Qty Required
34	330019-01	SCREW,TORX HD	2
35	330019-03	SCREW,PLASTITE	7
36	330019-02	SCREW,PLASTITE	1
39	444262-00	TERMINAL	2
41	372814-00	DEPTH STOP	1
42	90597252	SIDE HANDLE	1
44	330034-08	KEY,CHUCK	1
45	065288-01	CH KEY HOLDER	1
49	90599391	WARNING LABEL	1
152	90597027	NAMEPLATE	1
800	286436-00	GREASE, 500GRAMS	1
861	90597225	KIT BOX	1