



## Parts List for BTE360K Type 1

Item Number	Part Number	Description	Qty Required
1	90596521	HANDLE ASSEMBLY	1
2	90597151	SWITCH	1
3	329301-00	CLAMP,CORD	1
4	330019-01	SCREW,TORX HD	2
5	330005-01	PROTECTOR,CORD	1
6	90578994-21	CORD,PWR SUPPLY	1
7	90593431	FIELD CASE	1
9	90562908	BRUSH & SPRING	2
10	90561435	BRUSH HOLDER	2
11	330019-41	SCREW	3
12	90562316	BRUSH BOX	2
16	330019-13	SCREW,PLASTITE	8
17	330019-12	SCREW	4
18	90568551	SCREW	2
20	330045-06	SCREW	5
21	90597193	GEAR CASE	1
22	90597194	GEARCASE & BRG.	1
23	90596461	KNOB ASSEMBLY	1
24	326467-00	DETENT	1
25	90562299	ACTUATOR	1
26	90563562	THRUST BEARING	1
27	90563563	GEAR ASSY.	1
28	90563044	WASHER	1
29	90563040	SCREW	1
30	90563564	TRACK ASSY.	1
31	90562319	COMPRESSION SPRING	1
32	90562303	ROLLER	2

## Parts List for BTE360K Type 1

Item Number	Part Number	Description	Qty Required
33	90562304	ROLLER PIN	1
34	90562296	RECIP BEARING	2
35	90562320	FELT SEAL	1
36	90562321	SCRAPER	1
37	90563568	RECIP. SHAFT ASSY.	1
38	90597155	SHOE BUTTON ASSY	1
39	618427-00	SPRING	1
40	90552725	C CLIP	1
41	90563570	SHOE ASSY.	1
42	90562309	PLATE SUPPORT	1
44	90593430	RUBBER COVER	1
60	90578162-01	SPIRAL PIN	1
61	574853-08	BEARING	1
62	90565402	BEARING CUP	1
63	488950-00	BALL BEARING	1
64	696060-00	SNAP RING	1
65	90562523	COLLAR,DEFLECTOR	1
66	90562333	TORSION SPRING	1
67	90562334	SLEEVE	1
68	90562314	BLADE PIN	1
69	90562332	BL CLAMP COLLAR	1
70	90570102	PIN	1
71	90562315	BLADE CLAMP BOOT	1
121	90597029	NAMEPLATE	1
122	90599392	WARNING LABEL	1
800	429698-00	GREASE:4 LB CAN	1
861	90597420	KIT BOX	1