



## Parts List for BV300 Type 4

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
3	000000-00	No Longer Available	1
4	000000-00	No Longer Available	2
5	90540631	HEATSINK	2
6	000000-00	No Longer Available	2
7	000000-00	No Longer Available	1
8	087212-00	FIBER WASHER	1
9	054831-00	WASHER	1
10	132254-07	BRUSH&HOLDER	2
13	000000-00	No Longer Available	1
14	000000-00	No Longer Available	1
16	000000-00	No Longer Available	1
17	46629-01	CONNECTOR	1
18	87205-00	PLUG	4
19	55050-00	PLUG	4
20	330019-13	SCREW,M4X19	11
21	000000-00	No Longer Available	1
22	144575-01	ACTUATOR	1
23	000000-00	No Longer Available	1
25	000000-00	No Longer Available	1
26	000000-00	No Longer Available	1
27	383994-00	SWITCH,ON/OFF	1
28	381993-00	NESTED TUBE ASY	1
29	381993-00	NESTED TUBE ASY	1
30	000000-00	No Longer Available	1
31	000000-00	No Longer Available	1
32	610004-01	SHOULDER BAG	1

## Parts List for BV300 Type 4

Item Number	Part Number	Description	Qty Required
33	000000-00	No Longer Available	1
34	000000-00	No Longer Available	1
35	151616-01	CORD/2.5MM/NYL.	1
36	000000-00	No Longer Available	1
37	000000-00	No Longer Available	1
38	000000-00	No Longer Available	1