



Parts List for CD180GK-2 Type 1

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	5101240-00	SPRING PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	311993-00	SCREW	6
7	498511-00	SCREW	1
8	5102940-00	TRANSMISSION	1
9	5102586-05	VSR SWITCH (DC)	1
10	000000-00	No Longer Available	1
11	5103589-00	GEL PAD	1
12	000000-00	No Longer Available	1
13	5103599-00	SUPPORT	1
14	5103908-01	CLAMSHELL	1
15	5102349-03	DC MOTOR ASM	1
16	5102589-06	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
856	71-399	MAG.BIT TIP HOLDER	1
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	PS145	18V BATTERY	2
867	645221-00	BATTERY CAP	1
871	90500930-01	PS185 18V CHARGER	1