



## Parts List for CD180GRK Type 1

Item Number	Part Number	Description	Qty Required
2	000000-00	No Longer Available	1
3	5101240-00	SPRING PIN	1
4	148354-03	BIT CLIP	1
5	311978-01	F/R ACTUATOR	1
6	311993-00	SCREW	6
7	498511-00	SCREW	1
8	5103416-02	TRANSMISSION	1
9	5102586-03	VSR DC SWITCH	1
10	000000-00	No Longer Available	1
11	5103589-00	GEL PAD	1
12	000000-00	No Longer Available	1
13	5103599-00	SUPPORT	1
14	5103908-00	CLAMSHELL SET	1
16	5102589-04	NAMEPLATE	1
17	5102537-01	ID LABEL	1
19	5103587-00	BIT HOLDER ASSY	1
20	497927-02	RETAINING CLIP	1
21	497935-02	BEARING WASHER	1
22	5100115-00	BIT RELEASE RING	1
24	5100117-00	SPRING	1
26	5100776-00	HUB CAP	1
27	5101752-00	WASHER	1
28	5102929-00	INSULATOR	1
29	607918-41	SCREWDRIVER BIT	1
856	71-399	MAG.BIT TIP HOLDER	1
861	499124-13	KIT BOX	1
866	PS145	18V BATTERY	1

## Parts List for CD180GRK Type 1

Item Number	Part Number	Description	Qty Required
867	645221-00	BATTERY CAP	1
871	5102767-12	CHARGER	1