



## Parts List for CRS144K P Type 2

Item Number	Part Number	Description	Qty Required
1	499686-00	LOCK OFF	1
2	498974-00	SCREW	2
3	498916-00	CONN.ROD & BRG	1
4	498918-40	PIN	1
5	498977-00	SCREW	7
6	498922-00	BRG. RETAINER	1
7	498921-00	YOKE	1
8	498913-13	BEARING	1
9	499687-00	SEAL	1
10	498567-00	SPRING	1
11	498563-00	INNER COLLAR	1
12	498561-00	SLIDER	1
13	498565-30	OUTER COLLAR	1
14	498566-00	CLAMP PIN	1
15	498571-00	LEVER	1
16	498755-00	SHOE ASSY	1
18	498753-01	SWITCH	1
19	000000-00	No Longer Available	1
20	499688-00	GEAR CASE ASSY	1
21	000000-00	No Longer Available	1
22	000000-00	No Longer Available	1
23	498972-00	RUBBER PLUG	1
24	499574-00	SEAL	1
25	498946-00	RETAINING RING	3
26	499858-00	WASHER	1
27	000903-00	BALL	1
28	497495-00	SCREW	10

## Parts List for CRS144K P Type 2

Item Number	Part Number	Description	Qty Required
29	498761-00	ID LABEL	1
30	5100820-00	PRUNER	1
856	75-273	6IN 10TPI RECIP BLADE	1
857	75-490	4IN 18TPI MET.BLADE	1
861	000000-00	No Longer Available	1
866	FSB14	BATTERY	1
871	90500933	CHARGER	1