


RYOBI 18 VOLT CORDLESS CHAIN SAW – MODEL NO. CS1800

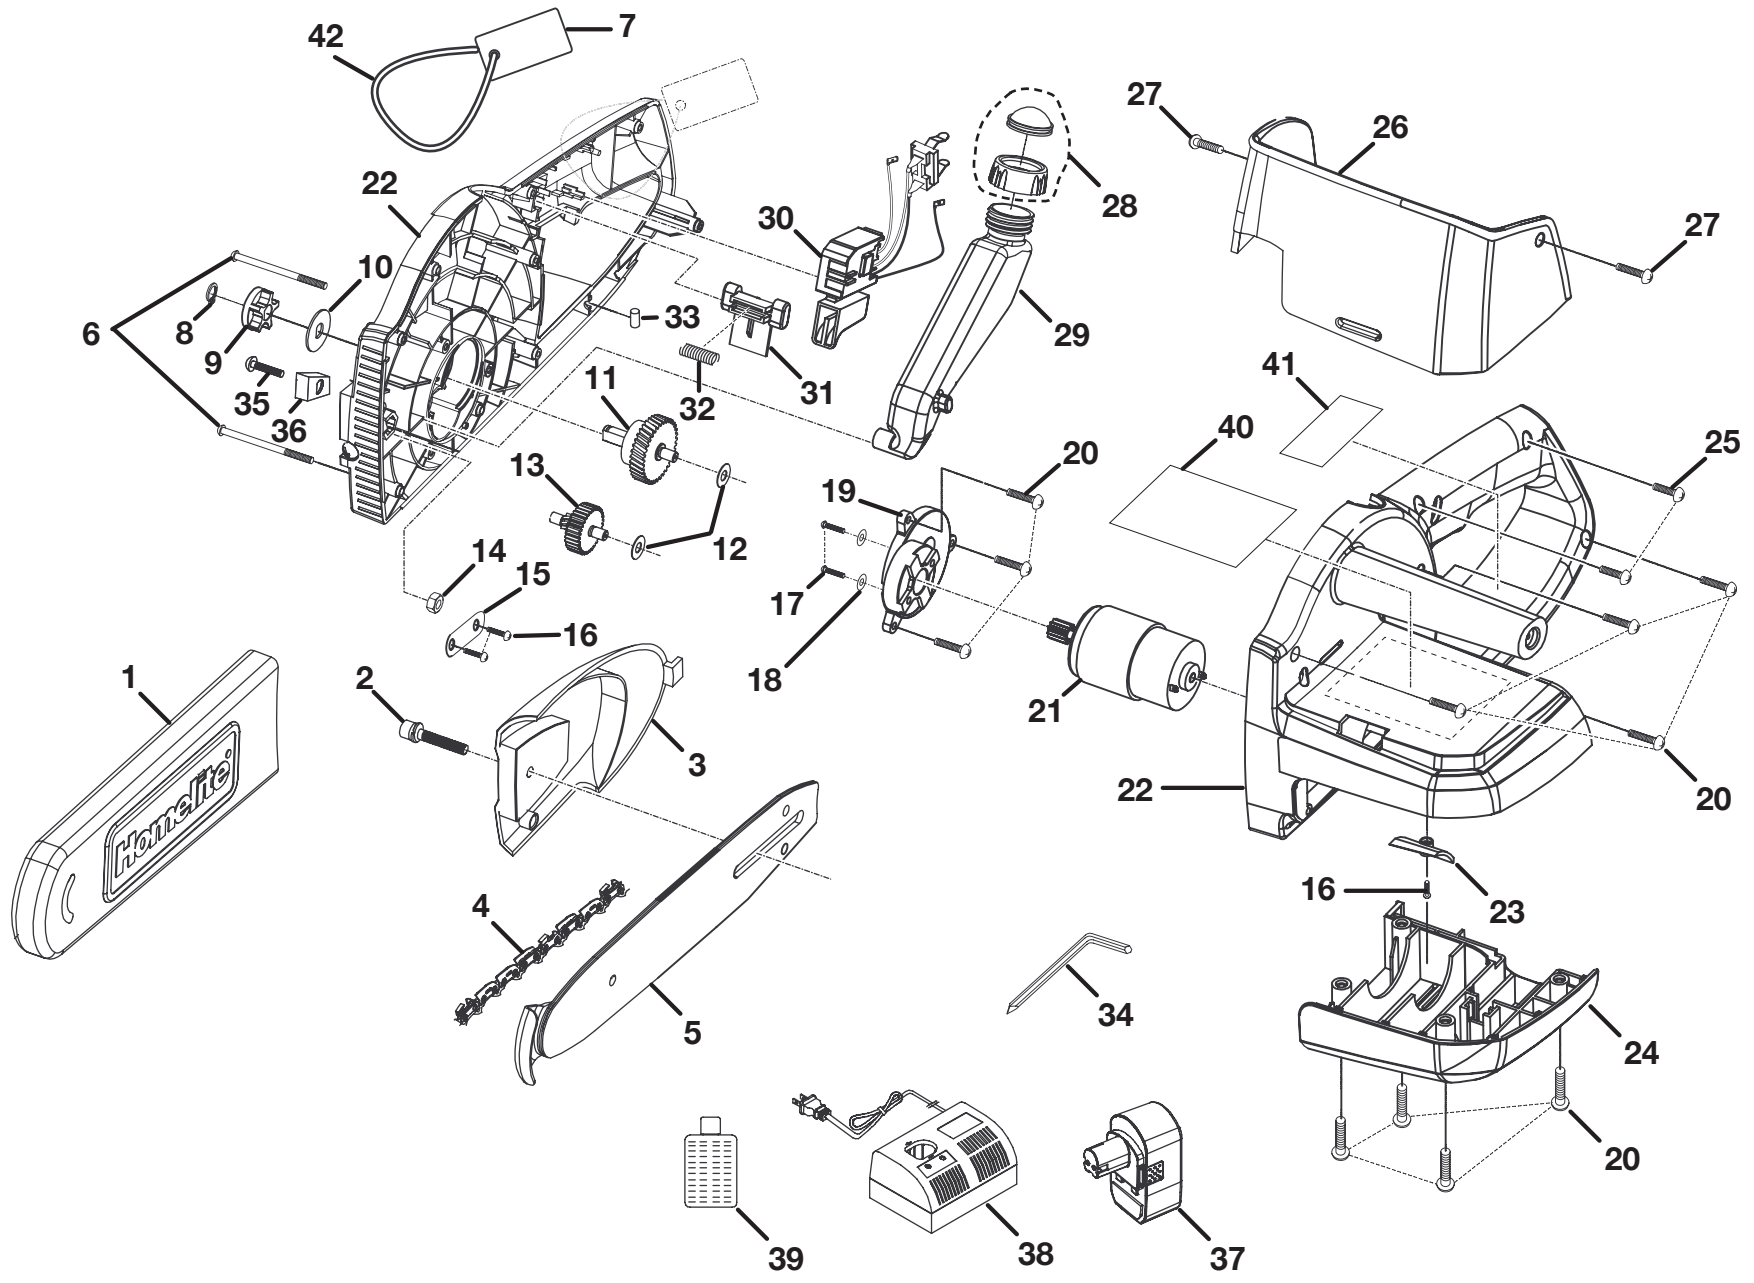

RYOBI 18 VOLT CORDLESS CHAIN SAW – MODEL NO. CS1800

The model number will be found on a plate attached to the motor housing. Always mention the model number in all correspondence regarding your RYOBI CORDLESS CHAIN SAW or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	580363002	GUARD.....	1	23	5958401	WIND PLATE.....	1
2	6605802	SCREW (SOCKET HEAD)	1	24	590497003	LOWER MOTOR HOUSING	1
3	200193002	SPROCKET GUARD.....	1	25	6620805	* SCREW (M4 X 16 mm PAN HD.).....	2
4	6958301	CHAIN, (90JG-040)	1	26	200201002	FRONT HANDLE GUARD	1
	690583002	CHAIN / CARLTON		27	6620604	* SCREW (M3.5 X 25 mm)	1
5	671256002	CHAIN BAR (10 in.).....	1	28	300890001	OIL TANK COVER ASSEMBLY	1
	671667002	CHAIN BAR / MERCURY		29	5836201	OIL TANK	1
6	6623704	* SCREW (M4 X 66 mm)	2	30	2701520	SWITCH ASSEMBLY	1
7	940230067	WARNING LABEL (ON HANDLE)	1	31	5217313	SAFETY KNOB	1
8	6760802	C-RING.....	1	32	6799802	SPRING	1
9	6132301	SPROCKET	1	33	5621901	CONTACT PLATE STOPPER	1
10	6973301	COVER PLATE	1	34	6800203	HEX KEY (5 mm).....	1
11	3000343	OUTPUT SHAFT ASSEMBLY	1	35	660200002	* SCREW (M2.3 X 6 mm)	1
12	6906001	WASHER	2	36	900162004	FELT SEAL	1
13	3000342	OUTPUT SHAFT ASSEMBLY	1	37	130224007	BATTERY.....	1
14	6819602	NUT	1	38	1423701	BATTERY CHARGER.....	1
15	6985701	STEEL PLATE	1	39	200227001	OIL AND BOTTLE ASSEMBLY.....	1
16	6600506	BEARING RETAINER SCREW	3	40	940230050	WARNING LABEL.....	1
17	6621211	* SCREW (M4 X 12 mm)	2	41	940303117	RATING LABEL.....	1
18	6703001	SPRING WASHER	2	42	790022001	CABLE TIE	1
19	3076501	MOTOR MOUNTING ASSEMBLY	1		983000-353	OPERATOR'S MANUAL	
20	6620803	* SCREW (M4 X 22 mm PAN HD.).....	11		983000-353R	REPAIR SHEET (REV: 00)	
21	2307404	MOTOR ASSEMBLY	1		02-02-05		
22	200192002	MOTOR HOUSING SUPPORT	1				

* STANDARD HARDWARE ITEM – MAY BE PURCHASED LOCALLY