



Uppge detaljnummer enl.  
omstående sida vid re-  
servdelbeställning.

When ordering spare  
parts please state  
part numbers.

Bei der Bestellung von  
Ersatzteilen bitte an-  
geben die Teilenummern.

## Parts List for D19AD Type 0

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	136112	CYLINDER BODY	1
3	972002	O-RING	1
4	946004	NUT	1
5	191013	PISTON	1
6	972017	O-RING	1
7	947015	WASHER	1
8	191113	PISTON ROD	1
9	163109	RELEASE LATCH	1
11	972142	O-RING	1
12	139455	CYLINDER CHASSIS	1
13	946533	SCREW	4
14	145049	PIN	1
15	161054	CONNECTING YOKE	1
16	945018	TENSIONING PIN	1
17	149057	PISTON STOP	1
18	173055	VALVE SPRING	1
19	972009	O-RING	2
20	191115	PISTON VALVE	1
21	147079	WASHER	1
22	946608	SCREW	2
23	150338	BUSHING	1
24	163298	TOGGLE LATCH	1
25	173149	SPRING	1
27	000000-00	No Longer Available	1
28	947032	LOCK WASHER	5
29	173049	RETURN SPRING	1

## Parts List for D19AD Type 0

Item Number	Part Number	Description	Qty Required
31	163152	VALVE STEM TOGGLE	1
32	134255	TRIGGER CPL	1
32	165028	TRIGGER	1
34	945011	TENSIONING PIN	1
35	146061	SCREW	2
36	170515	HOOK	1
38	161039	BACK PLATE	1
40	945022	TENSION PIN	1
41	000000-00	No Longer Available	1
42	947001	LOCK WASHER	2
44	971004	SOUND ABSORBER	1
45	178021	BUSHING	1
46	972020	O-RING	1