



Parts List for DCR015 Type 2

Item Number	Part Number	Description	Qty Required
1	5140189-39	LEFT FRAME	1
2	5140189-40	RIGHT FRAME	1
3	5140189-41	SPEAKER	1
4	5140189-42	VOLUME KNOB	1
5	5140189-43	FRONT CABINET	1
6	5140189-44	RUBBER PAD	1
7	5140189-45	PCB ASSEMBLY	1
8	5140189-46	PCB ASSEMBLY	1
9	5140189-47	DOOR ASSEMBLY	1
10	5140189-48	ROLL CAGE-LEFT	1
11	5140189-49	SHOCK MOUNT	1
12	5140189-50	SHOCK MOUNT	1
13	5140189-51	HANDLE	1
14	5140189-52	ROLL CAGE-RIGHT	1
15	5140189-53	CORD WRAP	1
16	5140189-54	PCB ASSEMBLY	1
17	5140189-55	PCB ASSEMBLY	1
18	5140189-56	PCB ASSEMBLY	1
19	5140189-57	CABINET	1
20	5140189-58	DOOR ASSEMBLY	1
21	5140189-59	ANTENNA	1
22	5140189-60	BATTERY DOOR KIT	1
23	5140189-61	BATTERY HOLDER	1
24	5140189-62	AC OUTLET ASSEMBLY	1
25	5140189-63	CORD ASSY	1
26	5140189-64	PCB ASSEMBLY	1
27	5140189-65	PCB ASSEMBLY	1

Parts List for DCR015 Type 2

Item Number	Part Number	Description	Qty Required
28	5140189-66	TRANSFORMER	1
29	5140189-67	PCB ASSEMBLY	1