



Parts List for DCS577T1 Type 1

Item Number	Part Number	Description	Qty Required
1	N516965	HOUSING	1
2	N519417	BATTERY BOX	1
3	N557843	UPPER GUARD ASSY	1
4	N521085	ARBOR BOLT	1
5	N520395	OUTER FLANGE	1
6	N519762	INNER FLANGE	1
7	N529425	RETAINING RING	1
8	N515400	LOWER GUARD	1
9	N521530	TORSION SPRING	1
10	330045-49	SCREW	6
11	098094-13	SCREW	1
12	N086628	GUARD LEVER	1
13	N515408	HUB	1
14	N557822	SPINDLE ASSEMBLY	1
15	N461177	SCREW-FLT HD SOCKET	3
16	N521648	SEAL	1
17	N525586	DEFLECTOR	1
18	N531356	CARRIAGE BOLT	1
19	N525261	SPRING	2
20	N461735	SPRING	1
21	N091479	MOUNT- SPRING	1
22	N527530	FIXED PLATE	1
23	381066-00	BUMPER	1
24	N086135	SHOULDER SCREW	1
25	N522053	SEAL	1
26	N519670	SPINDLE LOCK	1
27	N529070	SPRING	1

Parts List for DCS577T1 Type 1

Item Number	Part Number	Description	Qty Required
28	N521649	O-RING	1
29	N420180	WRENCH	1
31	N537732	WARNING LABEL	1
32	N422878	LOCK OFF BUTTON	1
33	N433343	LOCK OFF SPRING	1
34	N556108	ROTOR ASSY	1
35	N556110	MODULE & STATOR ASSY	1
36	330019-10	SCREW	2
37	330045-15	SCREW	3
38	90504014	CABLE TIE	1
40	N519999	AUX HANDLE	1
41	330019-12	SCREW	2
42	330045-19	SCREW	4
44	N539983	WARNING LABEL	1
45	330019-03	SCREW,PLASTITE	8
46	330021-02	NUT	1
47	N521194	WASHER	1
48	N520011	HOLDER	1
49	N521193	SPRING	1
50	N521192	BUSHING	1
51	N542818	HOOK ASSY.	1
52	330065-07	SCREW	4
53	N521532	PIVOT BOLT	1
54	330021-07	STOP NUT	1
55	N521958	STOP NUT	1
56	N522425	LEVER	1
57	N521735	SCREW	1

Parts List for DCS577T1 Type 1

Item Number	Part Number	Description	Qty Required
58	N557839	SHOE ASSEMBLY	1
59	N537729	RATING LABEL	1
60	330019-04	SCREW,PLASTITE	2
61	N555341	DUST CHUTE	1
62	N455083	SCREW,TAPTITE	2
800	30301914-01	GREASE	1
862	629053-00	TOOL BAG	1
866	DCB606	FLEXVOLT BATTERY	1
871	DCB118	CHARGER	1