



Parts List for DDF211022P Type 0

Item Number	Part Number	Description	Qty Required
1	52510-PWR	NOSE PIECE P2201	1
2	52526-PWR	BUFFER P2201	1
3	52523-PWR	PISTON & RING KIT	1
3	52522-PWR	PISTON P2201	1
4	52542-PWR	PISTON RING P2201	1
5	52502-PWR	BARREL P2201	1
6	52503-PWR	BREECH PLUG P2201	1
7	52504-PWR	BREECH BLOCK P2201	1
8	52517-PWR	P2201 SEAR SPRING	1
9	52518-PWR	SEAR P2201	1
10	52538-PWR	FIRING MECH SPRING	1
11	52539-PWR	P2201 RECIEVER	1
12	52512-PWR	PISTON RESET PIN	1
13	52532-PWR	RESET PIN SPRING	1
14	52531-PWR	P2201 RESET PIN	1
15	52514-PWR	RESET PIN CAP P2201	1
16	52515-PWR	P2201 LOCKING PIN	1
17	52506-PWR	FIRING PIN P2201	1
18	52530-PWR	FIRNG PIN SPRING	1
19	52549-PWR	P2201 TUBE	1
20	52516-PWR	TRIGGER P2201	1
23	52545-PWR	TRIGGER HINGE NUT	1
24	52547-PWR	TRIGGER HINGE PIN	1
25	52548-PWR	HANDLE BOLTS(2/pk)	1
26	52536-PWR	TRIGGER RETURN SPRG	1
27	52550-PWR	SPALL GUARD P2201	1
836	N411209	STEEL PLATE	1

Parts List for DDF211022P Type 0

Item Number	Part Number	Description	Qty Required
856	52072-PWR	CLEANING KIT	1
856	000000-00	No Longer Available	1
856	50506-PWR	POWDER LOAD STRIP	1
856	50502-PWR	POWDER LOAD STRIP	1
856	50504-PWR	POWDER LOAD STRIP	1