


ELECTRIC TOOL PARTS LIST

■ ROTARY HAMMER Model DH 24PF3

2005 · 5 · 20

(E1)

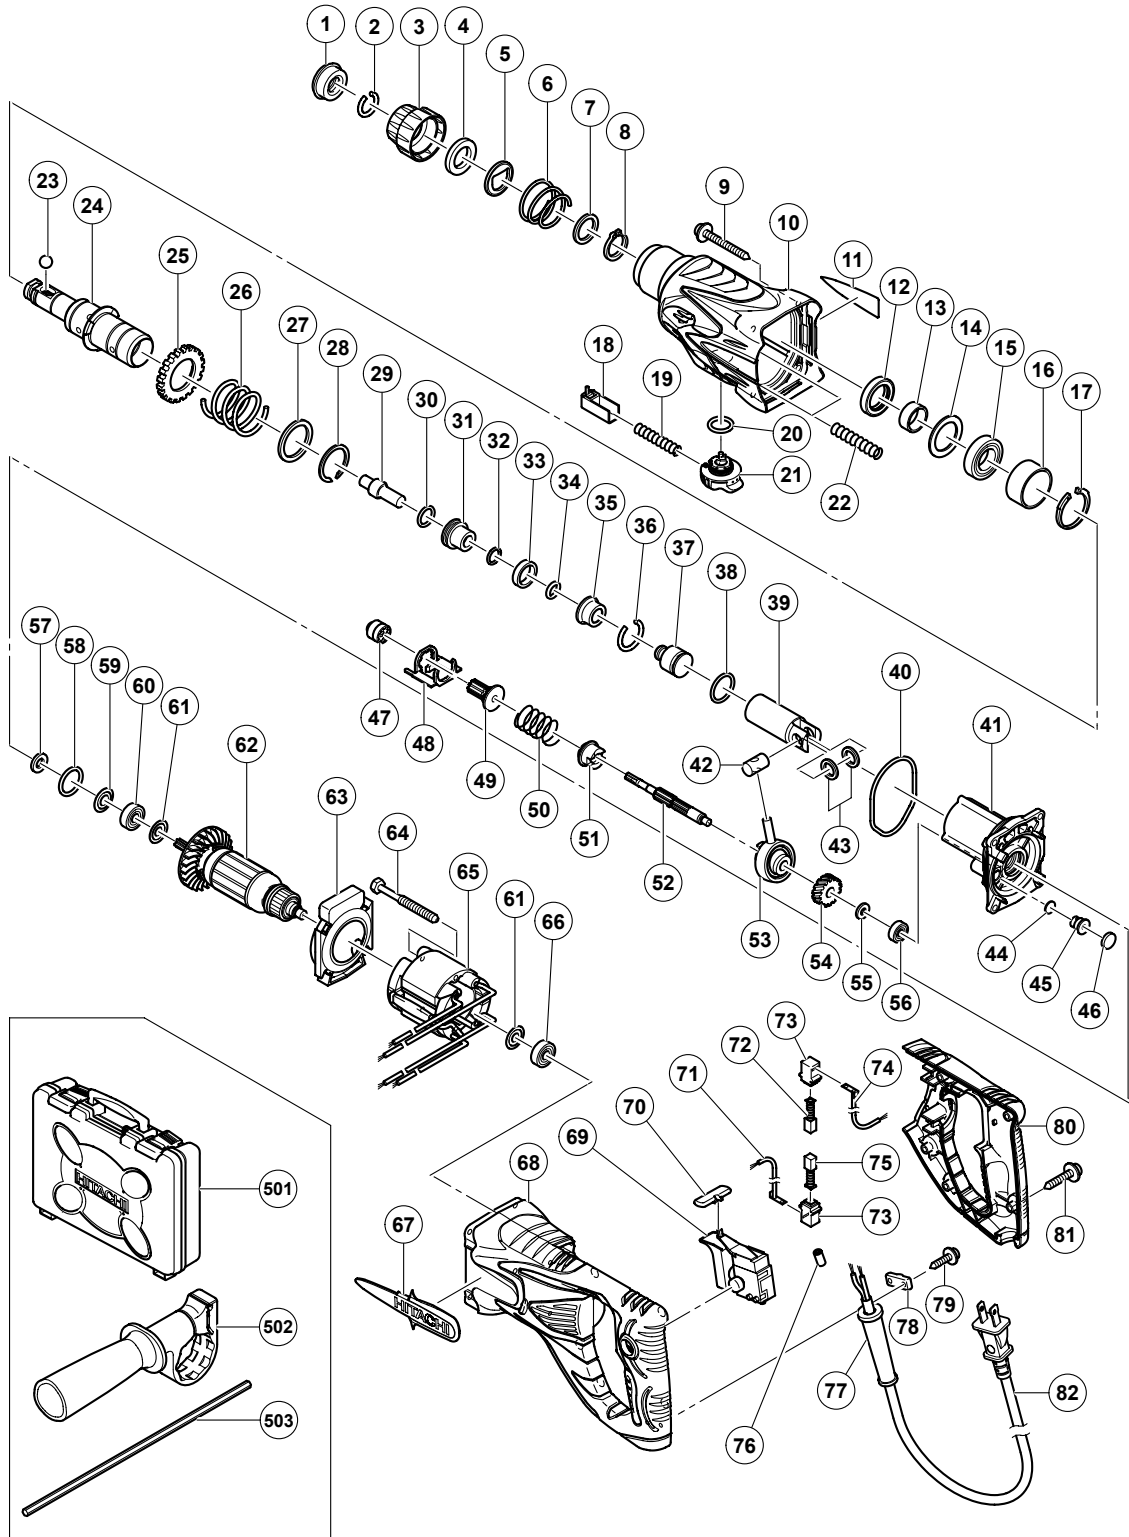

PARTS

DH 24PF3

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS
1	306-345	FRONT CAP	1	
2	306-340	STOPPER RING	1	
3	324-527	GRIP	1	
4	324-528	BALL HOLDER	1	
5	324-526	HOLDER PLATE	1	
6	322-812	HOLDER SPRING	1	
7	984-118	WASHER (B)	1	
8	939-547	RETAINING RING FOR D20 SHAFT (10 PCS.)	1	
9	301-654	TAPPING SCREW (W/FLANGE) D5X35	4	
10	324-605	GEAR COVER ASS'Y	1	INCLUD. 47
11		NAME PLATE	1	
12	307-688	OIL SEAL	1	
13	322-815	SLEEVE	1	
14	323-232	FELT PACKING (B)	1	
15	690-4DD	BALL BEARING 6904DDPS2L	1	
16	324-522	SLEEVE (A)	1	
17	322-813	RETAINING RING 37MM	1	
18	324-530	PUSHING BUTTON	1	
19	317-223	PUSHING SPRING	1	
20	878-885	O-RING (S-18)	1	
21	324-603	CHANGE LEVER	1	
22	317-238	SPRING (B)	2	
23	959-156	STEEL BALL D7.0 (10 PCS.)	1	
24	323-184	CYLINDER	1	
25	323-185	SECOND GEAR	1	
26	317-233	SPRING (A)	1	
27	317-234	WASHER (A)	1	
28	317-235	RETAINING RING D30	1	
29	324-525	SECOND HAMMER	1	
30	944-486	O-RING (1AP-20)	1	
31	324-523	HAMMER HOLDER	1	
32	322-802	O-RING (B)	1	
33	322-805	DAMPER (A)	1	
34	322-808	O-RING (C)	1	
35	324-524	DAMPER HOLDER	1	
36	322-807	STOPPER RING	1	
37	324-535	STRIKER	1	
38	322-834	O-RING (I.D. 16)	1	
39	324-534	PISTON	1	
40	322-793	O-RING (I.D. 66.5)	1	
41	324-542	INNER COVER ASS'Y	1	INCLUD. 44-46
42	322-798	PISTON PIN	1	
43	322-799	WASHER (C)	2	
44	324-543	FELT PACKING (A)	1	
45	324-545	VALVE	1	
46	324-544	FELT PACKING (B)	1	
47	323-249	PINION SLEEVE	1	
48	318-522	LOCK PLATE	1	
49	323-181	SECOND PINION	1	
50	323-182	CLUTCH SPRING	1	
51	324-606	CLUTCH	1	

STANDARD ACCESSORIES

DH 24PF3

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS
501	324-591	CASE	1	
502	324-548	SIDE HANDLE	1	
503	310-331	DEPTH GAUGE	1	

OPTIONAL ACCESSORIES

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS
601	981-840	GREASE (A) FOR HAMMER. HAMMER DRILL (30G)	1	
602	308-471	GREASE FOR HAMMER. HAMMER DRILL (70G)	1	
603	980-927	GREASE FOR HAMMER. HAMMER DRILL (500G)	1	
604	306-885	DUST COLLECTOR (B) ASS'Y	1	INCLUD. 605, 613
605	986-802	DUST COLLECTOR ASS'Y	1	INCLUD. 606-612
606	986-803	DUST COVER	1	
607	986-804	SEAL COVER	1	
608	948-310	RETAINING RING FOR D30 SHAFT	1	
609	958-063	WASHER	1	
610	959-150	STEEL BALL D6.35 (10 PCS.)	19	
611	986-805	OUTER RACE	1	
612	986-806	SOCKET	1	
613	306-910	SOCKET ADAPTER (B)	1	
614	971-787	DUST CUP	1	
615	931-844	STOPPER	1	
616	321-814	DRILL CHUCK 13VLRB-D	1	INCLUD. 617
617	995-344	FLAT HD. SCREW (A) (LEFT HAND) M6X25	1	
618	321-813	DRILL CHUCK 13VLD-D	1	
619	971-511Z	+ DRIVER BIT (A) NO. 2 25L	1	
620	971-512Z	+ DRIVER BIT (A) NO. 3 25L	1	
621	944-477	COTTER	1	
622	982-684	CENTER PIN (A) 109L FOR CORE BIT D32-38	1	
623	982-685	CENTER PIN (B) 104L FOR CORE BIT D45-90	1	
624	982-672	CORE BIT (A) 25MM	1	
625	982-673	CORE BIT (A) 29MM	1	
626	982-674	CORE BIT (A) 32MM	1	INCLUD. 627
627	982-686	GUIDE PLATE (FOR CORE BIT 32MM)	1	
628	982-675	CORE BIT (A) 35MM	1	INCLUD. 629
629	982-687	GUIDE PLATE (FOR CORE BIT 35MM)	1	
630	982-676	CORE BIT (A) 38MM	1	INCLUD. 631
631	982-688	GUIDE PLATE (FOR CORE BIT 38MM)	1	
632	982-677	CORE BIT (B) 45MM	1	INCLUD. 633
633	982-689	GUIDE PLATE (FOR CORE BIT 45MM)	1	
634	982-678	CORE BIT (B) 50MM	1	INCLUD. 635
635	982-690	GUIDE PLATE (FOR CORE BIT 50MM)	1	
636	971-794	ANCHOR SETTING ADAPTER A W1/4" (MANUAL)	1	
637	971-795	ANCHOR SETTING ADAPTER A W5/16" (MANUAL)	1	
638	971-796	ANCHOR SETTING ADAPTER A W3/8" (MANUAL)	1	
639	971-797	ANCHOR SETTING ADAPTER A W1/2" (MANUAL)	1	
640	971-798	ANCHOR SETTING ADAPTER A W5/8" (MANUAL)	1	
641	971-799	ANCHOR SETTING ADAPTER B W1/4" (MANUAL)	1	

