







## Parts List for DH3028 Type 0

Item Number	Part Number	Description	Qty Required
1	5140097-70	SEAL KIT	1
2	5140097-76	VALVE KIT	1
5	5140096-96	SCREW	3
8	5140095-83	PUMP	1
10	5140096-97	O-RING	1
11	5140096-98	SEAL	1
20	5140096-99	CONNECTING ROD	3
32	5140097-61	OIL FILL CAP	1
33	5140097-60	O-RING	2
37	5140097-62	GAUGE	1
38	5140097-63	GASKET	1
48	5140097-64	DRAIN PLUG	1
64	5140097-65	PIN	3
65	5140097-66	PLUNGER	3
70	5140097-67	OIL SEAL	3
90	5140097-69	PLUNGER	3
99	5140097-71	RETAINER	3
100	5140097-68	RETAINER	3
120	5140097-72	CASE SEAL	3
174	5140097-73	PLUG	3
193	5140097-74	SCREW	8
201	5140095-82	ENGINE	1
206	5140096-95	DECAL	1
207	5140095-94	LANCE	1
209	5140095-88	HANDLE ASSEMBLY	1
210	5140095-87	FRAME ASSY.	1
212	5140095-89	HARDWARE KIT	1

## Parts List for DH3028 Type 0

Item Number	Part Number	Description	Qty Required
218	5140095-03	FOOT	2
220	5140095-91	WHEEL KIT	2
221	5140095-92	NOZZLE SET	1
222	5140095-95	HOSE 5/16X25FT 3000P	1
226	5140112-49	INLET FITTING	1
227	5140095-05	GUN	1
228	5140094-94	COUPLER	1
230	5140095-85	VALVE THERMAL RELIEF	1
232	5140095-90	HARDWARE KIT	1
234	5140094-96	HOSE CHEMICAL	1
236	5140094-99	NOZZLE HOLDER RUBBER	1
249	5140095-86	ADAPTER PLATE	1
303	5140043-80	STEM	1
304	P776	WASHER CAT 46250	1
305	5140043-81	VALVE RETAINER	1
306	5140043-82	SEAT	1
307	5140043-83	VALVE	1
327	5140097-78	CAP	1
328	5140097-80	SPRING	1
329	5140097-81	SPRING RETAINER	1
330	5140097-79	LOCK NUT	1
331	5140043-77	RETAINER	1
332	5140097-86	O-RING	2
333	5140097-87	O-RING KIT	1
337	P599	ORING CAT 13963	1
338	5140097-82	SEAT	1
339	5140097-84	CHECK VALVE	1

## Parts List for DH3028 Type 0

Item Number	Part Number	Description	Qty Required
340	5140097-85	SPRING	1
347	5140097-77	CHEMICAL INJ ASSY CA	1