





Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------------|--------------|
| 1 | N451835 | ARM ASSEMBLY | 1 |
| 2 | N459234 | BELT COVER | 1 |
| 3 | 330045-14 | SCREW, TAPTITE | 7 |
| 4 | 146751-00 | SHAFT,PIVOT | 1 |
| 5 | 146732-00 | SPACER | 2 |
| 6 | N039404 | TORSION SPRING | 1 |
| 7 | 150075-00 | SCREW,SET | 2 |
| 8 | N377514 | BUSHING | 2 |
| 9 | 387130-00 | LOCKING PIN | 1 |
| 10 | 034158-00 | O RING | 1 |
| 11 | N058304 | REAR GUARD | 1 |
| 12 | 330045-23 | SCREW,TAPTITE | 8 |
| 13 | 153603-01 | PAWL | 1 |
| 14 | 153639-00 | SCREW,SHOULDER | 5 |
| 15 | 153655-00 | WASHER,WAVY | 2 |
| 16 | N185664 | ADJUSTMENT SCREW | 1 |
| 17 | 150718-00 | NUT,WING | 1 |
| 18 | N439376 | WORK LIGHT | 1 |
| 20 | 618198-00 | SCREW | 1 |
| 23 | N436564 | BOLT ASSY | 1 |
| 24 | 151962-01 | CLAMP,OUTER | 1 |
| 25 | 152636-00 | ADAPTOR,BLADE | 1 |
| 26 | 644999-00 | WASHER, INNER BLADE | 1 |
| 28 | N141275 | SPINDLE & GEAR | 1 |
| 29 | 330003-66 | BEARING, BALL | 1 |
| 30 | 391616-00 | NEEDLE BEARING | 1 |
| 31 | N139533 | GEAR-INTER. | 1 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-----------------------|--------------|
| 32 | 605040-20 | BALL BEARING | 1 |
| 33 | 605040-33 | BEARING | 1 |
| 34 | N203541 | PINION SHAFT ASSY | 1 |
| 35 | 153752-00 | RING,RET.EXT | 2 |
| 36 | 618244-00 | RETAINING PLATE | 1 |
| 37 | 330045-49 | SCREW | 11 |
| 38 | 391310-00 | BEARING PLATE | 1 |
| 40 | N004511 | DRIVEN PULLEY | 1 |
| 44 | N268679 | GEAR CASE COVER ASSY. | 1 |
| 45 | 391315-00 | GASKET | 1 |
| 47 | 153555-00 | BELT | 1 |
| 49 | 153561-00 | PIN,LOCK | 1 |
| 50 | 448176-00 | SPRING | 1 |
| 51 | 393071-00 | RET. PLATE | 1 |
| 52 | 330045-45 | SCREW | 8 |
| 53 | 153559-00 | WASHER,FELT | 1 |
| 56 | 146740-00 | SLEEVE,FLANGED | 2 |
| 57 | 394589-01 | SCREW | 2 |
| 60 | 330045-15 | SCREW | 12 |
| 61 | N142121 | DUST DUCT ASSY. | 1 |
| 62 | N080677 | LOCK KNOB | 1 |
| 68 | N058308 | BEVEL POINTER | 1 |
| 69 | N058309 | BEVEL POINTER | 1 |
| 70 | N080199 | KNOB | 1 |
| 72 | 060325-01 | RING | 1 |
| 74 | 330045-06 | SCREW | 7 |
| 76 | N090294 | BEVEL SCALE | 1 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|----------------|--------------|
| 80 | N043045 | PAWL | 2 |
| 83 | N049689 | STOP PLATE | 1 |
| 85 | N051519 | STOP PLATE | 1 |
| 91 | 330015-03 | NUT,HEX | 1 |
| 92 | N058312 | SCREW | 2 |
| 93 | N450450 | BASE ASSEMBLY | 1 |
| 94 | 618192-00 | WEAR PLATE | 1 |
| 95 | N057391 | KERF PLATE | 2 |
| 96 | N450345 | TABLE ASM | 1 |
| 97 | N401778 | COVER | 1 |
| 99 | 049787-00 | O RING | 1 |
| 100 | N058318 | SCREW | 1 |
| 101 | N044739 | LOCK NUT | 1 |
| 102 | 153792-00 | WASHER | 4 |
| 103 | N059784 | DETENT PLATE | 1 |
| 104 | 604410-00 | SCREW | 2 |
| 105 | 391358-01 | WRENCH HOLDER | 1 |
| 106 | 608563-02 | WRENCH | 1 |
| 107 | N057963 | POINTER | 1 |
| 108 | N050755 | ACTUATOR | 1 |
| 109 | N066280 | CLAMP PLATE | 2 |
| 110 | 622396-00 | SHAFT | 1 |
| 111 | 622395-00 | LEVER | 1 |
| 112 | N472413 | DETENT | 1 |
| 113 | 618176-00 | SPRING | 1 |
| 114 | 093128-00 | NEEDLE BEARING | 2 |
| 115 | 618254-00 | RETAINER | 1 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-----------------|--------------|
| 116 | N082785 | LEVER | 1 |
| 117 | N057386 | PIN | 1 |
| 118 | 624460-00 | PIVOT PIN | 1 |
| 119 | 624461-00 | SLEEVE | 1 |
| 120 | 618186-00 | ROD | 1 |
| 121 | 618185-00 | BLOCK | 1 |
| 122 | 385915-03 | SHOULDER SCREW | 1 |
| 123 | 618253-00 | SPRING | 1 |
| 124 | N434092 | HANDLE SET | 1 |
| 125 | 330045-18 | SCREW | 4 |
| 126 | 330019-32 | SCREW | 3 |
| 128 | N447769 | SWITCH | 1 |
| 129 | N458834 | SCREW | 4 |
| 130 | 330045-23 | SCREW,TAPTITE | 1 |
| 131 | 330019-12 | SCREW | 2 |
| 133 | N083060 | HANDLE | 1 |
| 134 | 330019-22 | SCREW | 1 |
| 135 | 398443-00 | CABLE CLAMP | 1 |
| 137 | N030322 | COVER | 1 |
| 138 | N450332 | FENCE | 1 |
| 139 | N450335 | LEFT FENCE | 1 |
| 140 | N450342 | RIGHT FENCE | 1 |
| 141 | N142125 | BEVEL KNOB | 2 |
| 142 | 098105-03 | SCREW | 4 |
| 143 | N473903 | MOTOR ASSEMBLY | 1 |
| 144 | N448791 | DUST COVER | 1 |
| 145 | N480342 | SCREW, SHOULDER | 1 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-----------------|--------------|
| 146 | N443878 | JUMPER | 1 |
| 147 | N443879 | JUMPER | 1 |
| 148 | N449481 | HEYCO BUSHING | 1 |
| 149 | 048822-00 | HEYCO BUSHING | 1 |
| 150 | N004510 | DRIVE PULLEY | 1 |
| 151 | N426940 | BASE HOUSING | 1 |
| 152 | 323924-08 | SCREW,M3.5 X 12 | 4 |
| 153 | N426941 | HOUSING | 1 |
| 154 | N449474 | SCREW-THD.FORM | 1 |
| 155 | N461735 | SPRING | 2 |
| 157 | N426942 | END HOUSING | 1 |
| 158 | 330019-16 | SCREW | 10 |
| 160 | N457628 | RATING LABEL | 1 |
| 170 | N450353 | SUPPORT HOUSING | 1 |
| 171 | 603390-00 | SCREW | 8 |
| 172 | 397118-00 | GUIDE | 2 |
| 173 | 153576-04 | SET SCREW | 1 |
| 174 | 613497-00 | SLUG | 1 |
| 175 | N058314 | SHOULDER SCREW | 4 |
| 177 | N051244 | BUMPER | 2 |
| 178 | 659919-00 | SPRING,CONICAL | 1 |
| 179 | 612008-00 | SCREW | 1 |
| 180 | N459410 | BEVEL HANDLE | 1 |
| 181 | 330016-04 | WASHER | 1 |
| 183 | N095579 | STOP LEVER | 1 |
| 184 | 167785-00 | SPRING | 1 |
| 185 | N041865 | STOP PIN | 1 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|------------------|--------------|
| 187 | 153797-00 | SCREW | 1 |
| 188 | N058315 | SHOULDER SCREW | 2 |
| 189 | 385946-00 | WASHER,SPRING | 4 |
| 190 | N043046 | PAWL | 2 |
| 192 | 153797-04 | SCREW | 2 |
| 194 | N058306 | DUST DEFLECTOR | 1 |
| 195 | 153451-00 | BEARING,THRUST | 1 |
| 199 | N390810 | LOWER GUARD ASSY | 1 |
| 200 | N457634 | LABEL,IDENT. | 1 |
| 201 | 623788-00 | WARNING LABEL | 1 |
| 202 | 148608-00 | INSERT | 2 |
| 203 | 386780-00 | BEARING | 2 |
| 204 | N027988 | LOWER GUARD | 1 |
| 205 | N020822 | GUARD PLATE | 1 |
| 206 | 385915-01 | SCREW | 4 |
| 207 | 621037-00 | PIVOT PLATE | 1 |
| 208 | 146768-00 | BUMPER | 1 |
| 209 | N142523 | GUARD LINK | 1 |
| 212 | 146750-01 | RETAINING PLATE | 1 |
| 213 | N034013 | TORSION SPRING | 1 |
| 214 | 148295-00 | SLEEVE,PIVOT | 1 |
| 215 | 625825-00 | ROLLER | 2 |
| 216 | 142273-00 | RING,RETAINING | 2 |
| 217 | 394976-00 | LABEL, CAUTION | 2 |
| 218 | 146760-02 | STUD | 1 |
| 219 | 153666-00 | SCREW,SET | 2 |
| 220 | 656400-00 | WARNING LABEL | 2 |

Parts List for DHS790AB Type 20

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|--------------------------|--------------|
| 221 | N466081 | WARNING LABEL | 1 |
| 228 | 397117-00 | WIPER | 4 |
| 229 | N049684 | COVER PLATE | 2 |
| 230 | N455343 | END CAP | 1 |
| 231 | N443949 | TRUNNION | 1 |
| 232 | 330019-14 | SCREW | 1 |
| 239 | N126162 | DUST BAG | 1 |
| 240 | N142123 | CLAMP ASSEMBLY | 1 |
| 314 | N441566 | STABILIZER BAR | 1 |
| 315 | N058319 | RAIL | 1 |
| 332 | N104494 | RAIL | 1 |
| 333 | N450867 | BRACKET | 1 |
| 533 | N443880 | SWITCH | 1 |
| 534 | N300152 | RUBBER CAP | 1 |
| 800 | 5140061-28 | GREASE | 1 |
| 800 | 93488-00 | GREASE | 1 |
| 856 | DW7084 | CROWN STOPS | 1 |
| 856 | DW7080 | EXTENSION SYSTEM | 1 |
| 856 | DW3126 | 12IN. 60T SER.20 SAW BLD | 1 |
| 857 | DCA120 | POWER PACK | 1 |
| 866 | DCB606 | FLEXVOLT BATTERY | 2 |
| 867 | N475920 | BATTERY CAP | 1 |
| 871 | DCB132 | CHARGER | 1 |