



## Parts List for DW861B-B2 Type 4

Item Number	Part Number	Description	Qty Required
1	187539-00	ARMATURE 220V	1
2	000000-00	No Longer Available	1
3	187538-00	FIELD 220V	1
4	396614-00	SCREW	2
5	561914-01	SCREW	3
6	562228-02	GEAR CASE	1
8	561917-02	O RING	1
9	562252-00	GEAR CASE COVER	1
10	561917-01	O RING	1
11	561914-00	SCREW	3
12	562231-00	INNER FLANGE	1
13	562232-00	OUTER FLANGE	1
14	185335-00	SCREW	1
15	562215-00	BAFFLE	1
16	000000-00	No Longer Available	1
17	562097-03	SCREW	4
18	562221-00	HANDLE COVER	1
19	561913-00	LEAD	2
20	330005-01	PROTECTOR,CORD	1
21	562097-00	SCREW	2
22	000000-00	No Longer Available	1
23	185251-00	SWITCH	1
24	562224-00	SWITCH BOOT	1
25	186952-00	FIELD CASE	1
26	562227-00	BRUSH HOLDER	2
27	562218-00	BRUSH HOUSING	2
28	562217-01	BRUSH	2

## Parts List for DW861B-B2 Type 4

Item Number	Part Number	Description	Qty Required
29	562219-00	BRUSH CAP	2
30	000000-00	No Longer Available	2
31	562222-00	END CAP	1
32	562097-05	SCREW	2
33	185108-00	CORD	1
34	187476-00	THUMB SCREW	1
35	38751-00	RING	1
37	449559-00	WASHER	1
38	561916-00	WASHER	1
39	561934-02	SHOE	1
40	562369-00	SQUARE BOLT	1
41	187532-00	LOCK PIN	1
42	403148-00	WASHER	1
43	562368-00	WING NUT	1
44	185244-00	SPRING WASHER	1
46	562239-00	WET ACCESSORIES	1
47	098000-11	WRENCH	1
48	389848-00	WRENCH	1
49	569723-00	DEFLECTOR	1
50	949721-05	BEARING CUP	1
51	562230-00	ID LABEL	1
52	000000-00	No Longer Available	1
53	185109-14	NAME PLATE	1
54	330003-03	BEARING,BALL	1
55	605040-42	BALL BEARING	1
56	562244-01	PINION	1
60	562249-00	GEAR	1

## Parts List for DW861B-B2 Type 4

Item Number	Part Number	Description	Qty Required
61	330003-47	BEARING,BALL	1
62	562250-00	OUTPUT SHAFT	1