









Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
400	285814-01	BOLT	4
401	285815-94	DRAIN PLUG	2
402	285814-03	BOLT	1
404	285817-94	STUD	2
406	285814-08	WASHER	1
407	285814-10	WASHER	2
408	285814-12	SPECIAL NUT	1
409	285814-13	OIL SEAL	2
410	285814-16	DOWEL PIN	2
411	285814-18	DOWEL PIN	2
412	285816-28	BALL BEARING	2
413	285800-98	SPARK PLUG	1
414	285814-25	GASKET	1
415	285820-73	GASKET	1
416	285814-30	CYLINDER HEAD	1
417	285820-78	COVER	1
418	285814-34	BOLT	1
419	285818-10	CRANKCASE	1
420	285816-15	SWITCH	1
421	285814-40	OIL ALERT UNIT	1
422	285814-42	CASE COVER	1
423	285814-45	GASKET	1
424	285814-48	CAP ASSY.	1
427	285818-11	CRANKSHAFT	1
428	285817-20	WOODRUFF KEY	1
429	285814-58	PIN	1
430	285814-60	CLIP	2

Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
431	285814-63	RING SET	1
432	285814-66	CONNECTING ROD	1
433	285814-69	LIFTER	2
434	285814-71	PUSH ROD	2
435	285814-74	VALVE	1
436	285814-77	VALVE	1
437	285814-80	VALVE SPRING	2
438	285814-83	RETAINER	4
439	285814-85	SEAL	1
440	285814-87	ROTATOR VALVE	1
441	285814-90	CAMSHAFT	1
442	285814-93	PLATE ASSY.	1
443	285814-95	ARM ASSY	2
444	285815-00	SHROUD	1
445	285815-03	GASKET	1
446	285815-07	GASKET	1
447	285815-09	CLIP	2
448	285818-12	CLIP	1
450	285815-15	FAN	1
451	285815-18	STARTER PULLEY	1
452	285818-06	FLYWHEEL	1
453	285815-23	GROMMET	1
455	285815-26	IGNITION COIL	1
457	285815-30	GASKET	1
458	285818-01	GASKET	1
459	285818-02	MANIFOLD	1
460	285814-55	PISTON	1

Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
461	285815-39	SPRING	1
462	285818-03	SPRING	1
463	285818-04	BRACKET	1
464	285815-47	SHAFT	1
465	285815-49	LOCK PIN	1
466	285815-52	GOVERNOR ASSY.	1
470	285817-96	STARTER ASSY.	1
471	285815-62	INSULATOR	1
472	285817-97	CARBURETOR	1
473	285817-98	AIR FILTER	1
474	285818-87	CONTROL ASSY	1
475	285818-08	HOSE	1
476	285815-73	NUT	5
477	285815-74	NUT	7
479	285815-84	BOLT	3
482	285815-86	BOLT	9
483	285815-88	BOLT	3
484	285815-90	BOLT	2
488	000000-00	No Longer Available	1
489	285817-95	STUD	2
491	285818-86	BLOWER HOUSING	1
494	285818-00	MUFFLER	1
495	285816-13	ROD	1
496	285816-24	STUD	3
497	285816-25	CABLE TIE	1
498	285816-68	SPARK ARRESTOR	1
503	285816-36	BOLT	2

Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
505	285814-88	SEAT	2
506	285816-45	RETAINER	2
507	285816-46	GASKET	1
508	285816-40	CONNECTING WIRE	1
509	285815-93	BOLT	7
510	000000-00	No Longer Available	1
511	000000-00	No Longer Available	1
512	285816-53	ID LABEL	1
515	285817-85	LABEL	1
520	285816-55	BOLT	2
523	285816-67	BOLT	2
524	285816-76	RATCHET	2
525	285816-96	SPRING	1
526	285816-78	BOLT	1
527	285816-79	SPRING	2
528	285816-80	PULLEY	1
529	285816-81	SPRING	1
530	285816-82	ROPE	1
531	285816-83	CAP ASSY.	1
535	285816-87	FLOAT	1
536	285816-88	VALVE	1
537	285816-89	BOWL	1
538	285816-90	PIN	1
539	285816-91	O-RING	1
540	285816-92	NOZZLE	1
541	285818-67	BOLT	1
542	285818-68	GASKET	1

Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
543	285818-74	MAIN JET	1
543	285816-95	MAIN JET	1
545	285818-89	LEVER	1
546	285816-93	SCREW	1
547	285816-97	SCREW	1
547	285816-97	SCREW	1
548	285817-08	GASKET	1
552	1349856	PAN HEAD SCREW	1
553	285818-70	SPRING	1
554	285817-99	TUBE	1
556	285818-84	SWITCH	1
559	285818-39	HANDLE	1
560	285817-74	CONNECTING WIRE	1
561	285817-81	BOLT	1
562	285817-80	FUEL FILTER	1
564	285817-83	CAUTION LABEL	1
566	285818-30	AIR FILTER	1
567	N025782	WING NUT	2
567	N025782	WING NUT	2
569	285818-69	SPRING	1
590	285817-76	JOINT	1
591	000000-00	No Longer Available	1
593	000000-00	No Longer Available	1
594	285817-86	LABEL	1
596	285817-84	LABEL	1
598	285818-94	SEAL	1
599	285818-13	BOLT	1

Parts List for DW90LAG-B3 Type 1

Item Number	Part Number	Description	Qty Required
600	285820-72	FUEL CAP	1
846	285817-78	SOCKET WRENCH	1