



ERL4400HD Generator UT-03756 - Generator, Frame, & Tank

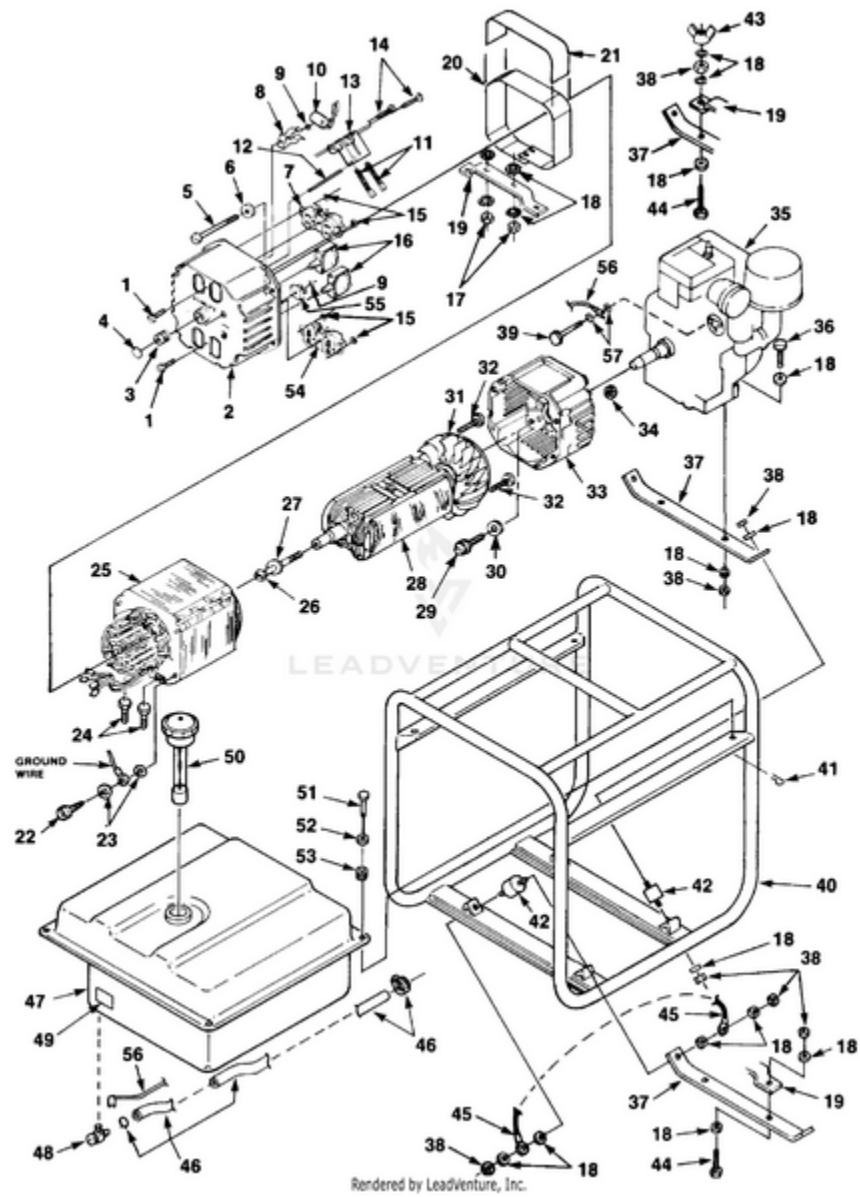

Ref #	Part #	Description	Qty	Context Note
1	80630	SCREW- Mach. Pan Hd.	2	
2	023623	BRUSH HEAD	1	
3	03044	BEARING- Needle	1	
4	02438	PLUG- Expansion	1	
5	4885306	BOLT- Stator	4	
6	84124	WASHER- Flat	4	
7	50991	RECEPTACLE- Duplex (Nema 5-15R)	1	
8	02435	CLIP- Spring	1	
9	02436	WASHER- Shaft retention	2	
10	A02860	CAPACITOR w/ Lead	1	
	A03035	BRUSH & RETAINER KIT	1	
11	02664	BRUSH	2	
12	02857	PIN- Retainer	1	
13	02365	HOLDER- Brush	1	
14	82526	SCREW	2	
15	02437	WASHER- Shaft retention	4	
16	49831	BREAKER- Circuit (20 amp.)	2	
17	81162	NUT- Hex (5/16-18)	14	
18	83081	WASHER- Lock (Int.)	15	
19	028451	BRACKET- Gen. Mtg.	1	
20	028781	WRAPPER- Stator	1	
21	02982	DECAL- Warning	1	
22	82538	SCREW	1	
23	83121	WASHER- Lock (Int./ Ext.)	2	
24	80083	SCREW (5/16 x 3/4")	2	
25	A02796S	STATOR & CORE	1	
26	4885210	BOLT- Rotor	1	
27	03433	WASHER- Lock (5/16")	1	
28	A02799AS	ROTOR	1	
29	80187	SCREW- Cap hex hd.	4	

Ref #	Part #	Description	Qty	Context Note
30	83078	WASHER- Lock (Int./Ext.)	4	
31	A04013	FAN ASSEMBLY	1	
32	82526	SCREW- Pan hd.	4	
33	020266	END BELL	1	
34	81267	NUT- Hex	4	
35		ENGINE	1	For engine replacement parts locate the engine brand name model number, and type number and consult the appropriate dealer in your area.
36	80197	SCREW- Cap hex hd.	2	
37	49265	SUPPORT- Engine	2	
38	81162	NUT- Hex	14	
39	80049	SCREW	1	
40	A033211	ROLL CAGE	1	
41	49412	PIN- Cotter	4	
42	49367	ISOLATOR- Vibration	4	
43	81015	NUT- Wing	1	
44	80088	SCREW- Mach. hex hd.	2	
45	A49399	GROUND STRAP	1	
46	A49306	FUEL LINE ASSEMBLY	1	
47	489311	FUEL TANK	1	
48	49005	VALVE- Fuel	1	
49	49340	DECAL- Fuel valve	1	
50	49179	CAP- Fuel	1	
51	49329	PIN- Clevis	4	
52	84006	WASHER- Flat	4	
53	49351	GROMMET- Isolator	4	
54	02863	RECEPTACLE- 240 V (Nema 6-20R)	1	
55	95672	RECTIFIER	1	
56	A03322	GROUND STRAP	1	
57	83070	WASHER- Lock	2	

ERL4400HD Generator UT-03756 - Wiring Diagram

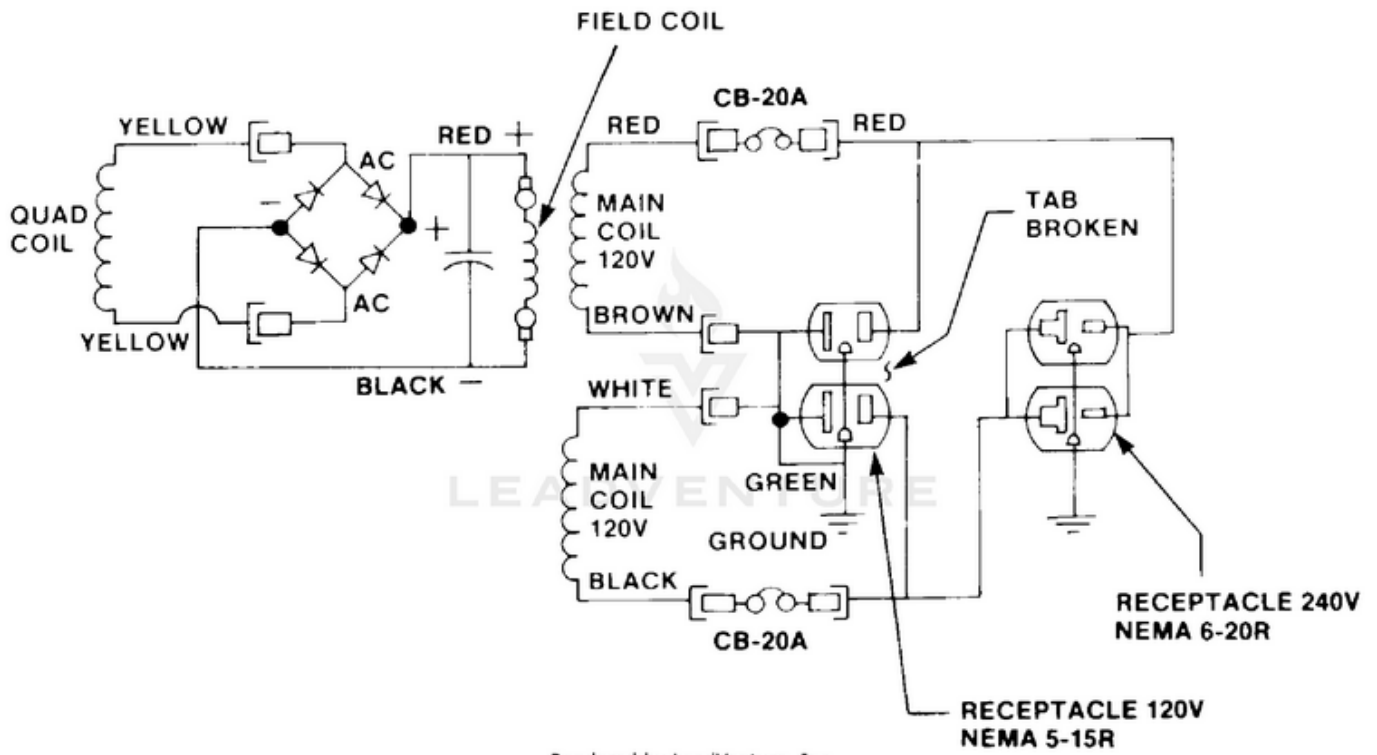

Rendered by LeadVenture, Inc.